
DIGITAL VIDEO CAMCORDER

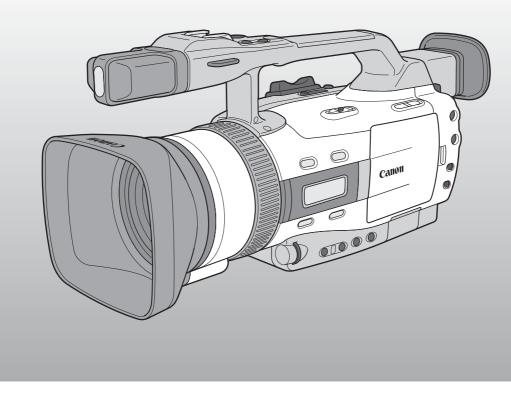





Е

Important Usage Instructions

WARNING:

	ĥ
,	
- /	4
/	7

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING:



E

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK AND TO REDUCE ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

DISCONNECT THE MAINS PLUG FROM THE SUPPLY SOCKET WHEN NOT IN USE.

For Users in the UK

When replacing the fuse only a correctly rated approved type should be used and be sure to re-fit the fuse cover.

CAUTION:

CUSTOMERS IN THE U.K. SHOULD READ THIS BEFORE USING THIS PRODUCT.

CHANGING THE FUSE

THE MAINS LEAD ON THIS PRODUCT IS FITTED WITH A NON-REWIREABLE (MOULDED) PLUG, INCORPORATING A 3 AMP FUSE. SHOULD THE FUSE NEED TO BE REPLACED AN ASTA OR BSI APPROVED BS1362 FUSE OF THE SAME RATING MUST BE USED.

ALWAYS REFIT THE FUSE COVER AFTER REPLACING THE FUSE. NEVER USE THE PLUG WITH THE FUSE COVER OMITTED.

CHANGING THE PLUG

IF THE FITTED PLUG IS NOT SUITABLE FOR YOUR SOCKET OUTLETS, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED IN ITS PLACE. IF POSSIBLE FIT AN APPROPRIATE 3 AMP FUSE. IF THE NEW PLUG HAS NO FUSE, THEN FIT A 5 AMP FUSE AT THE DISTRIBUTION BOARD.

AC POWER CORD CONNECTION

The wires in the mains lead of this apparatus are coloured in accordance with the following cord. (IMPORTANT)

BLUENEUTRAL Mains Lead BROWN.....LIVE

As the colours of the wires in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. Neither Blue wire or Brown wire is to be connected to the Earth pin of a 3 pin plug.


THE SEVERED PLUG MUST BE DESTROYED IMMEDIATELY TO AVOID ANY POSSIBLE ELECTRIC SHOCK HAZARD.


CA-920 identification plate is located on the bottom.

 Use of CV-150F/CV-250F DV cable is necessary to comply with the technical requirement of EMC Directive.

Operating Steps and Reference Guide

Your camcorder is supplied with two manuals: the "Digital Video Camcorder XM2 Instruction Manual" and the "Digital Video Solution Disk Instruction Manual".

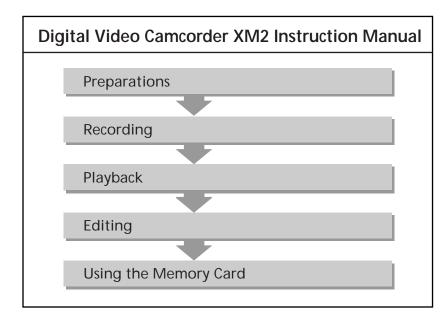

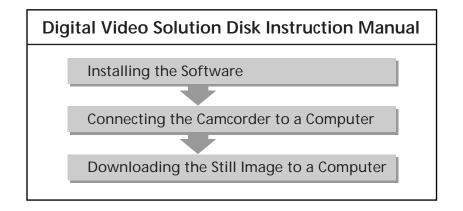

Ε

Contents

Е

Introduction

Introduction

Important Usage Instructions	2
Operating Steps and Reference Guide	3
Thank You For Choosing a Canon	6
Introducing the XM2	7

Preparations

Finding Your Way Around the XM2	. 8
Preparing the Camcorder	12
Powering the Camcorder	14
Loading a Cassette	16
Using the Menus	18
Using the Wireless Controller/Tally Lamp	27
Setting the Date and Time	30

Recording

Basic Recording	33
Tips for Making Better Videos	38
Zooming	40
Using the LCD Screen	41
Turning the Optical Image Stabilizer Off	44
Using the ND Filter	45
Recording Still Images onto a Tape	46
Selecting the Movie Mode (Normal/Frame)	48
Searching and Reviewing While Recording	49
Using the Various Recording Programs	50
Audio Recording	54
Using the Custom Key	56
Using Digital Effects	
Using the Colour Bars	65
Using a Canon Speedlite for Flash	
Photography (Optional)	66
Recording with the Interval Timer	67
Recording with the Self-Timer	69
Using the DV Control	70
Using the VL-3 Video Light (Optional)	71
Using the DM-50 Microphone (Optional)	72
Using the MA-300 Microphone Adapter	
(Optional)	73

Manual Adjustments

Adjusting the Exposure Manually	74
Adjusting the Focus Manually	77
Setting the White Balance	78
Using the AE Shift	80
Using the Custom Preset	81
Using the Zebra Pattern	83
Recording PC Screens and Other Screens	
Using CLEAR SCAN	84
Recording the Display Information	.84

Playback

Playing Back a Tape	85
Displaying Date, Time and Camcorder	
Data (Data Code)	88
Searching the Tape (Photo Search/Date	
Search/Index Search)	91
Returning to a Pre-Marked Position	
(Zero Set Memory)	92
Connections for Playback on a TV Screen	93

Editing

Editing to a VCR
Dubbing to/from a Tape with Digital
Video Equipment97
Recording from a VCR, TV or Analog
Camcorder (Analog Line-in)
Digitally Outputting Analog Video and
Audio Signals (Analog-Digital Converter) 101
Recording Over Existing Scenes
(AV Insert Editing) 103
Audio Dubbing 106
Setting the Audio Mix 109
Connecting to a PC Using a DV Cable 111

Using a Memory Card

Memory Card Introduction	112
Recording Still Images	
onto a Memory Card	116
Playing Back a Memory Card	118


Settings of the Still Images Recorded	
on a Memory Card 1	120
Preventing Accidental Erasure (Protect) 1	122
Marking a Still Image for Printing	
(Print Mark) 1	123
Erasing Still Images 1	125
Combining Images and Recording Them	
onto a Tape (Title Mix) 1	127
Copying Still Images from Memory Card	
to Tape 1	130
Formatting a Memory Card 1	131
Connecting to a PC Using a USB Cable 1	132
Other Information and Precautions 1	133

Attaching the Ferrite Cores

The Stereo Video cable STV-250N and the S-video cable S-150 with the ferrite core provided with the digital Video Camcorder must be used with this equipment in order to comply with the technical requirement of EMC Directive. Attach the enclosed ferrite cores before you connect the STV-250N Stereo Video Cable and S-150 S-video Cable.

Attach the ferrite core to the cable about 6 cm from the plug end (the plug to be connected to the camcorder) of the STV-250N Stereo Video Cable and S-150 S-video Cable.


- Pass the cable through the centre of the core and wrap it around the core once, then close the unit until it clicks shut.
- There are two kinds of ferrite cores; the small one for the S-150 S-video Cable and the large one for the STV-250N Stereo Video Cable.




4
7
1
5
6
8
1
3
5
7



E

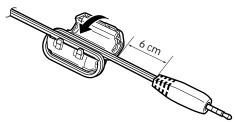

STV-250N Stereo Video Cable

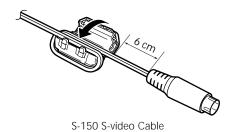

Thank You For Choosing a Canon

First, we'd like to thank you for purchasing this Canon camcorder. Its advanced technology makes it very easy to use — you will soon be making high-quality videos which will give you pleasure for years to come.

Introduction

E


To get the most out of your new camcorder, we recommend that you read this manual thoroughly — there are many sophisticated features which will add to your recording enjoyment.

Symbols Used in This Manual

- : Reference page numbers
- Functions that can be operated from the body of the camcorder
- Functions that can be operated from the wireless controller
- Supplementary notes for camcorder operation
- ightarrow: Operation confirmation beeps (\square 37)

Capital letters are used to refer to settings displayed in the menus and buttons labelled on the camcorder itself (e.g. Press the MENU button).

• When connecting the camcorder to a PC, use the optional CV-150F or CV-250F DV cable. When the PC is equipped with a USB terminal, use the supplied IFC-300PCU USB cable. Your camcorder is supplied with the following accessories:

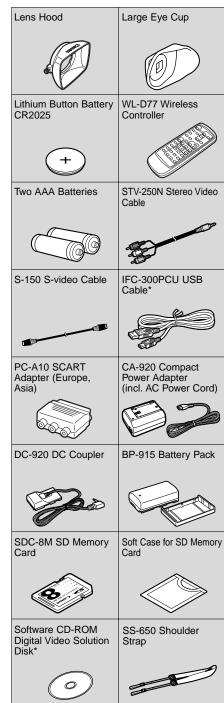

* Required for transferring still images from a memory card to your computer. Please refer to the Software Instruction Manual for further details.

Introducing the XM2

3CCD System with Pixel Shift Technology

The Canon XM2 has three CCDs, delivering outstanding picture quality, highly accurate colour reproduction and a wide dynamic range with virtually no colour noise. On top of that, Canon uses a broadcast technology called Pixel Shift to produce greater picture quality than that of camcorders using CCDs with almost twice the number of pixels.

L-Series Fluorite 20x Optical Zoom Lens


The XM2 incorporates a 20x Professional L-Series Fluorite optical zoom lens. Fluorite provides outstanding resolution, contrast and colour reproduction and delivers the ultimate in clarity and image quality.

Memory Card

You can record still images onto a SD Memory Card or MultiMediaCard. The memory card enables easy transfer of still images to a PC. Use the supplied software to edit or attach still images to your e-mail.

Image Stabilizer

Canon's optical technology stabilizes your recordings even in long telephoto shots.



USB Terminal

Allows high-speed transfer of memory card data to a PC with a built-in USB port. You can organize and edit still images on your PC using the supplied software.

IEEE 1394 DV Terminal



The DV terminal allows highquality transfer with virtually no deterioration in quality of images. You can edit and process images by connecting the camcorder to a PC with the IFFE 1394 terminal.

Analog Line-in Recording

Connect a VCR or analog camcorder and record onto a DV cassette in the XM2.

Audio Dubbing/AV insert

Digital Effects

Show your creativity by using the special effects and digital faders. These digital effects and faders can add visual appeal and greater imaging variety.

Recording Programs

The XM2 has 7 recording programs: Easy Recording, Auto, Tv, Av, Manual, Sand & Snow and Spotlight.

Custom Keys

You can assign various functions to the custom key, independent for each operating mode.


Custom Preset

You can adjust colour gain, colour phase, sharpness and setup level and save the combination to the custom preset button.

Interval Recording


Interval recording allows for the capture of time elapsed motion videography. The XM2 can be programmed to record at various intervals for varying amounts of time.


Finding Your Way Around the XM2

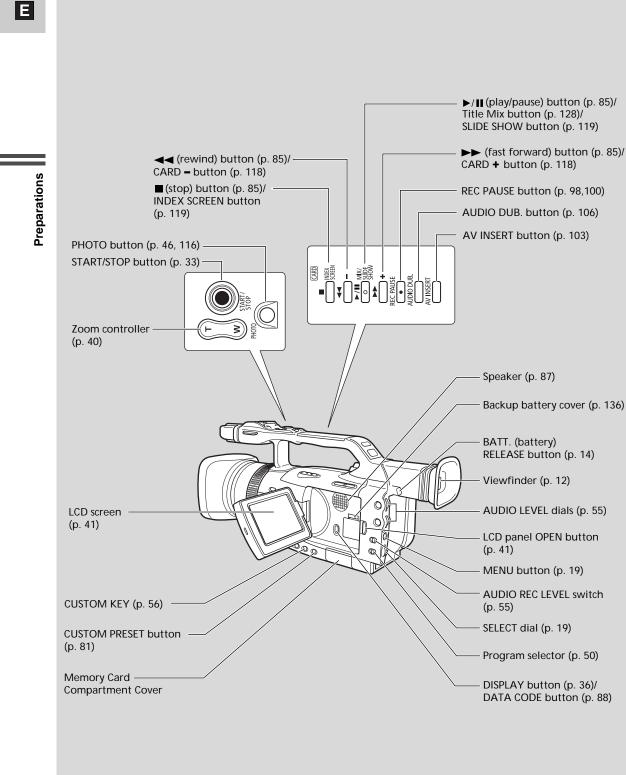

Downloaded From CamcorderManual.com Canon Manuals


Preparations

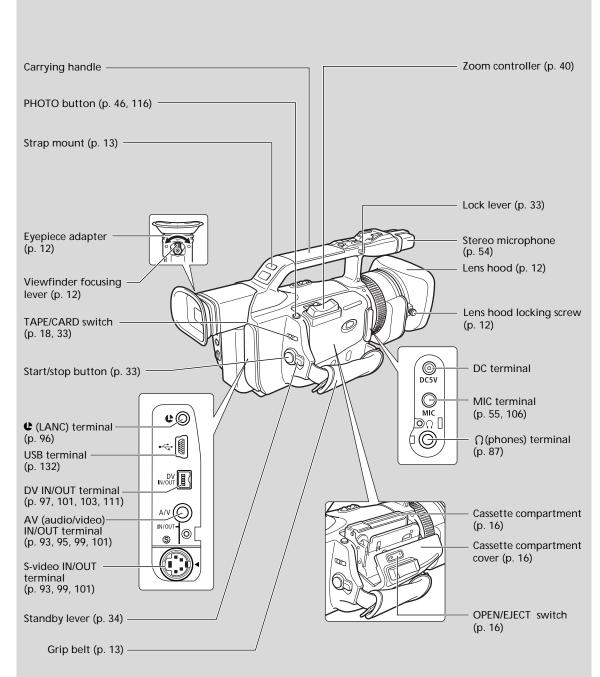

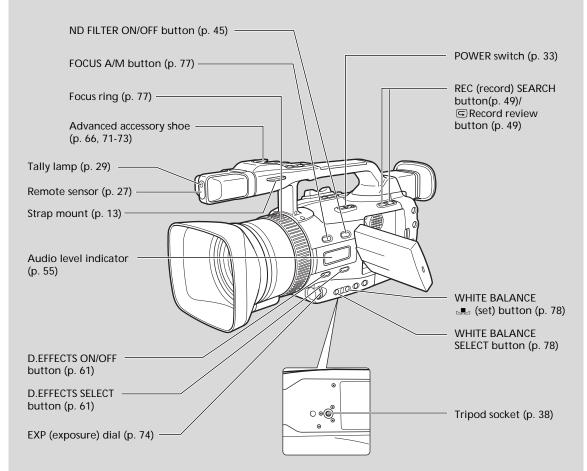

Preparations


E

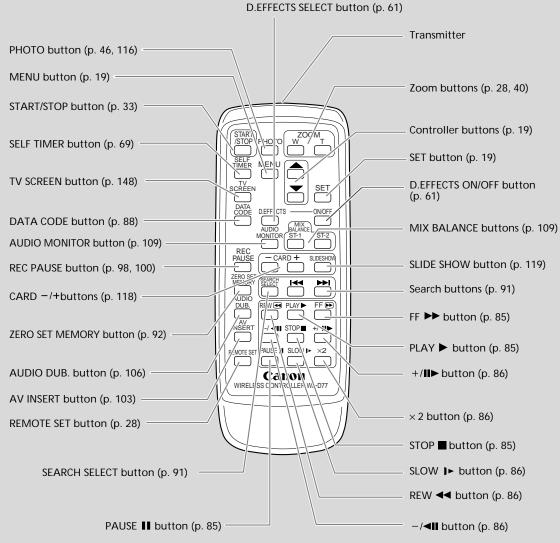

D.EFFECTS SELECT button (p. 61)

Preparing the Camcorder

Attaching the Lens Hood

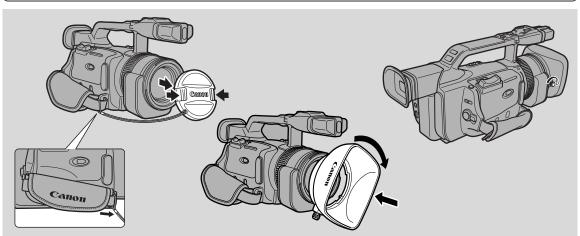


1. Remove the lens cap.

- When you purchase the XM2, the lens cap cord is attached to the middle of the Velcro grip belt. Open the Velcro and slide the lens cap cord to the position as shown in the illustration.
- 2. Align the hood to the lens with the Canon logo facing to the left.
- 3. Twist it into position (clockwise), so that the Canon logo is to the top.
 You do not need to assert any pressure screw the hood lightly into place.
- 4. Finally, tighten the locking screw.
 - To remove, reverse the above procedure.

Since the lens hood cuts stray light that may cause flare and ghost images and protects the lens, be sure to attach the hood when you are recording.

Adjusting the Viewfinder

- In record pause mode, adjust the viewfinder focusing lever to suit your eyesight.
- The viewfinder extends straight out and rotates upwards for comfortable viewing. Store the camcorder with the viewfinder flush with the body of the camcorder.
- To view with the viewfinder, make sure the LCD panel is either turned so that the subject can monitor the screen, or totally closed with the screen facing inwards.
- Be careful not to leave the viewfinder exposed to bright sunlight as it may melt. (The light is concentrated by the viewfinder lens.)

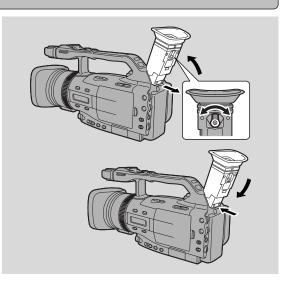


Adjusting the Grip Belt

• Adjust the length of the grip belt strap so that you can operate the start/stop button and zoom control effectively.



Attaching the Shoulder Strap


- For extra security and portability, attach the shoulder strap before using the camcorder.
- Pass the ends through the strap mount and adjust the length as shown.
- Be careful not to leave the viewfinder exposed to bright sunlight as it may melt. (The light is concentrated by the viewfinder lens.)

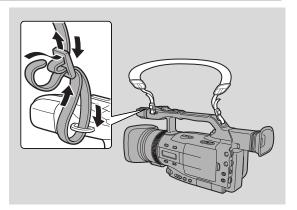

Attaching the Large Eye Cup

Use the supplied Large Eye Cup when recording in very bright surroundings or when wearing glasses.

- 1. Detach the eye cup from the camcorder.
- 2. Replace the eye cup with the Large Eye Cup.
 - You can attach it to the right or the left.

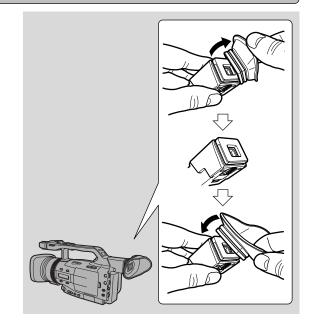

Powering the Camcorder

Before operating your camcorder, you will need to use the power adapter to:

provide power from a household power socket

charge a battery pack


Notes:

or

- The power adapter converts current from a household power socket (100–240 V AC, 50/60 Hz) to the DC current used by your camcorder.
- If the adapter is used next to a TV, it may cause the TV to emit noise move the adapter away from the TV or the aerial cable.

E

Using a Household Power Source

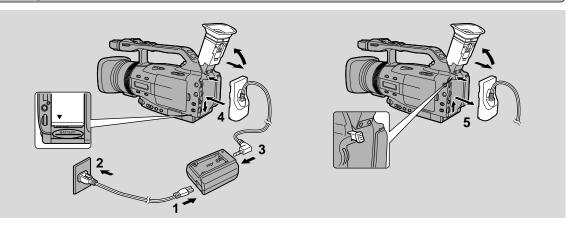


Use the power adapter and the DC coupler to provide your camcorder with instant power from an household power socket.

- 1. Connect the power cord to the power adapter.
- 2. Plug the adapter into a household power socket.
- 3. Connect the DC coupler to the power adapter.

4. Attach the DC coupler to the camcorder.

- Extend the viewfinder and rotate it upwards.
- Align the edge of the DC coupler with the line on the camcorder.
- Slide the coupler down in the direction of the arrow until it clicks into place.
- 5 After use, turn the camcorder off, detach the DC coupler and disconnect the DC coupler from the power adapter. Unplug the power cord and disconnect it from the power adapter.
 - Press and hold the BATT. RELEASE button, while you slide the coupler up.
 - Always turn the camcorder off and raise the viewfinder before removing the power source.

Charging and Attaching the Battery Pack

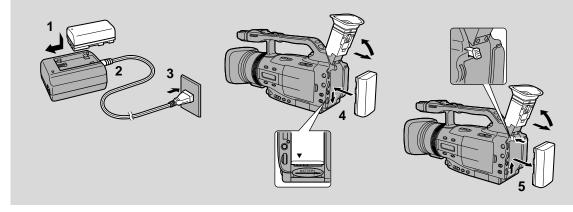

Your battery pack was partially charged before it left the factory. It should have enough power for you to check that your camcorder is working properly. However, you must charge the battery pack fully if you want it to power the camcorder for more than a few minutes.

1. Attach the battery pack to the power adapter.

- Make sure the DC coupler is not connected.
- Align the triangle on the battery pack with the line on the power adapter.
- Slide the battery across until it clicks into place.

2. Connect the power cord to the power adapter.

- 3. Plug the power adapter into a household power socket.
 - The charge indicator flashes red to show that charging is in progress. Single flashes mean that the battery pack is less than 50% charged. Double flashes mean that it is between 50% and 75% charged. Triple flashes mean that it is more than 75% charged.
 - The indicator glows steadily when the battery pack is fully charged.

4. Take the battery pack off the adapter and attach it to the camcorder.

- Extend the viewfinder and rotate it upwards.
- Align the triangle on the battery pack with the line on the camcorder, then slide the battery in the direction of the arrow until it clicks into place.

5. Remove the battery pack after use.

- Press and hold the BATT. RELEASE button, while you slide the battery up.
- Always turn the camcorder off and raise the viewfinder before removing the power source.


Notes:

- You can find detailed notes for using the batteries in "Notes on Using the Batteries" (1134). These notes include charging and recording times and how to charge the backup battery.
- Using the optional CH-910 Dual Battery Charger/Holder you can power the camcorder from two battery packs for longer continuous recording. You can exchange the battery packs independently without cutting the power to the camcorder. In addition, the CH-910 can charge two batteries consecutively when it is connected to a household power socket.

Loading a Cassette

Ε

Use only videocassettes marked with the DV logo.*

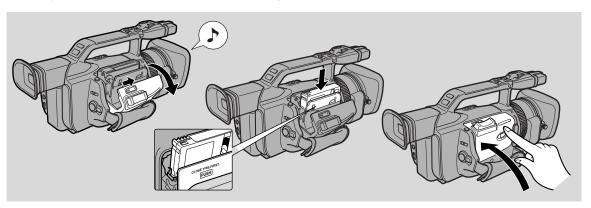

Preparations

* Mini **N** logo is a trademark.

Loading and Unloading

- 1. Attach a power source.
- 2. Slide the OPEN/EJECT button and release the cassette compartment cover.
 - Wait for the cassette compartment to open automatically.
 - The confirmation beep sounds when it is fully opened.


3. Load or unload the cassette.

- Insert the cassette gently with the window facing outward.
- Remove the cassette by pulling it straight out.
- 4. Press the **PUSH** mark on the compartment until it clicks.
- 5. Click the cover back into place.

Notes:

- Do not interfere with the cassette compartment while it is opening or closing, or attempt to close the cover.
- Be careful not to get your fingers caught in the cassette compartment cover.
- Do not leave the cassette in the camcorder after use return it to its case and store it in a cool, clean, dry place.
- When no cassette is loaded, is flashes in the display.
- With some types of tapes, the remaining tape display may not give an accurate reading.

Protecting Tapes from Accidental Erasure

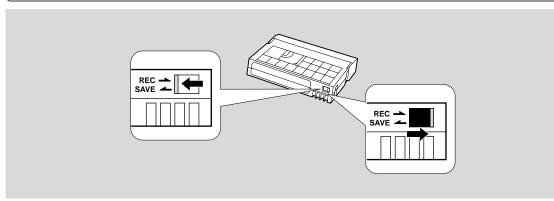

To protect your recording from accidental erasure, slide the tab on the cassette so that it exposes the hole. (This switch position is usually labelled SAVE or ERASE OFF.)

If you load this cassette and put the camcorder in record pause mode (\square 33), "THE TAPE IS SET FOR ERASURE PREVENTION" is displayed for approx. 4 seconds and then the \bowtie mark flashes in the display. The camcorder also shows the above phrase if you accidentally press the \bullet (record) button with the camcorder switched to TAPE PLAY (VCR) mode.

If you wish to record on the cassette again, slide the tab back so that the hole is closed.

Cassette Handling Precautions

- To protect the tape heads, transfer cassettes directly from the tape case to the camcorder do not open the tape protect cover or touch the tape itself.
- Do not use cassettes where the tape has been damaged or spliced they may damage the camcorder.
- Do not insert anything into the small holes on the cassette or cover them with cellophane tape.
- Handle cassettes with care dropping them or exposing them to external shocks may cause internal damage.
- Store cassettes in the provided case, rewinding them to the start of the tape first, and then storing them upright.
- A cassette with metal plated terminals may become dirty with use, affecting information transfer. Therefore, after using a tape around ten times, be sure to clean the terminals with a cotton swab.


Cassette Memory Function

The cassette memory function cannot be used with this camcorder.

Using the Menus

Many of the camcorder's advanced functions are selected from menus which appear in the display.


ið

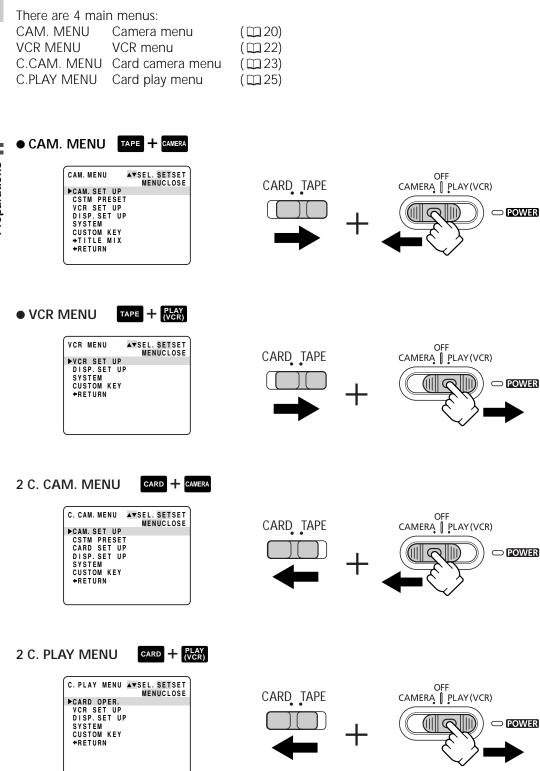

Preparations

Ε

Selecting From the Menus

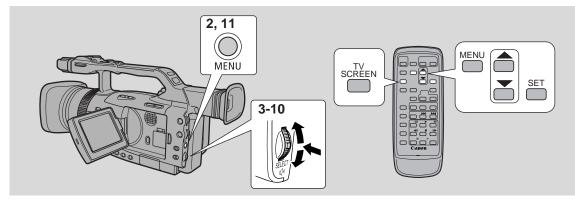

1. Slide the POWER switch and the TAPE/CARD switch to the desired settings.

2. Press the MENU button to open the menu.

• One of the main menus appears depending on the settings of the POWER switch and TAPE/CARD switch.

3. Pull the SELECT dial up and down to move the arrow to the desired submenu.

- 4. Press the SELECT dial in .
 - The submenu appears.
- 5. Pull the SELECT dial up and down to move the arrow to the desired function.

6. Press the SELECT dial in.

- The function and its settings appear.
- 7. Pull the SELECT dial up and down to move the arrow to the desired setting.
- 8. Press the SELECT dial in.
- 9. Pull the SELECT dial down and move the arrow to

10.Press the SELECT dial in.

• You return to the main menu.

11.Press the MENU button.

• The main menu disappears.

Notes:

- Pressing the MENU button at any time closes the menu.
- Selecting • RETURN takes you back one menu, or closes the main menu.
- Items that are unavailable, due to the tape or card situation or the settings of other menu items, appear in purple.
- You may often find it convenient to use the wireless controller to move around the menus. Press its MENU button to open/close the menu and use the arrow keys in place of pulling the SELECT dial. Push the SET button to select.
- Pressing the start/stop button or the PHOTO button will close the menu and start recording.
- You can display the menus on a connected TV screen by turning TV SCREEN (1148) on through the menu or using the wireless controller's TV SCREEN button. See p. 93 for TV connecting instructions.

Preparations

List of Menus

Turn to the appropriate page for a detailed explanation of each function.


• CAM. MENU

Set the POWER switch to CAMERA and the TAPE/CARD switch to TAPE . There are 7 submenus within the CAM. MENU.

- Camera Set Up Submenu
- 2 Custom Preset Submenu
- **3** VCR Set Up Submenu
- Display Set Up Submenu
- 5 System Submenu
- 6 Custom Key Submenu
- Title Mix Submenu
- 8 Close Main Menu

Camera set up Submenu

	Digital Zoom	
2	Movie Mode	L 48
	Image Stabilizer	
4	AE Shift	□ 80
(5)	16:9 Effect	□ 35
6	Zebra Pattern	₩83
7	Zebra Pattern Level	₩83
8	Grip Zoom Speed	11 40
9	Handle Zoom Speed	4 0
10	Clear Scan	W 84
1	Self-Timer	069
12	Interval Timer	□ 67
13	Return	

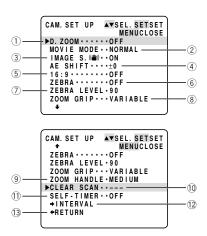

CAM. MENU

►CAM. SET UP CSTM PRESET -VCR SET UP DISP.SET UP

SYSTEM CUSTOM KEY

→TITLE MIX +RETURN —

A

6


6

0

▲▼SEL. SETSET MENUCLOSE

2 Custom Preset Submenu

(14)	Colour Gain	🖽 81
(15)	Colour Phase	🖽 81
16	Sharpness	🖽 81
17	Setup Level	🖽 82
18	Return	



F

2

4

6

8


20 Downloaded From CamcorderManual.com Canon Manuals


3 VCR Set Up Submenu

19 Recording Mode	🎞 35
20 Microphone	
2 Microphone Attenuator	🖾 55, 106
22 Audio Mode	
23 Power Save	
24 Return	

4 Display Set Up Submenu

25	LCD Brightness	🖽 42
26	Viewfinder Brightness	🖽 42
27)	LCD Mirror Mode	🖽 42
28	16:9 Guides	🖽 36
29	TV Screen	. 🖽 148
30	Audio Level Indicator	🕮 55
31)	Guide Information	🖽 32
32	Card Access Display	. 🕮 114
33	Demonstration Mode	🖽 37
34)	Return	



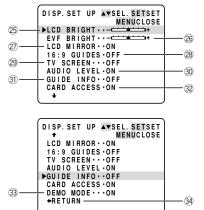



5 System Submenu

35 Wireless Controller	🖽 28
36 Tally Lamp	🖽 29
37 Beep	🖽 37
38 Character Recording	🖽 84
39 DV Control	🖽 70
40 Time Zone/Daylight Saving Time	🖽 30
(4) Setting Date/Time	🖽 32
42 Return	

6 Custom Key Submenu

43	Custom	Key	□ 56
(44)	Return		






Ε

Title Mix Submenu

(45)	Selecting a Title	128
(46)	Creating a Title	127
(47)	Return	




VCR MENU

Set the POWER switch to **PLAY** and the TAPE/CARD switch to **TAPE**. There are 4 submenus within the VCR MENU.


• VCR Set Up Submenu

- 2 Display Set Up Submenu
- 3 System Submenu
- 4 Custom Key Submenu
- 5 Close Main Menu




VCR Set Up Submenu

① Recording Mode	
2 Output Channel	🖽 110
③ Audio Dubbing	🖽 106
④ Microphone	
(5) Microphone Attenuator	🖽 55, 106
6 Audio Attenuator	🖽 106
⑦ Audio Mode	
(8) Analog-Digital Converter	🖽 102
(9) Return	



Display Set Up Submenu

10 LCD Brightness	
1 Viewfinder Brightness	
12 Displays	
13 6-Second Auto Date	
1 Data Code	
15 Selecting Date/Time	
16 Custom Key Display	
1 Audio Level Indicator	🖽 55




Е

Preparations


System Submenu

18 Wireless Controller 28
(19) Tally Lamp
20 Beep
2) Time Zone/Daylight Saving Time
22 Setting Date and Time
23 Return



4 Custom Key Submenu

24)	Custom	Key	III 56
25	Return		




• C. CAM. MENU


Set the POWER switch to CAMERA and the TAPE/CARD switch to CARD There are 6 submenus within the C. CAM. MENU.

Camera Set Up Submenu

- 2 Custom Preset Submenu
- 3 Card Set Up Submenu
- Display Set Up Submenu
- System Submenu
- 6 Custom Key Submenu
- Close Main Menu




Camera set up Submenu



Custom Preset Submenu

(9) Colour Gain	🖾 81
10 Colour Phase	🖾 81
1 Sharpness	🖽 81
12 Setup Level	🖾 82
13 Return	



CARD SET UP ▲▼SEL.SETSET MENUCLOSE →QUALITY·····FINE IMAGES RES. +1488×1128 - FILE NOS. ···CONTINUOUS SHTR SOUND··ON - +RETURN

-15

-17

(14)

(16)

(18)

Card Set Up Submenu

14)	Image Quality	113
(15)	Image Resolution	114
16	File Numbers	115
17	Shutter Sound	1 15
(18)	Return	


Display Set Up Submenu

(19)	LCD Brightness	🖽 42
20	Viewfinder Brightness	🖽 42
	LCD Mirror Mode	
22	TV Screen	🖽 148
23	Guide Information	🖽 32
24)	Card Access Display	🖽 114
25	Demonstration Mode	🖽 37
26	Return	

DISP.SET UP AVSEL.SETSET 19 LCD BRIGHT ··· 20 LCD MIRGN ··ON 23 GUIDE INFO ··ON 23 GUIDE INFO ··ON 25 DEMO MODE ···ON 26 VSCREN ···ON 27 DEMO MODE ···ON 28 ODENO MODE ···ON 29 DEMO MODE ···ON

System Submenu

2 Wireless Controller	D 28
28 Beep L	D 37
29 Time Zone/Daylight Saving Time	D 30
30 Setting Date/Time	D 32
(31) Return	



Е

Custom Key Submenu

32	Custom	Key	. 🕮 56
33	Return		

C. PLAY MENU

Set the POWER switch to **CARD** and the TAPE/CARD switch to **CARD** There are 5 submenus within the C. PLAY MENU.

Card Operation Submenu


- VCR Set Up Submenu
- 3 Display Set Up Submenu
- 4 System Submenu
- **5** Custom Key Submenu
- 6 Close Main Menu

1 Card Operation Submenu (Single Image Display)

- Return

1-2 Card Operation Submenu (Index Screen Display)





CUSTOM KEY


+RETURN

32


►+CUSTOM KEY • ZEBRA

▲▼SEL. SETSET MENUCLOSE

33




2 VCR Set Up Submenu




3 Display Set Up Submenu

12	LCD Brightness	🖽 42
(13)	Viewfinder Brightness	🖽 42
(14)	Displays	. 🖽 148
(15)	Selecting Date/Time	🖽 88
(16)	Custom Key Display	🖽 56
17	Card Access Display	. 🖽 114
(18)	Return	




4 System Submenu

19 Wireless Controller	28
20 Tally Lamp	2 9
21) Beep	37
22 Time Zone/Daylight Saving Time	00 📖
23 Setting Date and Time	CC 32
24 Return	



6 Custom Key Submenu

25	Custom Key	CC 56
26	Return	



Ε

Preparations

Using the Wireless Controller/Tally Lamp

The supplied wireless controller can operate the camcorder from a distance of up to 5 m (16 feet). Point it at the camcorder's remote sensor while you press the buttons.


The tally lamp lights up to let you know that the camcorder is in range and responding to your commands.

There are four functions which can only be operated using the wireless controller:

- Special playback (🖽 86)
- Photo/date/index search (191)
- Zero set memory (192)
- Audio mix (109)

Inserting Batteries

Insert two AA batteries, following the + and – markings. Be careful not to reverse the polarity of the batteries.

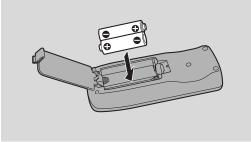

5m (16ft)

Notes:

- When using the wireless controller in brightly lit places or outdoors, the effective range will be less.
- The camcorder may have difficulty picking up the remote control signals at extremely close range.
- Do not leave the controller exposed to direct sunlight, or in hot or humid places.
- When the batteries run out, replace them both together.
- Make sure the shoulder strap does not obstruct the remote sensor.

MENU

(📺 18)

E


When Operating 2 Canon DV Camcorders (Remote Sensor Mode)

To prevent interference from other Canon wireless controllers being used nearby, there are 2 remote sensor modes and an off setting. The wireless controller and the camcorder have to be set to the same mode in order to be compatible.

The wireless controller and the camcorder have been preset to mode 1. If you change the mode on the camcorder, be sure to change the mode on the wireless controller to the same mode.

the camcorder, be sure to change the mode on the wireless controller to the same mode. TAPE + CAMERA TAPE + PLAY (VCR) CARD + CAMERA CARD + PLAY (VCR)

WL.REMOTE···▶(⊞1



▶ SYSTEM

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to OFF ((\mathfrak{T}) and close the menu.

• (() appears in the display.

To change the mode... ...on the camcorder:

Open the menu and select SYSTEM. Then select WL.REMOTE, set it to (()) 1 or ()) 2 and close the menu.

• The selected mode will appear on the display for 4 seconds.

...on the wireless controller:

Press and hold the REMOTE SET button on the wireless controller.

Simultaneously press the ZOOM W button for mode 1 or the ZOOM T button for mode 2. Continue to press simultaneously for over 2 seconds.


• Be sure to set the wireless controller to the same mode as the camcorder.

If your wireless controller is not working:

Make sure the camcorder and the wireless controller are both set to the same mode. Check the mode the camcorder is set to by pushing any button other than the REMOTE SET button on the wireless controller. The camcorder's mode appears in purple for about 4 seconds. Set the wireless controller's mode accordingly by pressing the aforementioned button combinations. If the wireless controller still does not work, change the batteries.

Notes:

- The mode of the camcorder also appears for 4 seconds when you turn the power on.
- When you replace the batteries, the wireless controller returns to mode 1. Change the mode again if necessary.

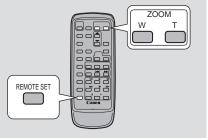

: Mode 1


: Mode 2

OFF ((): Sensor off

(((:::) 1

(((:::) 2


ode) 🔤

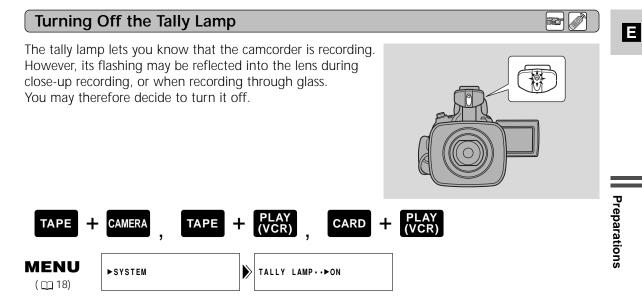

- 1. Open the menu and select TALLY LAMP.
- 2. Select the OFF setting and close the menu.
 - The tally lamp no longer flashes during recording, but it will still light up when the camcorder receives a signal from the wireless controller.

Setting the Date and Time


Preparations

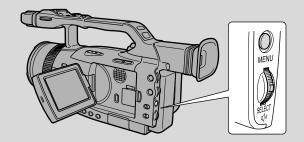

The date and/ time display forms part of the data code. You can choose to display or hide it during playback ($\square 88$).


Set the date and time display when you first start using your camcorder. Install the backup battery before you begin (\square 136).

• Before you start setting the date and time, select your home time zone from the menu.

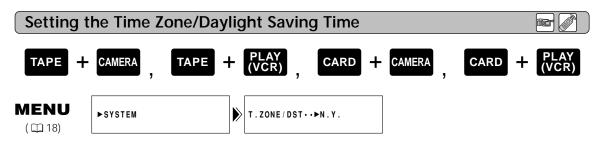

- 1. Press the MENU button.
 - The main menu appears.
- 2. Pull the SELECT dial up or down, select SYSTEM and press the SELECT dial in.
 The SYSTEM submenu appears.
- 3. Pull the SELECT dial up or down, select T.ZONE/DST and press the SELECT dial in.
 - The time zone settings appear.
 - Your camcorder's time zone is factory-preset to Paris. If you are at another time zone, select your time zone first and daylight saving time (DST) setting if necessary.
- 4. Move up or down the list of time zones by pulling the SELECT dial up or down. Press the SELECT dial in to set the time zone that represents your time zone.
 - If you are in daylight saving time, select the time zone with the daylight saving time mark * next to the area.
- 5. Press the MENU button.

ter 🧷

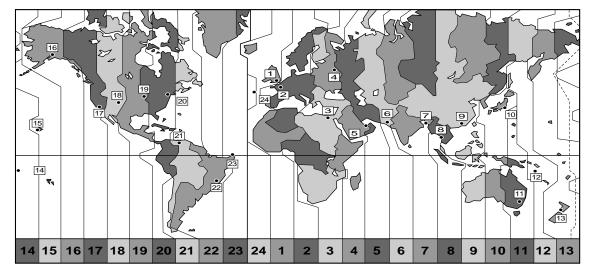

No.	Time zone	No.	Time zone
1	LONDON	13	WELLGTN (Wellington)
2	PARIS	14	SAMOA
3	CAIRO	15	HONOLU. (Honolulu)
4	MOSCOW	16	ANCHOR. (Anchorage)
5	DUBAI	17	L.A. (Los Angeles)
6	KARACHI	18	DENVER
7	DACCA	19	CHICAGO
8	BANGKOK	20	N.Y. (New York)
9	H. KONG (Hong Kong)	21	CARACAS
10	ТОКҮО	22	RIO (Rio de Janeiro)
11	SYDNEY	23	FERNAN. (Fernando de Noronha)
12	SOLOMON	24	AZORES

Notes:

- After you have selected your time zone and set the date and time, when you travel to another time zone, there is no need to reset the date and time. Just set the time zone to your destination and the camcorder's clock will automatically change to display the correct time for your destination.
- The camcorder automatically accounts for the number of days in a month and leap year.

Setting the Clock

After you set the date and time, the date/time and home time zone will be displayed for about 4 seconds each time you turn the power on (in TAPE CAMERA and CARD CAMERA mode).



1. Press the MENU button.

- The main menu appears.
- 2. Pull the SELECT dial up or down, select SYSTEM and press the SELECT dial in.
 The SYSTEM submenu appears.
- 3. Pull the SELECT dial up or down, select D/TIME SET and press the SELECT dial in.
 - The year display starts to flash.
- 4. Pull the SELECT dial up or down to change the year. Press the SELECT dial in to move to another part of the display.
 - Once you move from the year, the next part of the display starts flashing.


5. Set the month, day, hours, and minutes in the same way.

6. Press the MENU button when finished to start the clock.

- The date can be set to any year between 2002 and 2030.
- When you press the MENU button during the setting, the seconds become set to zero, the menu closes and the clock starts.
- If you press the SELECT dial in after having set the minutes, you can set date and time again from the start.

Date and Time Display


You can choose to display or hide the date and time display during recording. When the date and time display is set to ON, the date and time appear in the lower left-hand corner of the display but the time zone disappears in about 4 seconds. Date and time will not be superimposed on your recordings.



To turn it on, open the menu and select DISP.SET UP. Then select GUIDE INFO, set it to D/T DISPLAY and close the menu.

Ε

Basic Recording

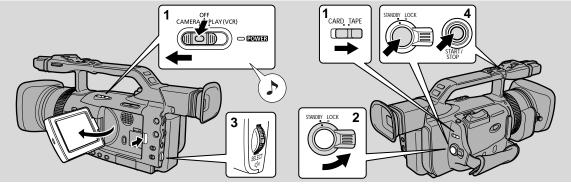

Before You Start Recording

- Attach a power source (🕮 14).
- Load a cassette (🕮 16).
- Fasten the grip belt (\square 13).
- Attach the lens hood (\square 12).
- Choose the display: viewfinder (\square 12) or LCD screen (\square 41).
- Adjust the viewfinder or the LCD screen.

You may also want to install the backup battery (\square 136) in order to set the date and time display (\square 30). For setting the movie mode, see "Selecting the Movie Mode" (\square 48).

Recording

1. Slide the POWER switch to CAMERA and the TAPE/CARD switch to TAPE.

2. Turn the standby lever to STANDBY.

- The camcorder power indicator lights up red and PAUSE appears in the display the camcorder is now in "record pause mode".
- For recording still images, see "Recording Still Images onto a Tape" (\$\$\overline\$46\$) and "Recording Still Images onto a Memory Card" (\$\$\overline\$116\$).

3. Turn the program selector to \Box Easy Recording mode.

• This selects the camcorder's Easy Recording program. It allows you to simply point and shoot without making any manual adjustments (\$\sum 51\$).

4. Press the start/stop button to begin recording.

- There are two start/stop buttons, to give you control from both gripping positions.
- The tally lamp flashes rapidly and REC appears in the display.
- When you start recording, the camcorder counts from 0 SEC. to 10 SEC. Recordings shorter than 10 seconds may be difficult to edit later.

5. Press the start/stop button again to pause recording.

- The camcorder returns to record pause mode and PAUSE reappears in the display.
- You can stop and restart recording as often as you like by pressing the start/stop button.

Low-Angle Recording

The camcorder is also designed for low-angle recording. The handle is equipped with start/stop button, PHOTO button and zoom controls. The speed of the zoom controls on the handle can be set to low, medium or fast in the menu (\square 40).

Slide the LOCK lever into the direction of the arrow to lock the handle controls to prevent accidental operation.



Using the STANDBY lever

As long as the POWER switch is set to CAMERA, you can use the STANDBY lever to turn the camcorder on and off. This saves battery power and prevents accidental operation of the start/stop button.

Turn the STANDBY lever to LOCK or STANDBY to enter/leave the standby mode.

The Power Save Function

The camcorder automatically turns off if you leave it in record pause mode for more than 5 minutes to protect tape and video heads.

You can select whether to turn off the camcorder (SHUT OFF) or only the recorder section (VCR STOP).

At VCR STOP, the camcorder remains turned on, so that the camcorder settings such as aperture and shutter speed are retained. Press the start/stop button to start recording from the VCR STOP state. Press the VCR STOP Custom Key to go into record pause mode (\square 56).

If you have selected SHUT OFF and the camcorder turns off, turn the standby lever to LOCK and back to STANDBY to turn the camcorder on.

VCR STOP

Select VCR STOP as the function for the Custom Key button in the menu. Pressing the Custom Key will then only turn off the recorder section while the camcorder remains on. This will enable you to change the camcorder settings without being interfered by the automatic shut off.

To start recording, press the VCR STOP button and the camcorder will go into record pause mode.

When You Have Finished Recording

- Close the LCD panel.
- Unload the cassette.
- Turn the standby lever to LOCK.
- Slide the POWER switch to OFF.
- Disconnect the power source.
- If you have used the viewfinder, return it to its lowered and retracted position.

Notes:


- To check that the camcorder is recording correctly, make a test recording first.
- Before making important recordings, clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.
- To close the LCD panel, rotate it vertically until the screen faces you, then push it in flat against the side of the camcorder.
- You cannot monitor the sound from the speaker when recording.
- For tips on how to make better videos, see page 38.
- For extra recording time, see "Changing the Recording Time" ($\square 35$)
- The flashing of the tally lamp may be reflected into the lens during close-up recording, or when recording through glass. You may therefore decide to turn it off ($\square 29$).

Recording

Changing the Recording Mode (SP/LP)

You can record and play back a tape in SP (standard play) and LP (long play) modes. LP extends the tape usage by 1.5 times.

You cannot add sound (audio dubbing) or images (AV insert) to a tape that has been recorded in LP mode. If you plan to use either of these functions later, record in SP mode.




To change to LP mode, open the menu and select VCR SET UP. Then select REC MODE, set it to LP and close the menu.

Notes:

- When recording and playing back tapes in LP mode, the nature of the tape and usage conditions may affect recording, mosaic-like noise may appear in the image and the sound may be distorted during playback of tapes recorded in LP mode. For important recordings, therefore, set the camcorder to SP mode.
- If you record in both modes on the same tape, the picture may become distorted during playback and the time code may not be written correctly.
- When the camcorder is set to LP mode, pausing between recordings may produce mosaic-like noise.
- A tape recorded in LP mode on another camcorder may produce mosaic-like noise when played back on this camcorder, and vice versa.

16:9 (Wide-Screen TV Recording)

Produces images in the 16:9 format for playback on wide-screen TVs.






- 1. Open the menu and select DISP. SET UP.
- 2. Select 16:9, set it to ON and close the menu.

Е


The 16:9 guides allows you to view the 16:9 wide screen composition while in the standard 4:3 aspect ratio. The 16:9 guides will not be superimposed on your recordings.



- 1. Open the menu and select DISP. SET UP.
- 2. Select 16:9 GUIDES, set it to ON and close the menu.

Notes:

- "16:9" is shown in the display when you turn the 16:9 effect on.
- If you play back a recording made for 16:9 on a normal TV screen, the image will appear to be vertically "squashed" (compressed).

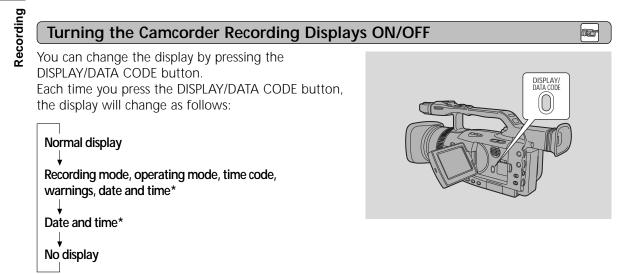

* Appears when GUIDE INFO is set to D/T DISPLAY in the DISP. SET UP submenu (CAMERA menu).

Notes:

- The display becomes reset when you turn the power off by the POWER switch or standby lever.
- The same information will be displayed on a connected TV screen (TV SCREEN function).
- The audio level indicator can be displayed or hidden through the menu independently from the DISPLAY/DATA CODE button.

Confirmation/Warning beeps

The camcorder's short operation confirmation beeps are indicated by ightharpoondown in the illustrations. Beeps sound upon certain camcorder operations such as when you turn the camcorder on, during the self-timer countdown, right before the camcorder's automatic shut-off, and also upon any unusual condition of the camcorder. Beeps are not recorded on the tape.

ТАРЕ +	CAMERA , TAPE	+	PLAY (VCR)	CARD	+	CAMERA	CARD	+	PLAY (VCR)
MENU ((18)	►SYSTEM	•	BEEP···►ON						

To turn the beep off, open the menu and select SYSTEM. Then select BEEP, set it to OFF and close the menu.

Demonstration Mode

You can see a demonstration of the camcorder's main features. To see the demonstration, do either of the following:

- With no cassette or memory card inserted, turn the DEMO MODE on in the CAM.MENU or C.CAM.MENU and close the menu.
- Leave the camcorder with no cassette or memory card inserted for five minutes after turning it on.

TAPE +	CAMERA ,	CARD +	-	CAMERA
MENU (🖽 18)	►DISP. SET UP		$\mathbb{P}\left[$	DEMO MODE····►ON

To turn the demonstration mode off, open the menu and select DISP. SET UP. Then select DEMO MODE, set it to OFF and close the menu.

Notes:

- The opening animation will not appear when the demonstration mode is turned off.
- To cancel the demo mode once it has begun: push any button, turn off the power, load a cassette or insert a memory card.

Tips for Making Better Videos

Recording

Holding the Camcorder

For maximum stability, grip the camcorder in your right hand and keep your right elbow pressed against your body.

If necessary support the camcorder with your left hand. With practice, you will be able to operate the controls by touch, without taking your eye off the action.


Using a Tripod

To prevent any unwanted movement, you can mount the camcorder on a tripod, (or any flat surface at a suitable height) and operate it with the wireless controller.

- When you are using a tripod, be careful not to leave the viewfinder exposed to bright sunlight as it may melt. (The light is concentrated by the viewfinder lens.) Change the angle of the viewfinder so that the sun does not shine into it.
- Make sure that the fastening screw of the tripod is no longer than 5.5 mm (1/4 inch), as it will damage the camcorder.

Sound Recording

For greater creative control over audio recording, you can connect an external microphone to the camcorder via the MIC terminal. When using the MIC terminal, use a microphone with a built-in power supply (condenser microphone). It is possible to connect almost any stereo microphone with a plug diameter of 1/8 inch (3.5 mm), however, their audio levels will be different from that of the built-in microphone.

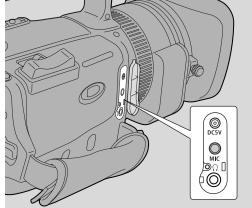



Composition

Picture Angle

The most important element in the scene does not necessarily have to be centred. For a more interesting picture, try to position your subject slightly to one side. Leave some space on the side of the frame that the subject is facing or moving towards.

Do not cut off the top of the subject's head, and do not cut people off at the neck, hips or knees (move a little bit above or below).

Watch out for distracting objects in the background.

Instead of zooming while recording, try to choose your picture angle before you begin. A good way to tell a story with video is to begin with a long shot that establishes the situation, and then move in with medium shots and close-ups to show the details. Remember to change your viewpoint for each shot.

Remember that any camcorder movement or change in picture angle should have a definite purpose. Avoid unnecessary or half-hearted movements.

Camcorder Moves

Use pans to record a landscape or follow a moving subject. Decide the area you wish to cover and stand facing the end of your panning angle. Without moving your feet, turn your waist to the starting position. Start recording, and after a few seconds begin to turn slowly from the waist. Hold the final image for a few seconds before you stop recording.

Tilt the camcorder up to exaggerate the height of the subject. Tilt down from the top of a building, for example, as an introduction to subjects at the bottom.



Long shot



Medium shot



Pan


Close-up







Zooming

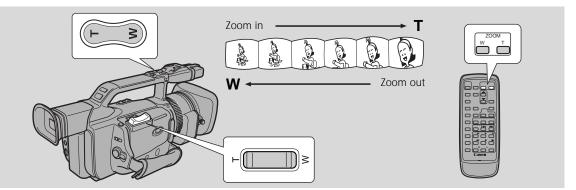

This camcorder is equipped with 20x optical zoom and 100x digital zoom. Optical zoom and digital zoom can be operated from either the side grip, the camcorder handle or the wireless controller.

• Digital zoom cannot be used in CARD CAMERA mode.

20× Optical Zoom

Press the zoom control towards W to zoom out to wide-angle.

Press it towards T to zoom in to telephoto.

- The speed of the zoom controls on the camcorder can be changed in the CAMERA SET UP submenu (grip zoom: variable, low, medium and fast; handle zoom: low, medium and fast).
- The speed of the zoom control of the wireless controller cannot be adjusted.

40×/100× Digital Zoom

The digital zoom magnifies the camcorder's zoom range by up to 5 times.



MENU (18)

►CAM. SET UP

D.ZOOM···►OFF

To change the digital zoom, open the menu and select CAM.SET UP. Then select DIGITAL ZOOM, set it to 40 \times or 100 \times and close the menu.

The zoom control continues to work as usual. You can freely zoom in and out between $1 \times$ and $40 \times$ or $1 \times$ and $100 \times$ magnification — the camcorder automatically switches between optical zooming (up to $20 \times$) and digital zooming ($20 \times$ to $100 \times$).

Notes:

- When zooming, as a rule, keep at least 1m (3 ft 3 ³/₈ in) between you and your subject. However when the zoom is at the wide-angle position, you can focus on a subject as close as 1 cm (³/₈ in).
- Image resolution decreases the further you zoom towards 100× in digital zoom range.
- When the digital zoom is set to 40×, the zoom indicator extends (light blue). When the digital zoom is set to 100× zoom, the zoom indicator extends again (a darker blue).

Using the LCD Screen

Opening the LCD Screen

Push the LCD panel OPEN button and open the panel by pulling it away from the camcorder. This automatically switches the LCD screen on and the viewfinder off. When you close the LCD panel, the LCD screen automatically switches off and the viewfinder switches back on.




Changing the Angle of the LCD Screen

First open out the LCD panel at a right angle (90°) to the camcorder.

You can now choose the angle of the panel that suits you best by rotating it backwards (up to 180°) and forwards (up to 90°) about its axis.

If you rotate the panel backwards around to 180°, you can allow the subject to monitor the shot on the LCD screen or you can include yourself in the picture. The viewfinder is also activated when the panel is in this position.


From this position you may also push the panel flat against the camcorder, with the screen facing outwards.

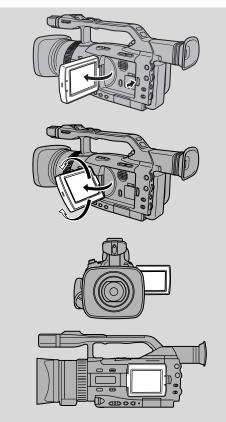

Notes:

- Avoid touching the LCD screen when moving the LCD panel.
- Do not hold the camcorder by the LCD panel or the viewfinder.
- Make sure you open the LCD panel at 90°, before attempting to rotate it backwards or forwards.
- Always rotate the LCD panel vertically into place, before closing it or pushing it flat against the side of the camcorder.
- Always fully close the LCD panel when it is not in use.
- Be careful not to leave the LCD, viewfinder or lens exposed to direct sunlight outdoors or through a window. Doing so could cause damage.
- Bright light falling on the LCD screen may cause glare that makes it difficult for you to view the image. In this case, switch to using the viewfinder. You can also adjust the brightness of the screen.

Recording

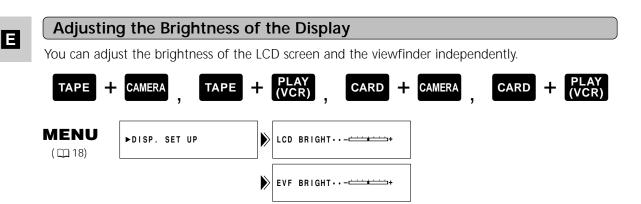

- 1. Open the menu and select DISP. SET UP.
- 2. Select LCD BRIGHT or EVF BRIGHT and adjust the brightness.
 - Pull the SELECT dial up to make the display brighter, and down to make it darker.
- 3. Close the menu.

Notes:

- The camcorder retains your brightness setting even if you slide the POWER switch to OFF.
- The brightness of the LCD screen/viewfinder does not effect that of the recorded images.

About the LCD Screen


The LCD screen built into this camcorder is a high precision product.

However, small black dots or bright points of light (red, blue or green) may appear constantly on the LCD screen. This is not a malfunction of the LCD screen and they are not recorded on the tape. (Effective dots: more than 99.99%)

Allowing the Subject to Monitor Recording

When you turn the LCD panel so that it faces into the opposite direction, you can allow your subject to monitor the screen, or you can monitor yourself while recording.

• You can choose the display style between reversed (LCD MIRROR ON) or not (LCD MIRROR OFF) in the menu.

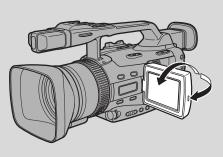




To turn the mirror mode off, open the menu and select DISP.SET UP.

Then select MIRROR, set it to OFF and close the menu.


- LCD MIRROR ON: The picture appears reversed like in a mirror.
- LCD MIRROR OFF: The picture appears the same as the recording.
- If you turn the LCD MIRROR ON, the recording itself is unaffected.

Indicators that appear on the LCD screen when MIRROR is turned on:

TAPE CAMERA mode :

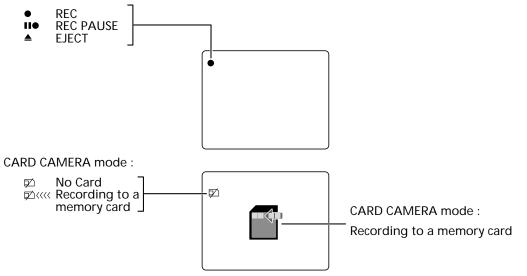


The audio level indicator will be displayed as follows:

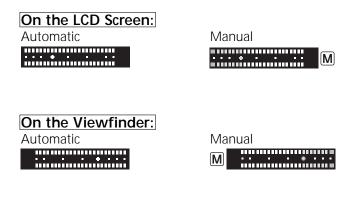


Turning the Optical Image Stabilizer Off



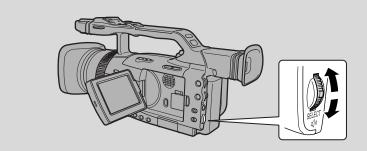

With most camcorders, even the slightest hand movements will be noticeable during telephoto recording. However, the XM2's Optical Image Stabilizer allows you to obtain steady recordings even at high magnification. Unlike electronic image stabilizers, it causes no loss of picture quality. The Optical Image Stabilizer can compensate for a wide range of camcorder movement — you can record stable images even if you are shooting from a moving car.



To turn the image stabilizer off, open the menu and select CAM.SET UP. Then select IMAGE S. ((), set it to OFF and close the menu.

- The () mark appears in the display when the stabilizer is on.
- The image stabilizer cannot be turned off when the program selector is set to the
 (Easy Recording) program.

Notes:


- The camcorder retains your selection even if you turn the camcorder off.
- The image stabilizer is designed to deal with a normal degree of camcorder shake.
- Keep the image stabilizer turned off when the camcorder is mounted on a tripod.

Using the ND Filter

ip

2

Recording

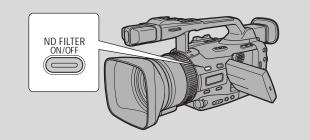

On bright days or when recording very bright scenes, despite the iris being at its smallest aperture, blurring of the image may occur. If this happens, using the ND filter should remove this problem.

Turn the ND filter on by pressing the ND FILTER ON/OFF button.


- ND is shown continuously in the display while the ND filter is turned on.
- ND ON flashes in the display to advise you to switch the ND filter on. (However it does not appear in the Manual mode or during exposure lock.)
- ND ON with the "ON" flashing advises you to fit an external ND filter* or that the light conditions are still too bright, despite having switched the ND filter on.
- ND OFF with the "OFF" flashing warns you that the ND filter is no longer suitable for the current conditions. If this warning appears, turn the ND filter off by pressing the ND FILTER ON/OFF button again.
- * When you don't have an external ND filter, make the shutter speed faster in Tv mode or open the aperture in Av mode.


Notes:

- You cannot turn the ND filter on/off during exposure lock or while the PHOTO button is pressed halfway down.
- The camcorder retains your selection if you turn the standby lever to LOCK. However, it resets to the OFF setting if you slide the POWER switch to OFF.

Recording Still Images onto a Tape

E



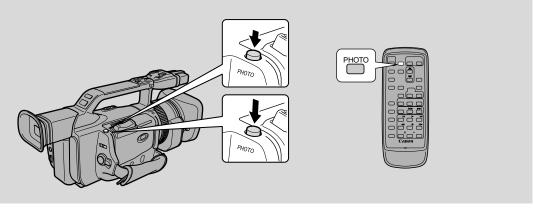

You can record still images like photographs. The camcorder records the picture and sound to tape for several seconds. The exposure is automatically adjusted.

Starting your shooting with a still image makes it easy to find the beginning again later with the Photo Search function ($\square 91$).

You can take a still image at any time during regular video recording, or you can put the camcorder into record pause mode first, then take a still image.



During recording

Press the PHOTO button fully down and the still image will be taken immediately.

- The camcorder takes the image immediately, and then records the "photo" to the tape for approximately 6 seconds. During this time the camcorder also records the sound, and the display shows the still image.
- A counter display appears, and counts up as the camcorder records the image.
- The camcorder returns to record pause mode.

During record pause mode

1. Press the PHOTO button halfway down and hold it:

- "PHOTO" flashes at the bottom right of display.
- Exposure is locked.
- During autofocus flashes white in the display as the camcorder adjusts the focus and it is displayed continuously as a green mark when the camcorder is ready to take the still image.
- If the subject is unsuitable for autofocus (
 ¹⁴²), the camcorder may not be able to focus, and
 ¹⁴² may continue to flash white in the display. Continue to hold the PHOTO button halfway down, then adjust the focus manually with the focus ring.
- If you are using manual focus (□77), the mark starts as a continuous green mark. Focus with the focus ring.

2. Press the PHOTO button fully down to take the still image

- The camcorder takes the image immediately, and then records the "photo" to the tape for approximately 6 seconds. During this time the camcorder also records the sound, and the display shows the still image.
- A counter display appears, and counts up as the camcorder records the still image.
 disappears from the display.
- The camcorder returns to record pause mode.

Notes:

- The camcorder automatically returns to record pause mode after recording a still image for approximately 6 seconds. If you turn the POWER switch to OFF during that time, the camcorder will respond only after recording is complete.
- The wireless controller's PHOTO button has no half-way setting. Press the button fully and the camcorder immediately.

Selecting the Movie Mode (Normal/Frame)

E

The frame mode can be used when you wish to look at a video, scene by scene, free from field slippage (the "flicker" that normally occurs when you pause a video). The vertical resolution of the image is improved by 1.5×. During playback, pause the video at any time if you would like to view a crystal clear still image in the display or on a connected TV screen. It is also possible to transfer your favorite still pictures to a PC for image enhancement and print out.

Since the frame rate is close to that of a movie, this mode can be used to create "cinematic-like appearance."



MENU (18)



MOVIE MODE··►NORMAL

- 1. Slide the program selector to P (program AE) mode.
- 2. Open the menu and select CAM. SET UP.
- 3. Select MOVIE MODE, set it to FRAME and close the menu.
 - FRAME appears in the display.


Notes:

- To return to normal video shooting, you need to re-select NORMAL from MOVIE MODE in the CAMERA menu.
- Frame mode cannot be used with the Easy Recording program.
- Frame video may not appear completely smooth during normal playback.
- The digital effects WIPE, OVERLAP, STROBE and TRAIL cannot be used when the MOVIE MODE is set to FRAME.

Searching and Reviewing While Recording

Record Search

When the camcorder is in record pause mode, you can use record search to play the tape forwards or backwards to find the point where you wish to start or restart recording. This is useful when you wish to add a new scene to a previously used cassette. By using record search, you can ensure a smooth, noise-free join between the new scene and the old one.

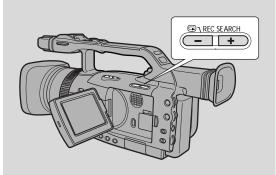




- 1. Press and hold the REC SEARCH + or button while you check the picture in the display.
 - The + button plays the recording forwards and the button plays it backwards.
- 2. Release the button when you find the point where you want to start recording.
 - The camcorder returns to record pause mode.

Record Review

When the camcorder is in record pause mode, you can use record review to play back the last few seconds of your recording and then return automatically to record pause mode. You can quickly make sure that a scene has recorded properly and then go on to shoot the next scene, without producing any noise in the picture.



- 1. Press and release the 🖙 (record review) button while you check the picture in the display.
 - The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode.

Note:


• Noise may appear on the screen during record search and record review.

i

i

Using the Various Recording Programs



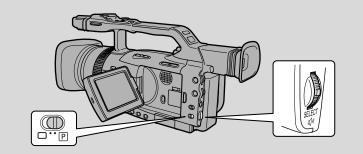

The camcorder provides you with a choice of seven recording programs. They use different combinations of camcorder settings in order to adjust the exposure and other functions to match the recording situation.

Availability of Functions in Each Recording Program

Recording Program	Easy Recording	Auto	Tv	Av	Manual	Sand & Snow	Spotlight
EXP dial:Exposure lock	X		0		X	0	0
EXP dial:Aperture adjustment	X	Х	X ¹⁾	0	0	X ¹⁾	X ¹⁾
EXP dial:Shutter speed	X	X	0	X ¹⁾	0	X ¹⁾	Х
EXP dial:Gain adjustment	×		×		0	X ¹⁾	×
W. BALANCE SELECT button	× (Automatic)			())		
W. BALANCE SET button	X			(C		
Custom preset setting	X			(С		
CSTM PRESET button	×			(С		
FOCUS A/M button	×			(C		
Focus ring	×			(C		
CSTM KEY button	0			(С		
Movie mode	× (Normal)			(С		
16:9	× (OFF)			(С		
Clear scan frequency	X	X	O ²⁾	X	O ²⁾	>	<
Clear scan activation	×	×	O ³⁾	×	0	>	<
Digital effects (excl. color bars)	×			(C		
Color Bars				0			
Digital zoom (TAPE CAMERA mode only)				0			

 \bigcirc = Available, X = Not available

1): Can be used when exposure is locked.

- 2): Frequency can be selected when clear scan is activated.
- 3): Shutter speed cannot be changed when the exposure is locked while clear scan is activated.

Setting the Program AE Mode



- 1. Slide the program selector to P (program AE) mode.
- 2. Press the SELECT dial in and display the program menu.
- 3. Pull the SELECT dial up or down and move the arrow up or down the menu.

4. Press the SELECT dial in to select the desired program.

• The program will appear in the display.

Notes:

- The name of your selected recording program appears constantly on the left of the display, with the exception of AUTO which disappears after 4 seconds.
- Avoid changing programs during recording as the brightness of the image may change suddenly.
- The specialised AE programs are not suitable for all kinds of lighting. The image may flicker, or a bright line may appear on the screen if you use them in unsuitable lighting conditions.

Easy Recording

The simplest way to use the camcorder is with the program selector set to the \Box position. The camcorder will take care of focus, exposure and other adjustments, leaving you free to point and shoot.

Auto

In normal recording conditions, set the program selector to AUTO. This is the same as the Easy Recording program, except that you now have the option of using any of the camcorder's manual functions.

AUTO





E

Giving Priority to Shutter Speed (Shutter-Priority: Tv)

Use this program to select the shutter speed. Aperture and gain are adjusted automatically.

Select Tv mode and set the shutter speed by pulling the EXP dial up or down.

• Pull toward + for a slower shutter (the image becomes brighter) and to – for a faster shutter (the image becomes darker).

Shutter Speeds

- You can choose from 12 shutter speeds between 1/6 and 1/16000. The available shutter speeds in CARD CAMERA mode are from 1/50 to 1/500. If you switch from TAPE CAMERA mode to CARD CAMERA mode, the shutter speeds will change automatically:
 - Shutter speeds of 1/1000 and above in TAPE CAMERA mode \rightarrow 1/500.
 - Shutter speeds of 1/25 and below in TAPE CAMERA mode \rightarrow 1/50
- When shooting outside on clear, bright days, the camcorder will often set a large F number to adjust the amount of light entering the camcorder, throwing the focus off. Setting a fast shutter speed or decreasing the amount of light with the ND filter can help correct this.
- If you try to set a shutter speed that is either too high or too low for the shooting conditions, the indicator flashes in the display. In this case, increase or decrease the setting until the flashing stops.
- The image may not appear smooth when a high shutter speed is set.

Notes:

- When recording in extreme low-light conditions, we recommend the use of a Canon Speedlite (\$\mathbb{\subscript{166}}\$) or Video Light (\$\mathbb{\subscript{171}}\$), both available as optional accessory.
- The selected shutter speed will reset if you turn the power off, change the recording program or adjust the exposure.

Giving Priority to the Aperture (Aperture-Priority: Av)

Use this program to select the aperture (iris diameter) to give you maximum control over the depth of field. Select between 10 aperture values (f/1.6, f/2.0, f/2.4, f/2.8, f/3.4, f/4.0, f/4.8, f/5.6, f/6.7, f/8.0) in TAPE CAMERA mode and 9 aperture values in CARD CAMERA mode (f/2.0 to f/8.0). Shutter speed and gain are adjusted automatically.

Av

Tν



Select Av mode and set the aperture by pulling the EXP dial up or down.

- Pull toward + to open the aperture (decrease the F number) and toward to close the aperture (increase the F number).
- If you try to set an F number that is too high/low for the shooting conditions, the indicator flashes in the display. In this case, increase or decrease the setting until the flashing stops.

Notes:

- The selected aperture value will reset if you turn the power off, change the recording program or adjust the exposure.
- If the ND filter is set to ON, increasing the F number may darken the image. Set the ND filter to OFF and select your setting again.



Manual (174)

Select this program for total creative freedom when operating the camcorder. You can set aperture, shutter speed and gain independently to give you exactly the exposure you require.

You can select between 30 shutter speed settings (1/6 to 1/16000), 19 aperture values (f/1.6 to f/8.0) and 4 gain values (0dB to +18dB) in TAPE CAMERA mode.

Select MANUAL mode and set the shutter speed, aperture and gain.

• For further details, see "Adjusting the Exposure Manually" (\square 74).

Sand & Snow

Use this program in places where the background is so SAND&SNOW bright that the subject appears underexposed in the display — a sunny beach or ski resort, for example. You may notice some shudder when recording moving subjects.

Spotlight

This program is designed for recording spotlit scenes, such as on a stage. The exposure is automatically adjusted for glare-free recordings of subjects lit by a concentrated light source.

SPOTLIGHT



SAND&SNOW

Recording



Audio Recording



Selecting the Audio Mode

The XM2 can record sound in two audio modes:

- 16-bit (48 kHz, 2 channel) for the highest sound quality
- 12-bit (32 kHz, 2 from 4 channels) for recording on two channels (stereo 1), leaving two channels (stereo 2) free for you to add new sound at a later date.



* Only available when AUDIO DUB. has been set to MIC. IN.





1. To switch the mode, open the VCR SET UP submenu and select AUDIO MODE.

2. Select a mode and close the menu.


• The name of the selected mode is displayed for 4 seconds.

Note:

Recording

• For audio output details and how to play back a tape with added sound on stereo 2, see p. 109.

Selecting the Built-in Microphone Sound





* Only available when audio AUDIO DUB. has been set to MIC. IN.



►VCR SET UP

MIC····NORMAL

- 1. Open the VCR SET UP submenu and select MIC.
- 2. Select the setting and close the menu.

NORMAL: General recording.

VOICE: When recording a person's voice.

W. SCREEN: In windy places such as the beach or near buildings. Note that low sound may be reduced together with the wind noise.

Adjusting the Audio Recording Level

The camcorder sets the audio recording level automatically when the REC LEVEL switch is set to A. However, you can manually adjust the recoding level of the built-in microphone or an external microphone connected via the MIC terminal or advanced accessory shoe (including microphones connected via the optional MA-300 Microphone Adapter).

The camcorder is equipped with a audio level indicator at the side. You can also display the audio level indicator on the LCD or viewfinder screen (open the menu, select DISPLAY SET UP and set AUDIO LEVEL to ON).

Audio level indicator at the side of the camcorder:

Set to automatic:

Set to automatic:

k.....

Set to manual:

dB 50 40 30 20 12 6 2 0 R

k....

MANU

-dB 50 40 30 20 12 6 2 0 R

Audio level indicator on the LCD or viewfinder screen: Set to manual:

1.	Slide the	REC LEV	EL switch	to M.

2. Turn the L/R LEVEL dial to adjust the recording level.

- Adjust the level so that it slightly exceeds the 12-point (the larger on the LCD or viewfinder) screen).
- Adjust the balance by turning the L/R LEVEL dial if necessary.
- Even if you turn down the LEVEL dial, the sound may be distorted if the input level is still too high. Turn on the microphone attenuator in such case.

Microphone Attenuator

Use the microphone attenuator if you need to lower the volume level or correct audio distortion of the input audio during recording or audio dubbing. Monitor the level of the input sound with headphones. If necessary, set the attenuator to ON in the VCR SET UP submenu of the CAMERA or VCR menu.

ð

Using the Custom Key

Е

Recording

You can assign frequently used functions to the custom key (independently for TAPE CAMERA mode, TAPE PLAY (VCR) mode, CARD CAMERA mode and CARD PLAY (VCR) mode). This allows you to customize the camcoder to your recording situations.

Default settings:


TAPE CAMERA mode:INDEX WRITETAPE PLAY (VCR) mode:TV SCREENCARD CAMERA mode:ZEBRA PATTERNCARD PLAY (VCR) mode:TV SCREEN

To check the current CSTM KEY setting in TAPE CAMERA or CARD CAMERA mode, open the menu, select DISPLAY SET UP, GUIDE INFO and CUSTOM KEY. In TAPE PLAY (VCR) or CARD PLAY (VCR) mode, open the menu, select DISPLAY SET UP and set CUSTOM KEY to ON. The current setting will be displayed on the screen.

Functions listed below can be assigned to custom key.

* Functions with an asterisk can be operated only by the custom key.

TAPE + CAMERA	TAPE + PLAY (VCR)	CARD + CAMERA	CARD + PLAY (VCR)
Index Write*	TV Screen	Zebra Pattern	TV Screen
Zebra Pattern	Microphone	TV Screen	
VCR Stop*	Microphone Attenuator	Grip Zoom Speed	
TV Screen	Audio Attenuator	Handle Zoom Speed	
Microphone	Audio Level Indicator	AE Shift	
Microphone Attenuator		Image Stabilizer	
Grip Zoom Speed			
Handle Zoom Speed			
Audio Level Indicator			
AE Shift			
Image Stabilizer			

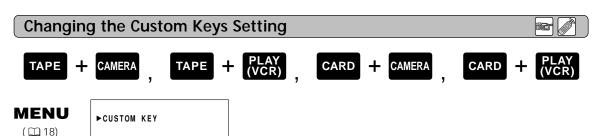

- 1. Open the menu and select CUSTOM KEY.
- 2. Select the function.
- 3. Close the menu.

Downloaded From CamcorderManual.com Canon Manuals

Operating the CSTM KEY Button

• A function assigned to a custom key is referred to as a button of that effect (e.g. "INDEX WRITE" button).

Index Write

You can add an index signal to your recording for easy search in VCR mode.

+ CAMERA

- You cannot add or erase the index signal later.
- You cannot use the "INDEX WRITE" button during photo nor interval timer recording.
- Index Write can be operated only by the CSTM KEY.

While in record mode

Press the "INDEX WRITE" button and the index signal will be recorded for approximately 6 seconds. During this time, "INDEX" appears in the viewfinder.

While in record pause mode

1. Press the "INDEX WRITE" button and "INDEX" appears in the display.

2. Press the start/stop button to begin recording.

• The index signal will be recorded for approximately 6 seconds. INDEX dissappears after that time.



The zebra pattern is a series of diagonal stripes that appear in the display to highlight areas of overexposure. Use it as a guide to set the aperture (iris) and shutter speed.

This function can also be selected from CAM. SET UP in the CAMERA or CARD CAMERA menu (ZEBRA). The zebra pattern level can be adjusted in the same submenu (ZEBRA LEVEL) (\square 83).

Press the "ZEBRA" button to display the zebra pattern. Press the button again to eliminate the pattern.

• The camcorder does not record the zebra pattern. It only appears in the display.



You can turn the recorder section off and leave the camcorder section turned on. This allows you to adjust the camcorder regardless of the 5-minute timer.

• VCR STOP can be operated only by the custom key.

Press the "VCR STOP" button to turn the recorder section off. Press the button again to return to record pause mode.

TV Screen

Ε



You can display the information on the LCD screen/viewfinder on a connected TV. Press the "TV SCREEN" button to display the information on the TV screen. Press the button again to cancel.



* Only available when AUDIO DUB. has been set to MIC. IN.

Press the "MIC" button. Select the sound quality (NORMAL, VOICE, W. SCREEN) by pulling the SELECT dial up or down and press the SELECT dial in.

Microphone Attenuator TAPE + CAMERA TAPE +

* Only available when AUDIO DUB. has been set to MIC. IN.

Use the microphone attenuator if, during recording or audio dubbing, you need to lower the volume level or correct audio distortion via the microphone.

Press the "MIC ATT" button. Select ON or OFF by pulling the SELECT dial up or down and press the SELECT dial in.

Press the "ZOOM GRIP" button. Select the grip zoom speed (VARIABLE, LOW, MEDIUM, FAST) by pulling the SELECT dial up or down and press the SELECT dial in.



Press the "ZOOM HANDLE" button. Select the handle zoom speed (LOW, MEDIUM, FAST) by pulling the SELECT dial up or down and press the SELECT dial in.

Press the "AUDIO LEVEL" button to display the audio level indicator on the LCD screen/viewfinder. Press the button again to cancel.

CAMERA

CAMERA

CARD

CAMERA

PLAY (VCR)

ТАРЕ 🕂



Audio Level Indicator

• Only available when the recording program is set to AUTO, Tv or Av.

TAPE

Press the "AE SHIFT" button to display the AE SHIFT menu. Pull the SELECT dial up or down and select between -2.0 and +2.0. Press the SELECT dial in to close the menu.

Image Stabilizer	TAPE +	CAMERA	CARD	+	CAMERA
------------------	--------	--------	------	---	--------

Press the "Image Stabilizer" button to turn the image stabilizer on/off.

+

ΤΑΡΕ

Audio Attenuator

Use the audio attenuator if, during recording or audio dubbing you need to lower the volume level or correct distortion of the input audio.

Press the "AUDIO ATT" button. Select ON or OFF by pulling the SELECT dial up or down and press the SELECT dial in.

Using Digital Effects

Е

Show your creativity by using the special effects and digital faders. These digital effects and faders can add visual appeal and greater imaging variety.

Faders:	Start or end scenes on a tape with a fade to or from black ($\square 60$).
	Fade Trigger, Wipe*, Overlap*
Effects:	Add flavor to your recordings (1 63).
	Black and White, Sepia, Art, Mirror, Mosaic, Strobe*, Trail*
Colour Bars:	You can display and record industry standard SMPTE colour bars ($\square 65$).

* Cannot be selected when the movie mode is set to FRAME or when a slow shutter is set (1/8, 1/15, 1/30).

	TAPE C	CARD CAMERA	
	Movie	Still Image	
Fader	0	X	X
Effects	0	0	X
Colour Bar	0	0	X

 \bigcirc = Available, X = Not available

Notes:

Recording

- When you do not wish to use digital effects, press the D.EFFECTS/BARS SELECT button and select D.EFFECTS OFF. Press the D.EFFECTS/BARS ON/OFF button to close the menu.
- The camcorder retains the selected digital effect setting even if you turn the camcorder off.
- Digital effects can also be operated from the wireless controller.

Faders

Fade Trigger

The image gradually fades in. It gradually fades out when you stop recording



Wipe

The camcorder retains the last recorded scene as a still image before entering the record pause mode. When you start recording, the movie appears from the right of the screen until it fills the whole screen.




Overlap

The camcorder retains the last recorded scene as a still image before entering the record pause mode. When you start recording, the still image gradually changes to the scene you are recording.

Operating the Fade Trigger

Sound and image fade together.

When operating faders in TAPE CAMERA mode, make sure the program selector is set to P.



1. Press the D.EFFECTS/BARS SELECT button.

- The digital effects menu appears.
- 2. Select FADER and press the SELECT dial in.
 - FADE-T, WIPE and OVERLAP settings appear.
- 3. Select the FADE-T and press the D.EFFECTS/BARS SELECT button.
 - The menu closes and FADE-T flashes in the display.

4. Press the D.EFFECTS/BARS ON/OFF button.

- The name of your selection stops flashing.
- Each time you press the D.EFFECTS/BARS ON/OFF button, the fader is activated (display lights continuously) or deactivated (display flashes).
- 5. Press the start/stop button.












Operating Wipe and Overlap

When operating faders in TAPE CAMERA mode, make sure the program selector is set to P.



MENU (18)

►FADER

- FADER·····►OVERLAP
- 1. Press the D.EFFECTS/BARS SELECT button.
 - The digital effects menu appears.
- 2. Select FADER and press the SELECT dial in.
 - FADE-T, WIPE and OVERLAP settings appear.
- 3. Select WIPE or OVERLAP and press the D.EFFECTS/BARS SELECT button.
 The menu closes and the name of the selected fader flashes in the display.
- 4. Press the D.EFFECTS/BARS ON/OFF button during recording.

- The name of your selection stops flashing.
- Each time you press the D.EFFECTS ON/OFF button, the chosen fader becomes activated (display lights continuously) or deactivated (display flashes).

During recording

- 5. Press the start/stop button.
 - The last scene is memorized as a still image and the camcorder goes into record pause mode.

6. Press the start /stop button.

• Recording starts, and the still image gradually changes to the scene you are recording.

Recording

7

Black and White (BLK & WHT)

The image becomes black and white.

Sepia

The image becomes monochrome with a brownish tint.

Art

The image becomes like a paint (solarization).

Mirror

Creates a symmetrical image as if there would be a mirror in the middle of the screen.


Mosaic


The image is blurred through enlarging the size of some pixels.

Strobe


The image is shown in a series of still images, giving an effect similar to slow-motion.

Trail















- 1. Press the D.EFFECTS/BARS SELECT button.
 - The digital effects menu appears.
- 2. Select EFFECT and press the SELECT dial in.
 - The settings appear.
- 3. Select the effect setting and press the D.EFFECTS/BARS SELECT button.
 - The menu closes and the name of the selected effect flashes in the display.
- 4. Press the D.EFFECTS/BARS ON/OFF button.
 - The name of your selection stops flashing and the effect is activated.
 - Each time you press the D.EFFECTS/BARS ON/OFF button, the effect becomes activated (display lights continuously) or deactivated (display flashes).

Using the Colour Bars

You can display and record industry standard SMPTE colour bars.

Activating the Colour Bars



1. Press the D. EFFECTS/BARS SELECT button.

- The digital effects menu appears.
- 2. Select COLOR BARS and press the SELECT dial in.
 - The menu closes and COLOR BARS flashes in the display.

3. Press the D. EFFECTS/BARS ON/OFF button.

- The colour bars appear in the display.
- Each time you press the D.EFFECTS/BARS ON/OFF button, the colour bars are activated or deactivated.

Ε


Using a Canon Speedlite for Flash Photography (Optional)

For SLR-style flash photography, attach a Canon Speedlite 220EX, 420EX or 550EX to the camcorder's accessory shoe. Refer also to the Speedlite instruction manual.

Attaching the Speedlite

Turn the camcorder's power off before attaching/detaching the Speedlite.

Slide the Speedlite onto the accessory shoe and tighten the shoe lock.

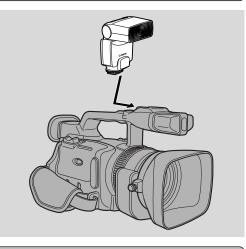

Recording

E

Operating the Speedlite

1. Turn the power of the Speedlite on.

- Wait for the Speedlite to charge.
- While the Speedlite is charging, a white **1** flashes in the display.
- When the Speedlite is fully charged a green **4** lights up constantly in the display.
- Replace the battery of the Speedlite if the white **‡** continues to flash.

2. Press the PHOTO button to record the still image.

- Make sure that the Speedlite is charged before recording the still image. Although it is possible to record while the Speedlite is still charging, the flash will not operate. The Speedlite cannot charge while you are holding the PHOTO button halfway down.
- ‡ disappears from the display while the camcorder records the still picture.
- If the **1** mark does not appear in the display when you turn the Speedlite on, make sure that the Speedlite unit is slid fully onto the accessory shoe.

Notes:

- Turn the Speedlite unit off when you do not require a flash.
- You cannot use the Speedlite in following cases:
 - In the MANUAL recording program.
 - When exposure is locked (**1** turns off if you press the EXPOSURE dial in. It reappears when you turn the lock off by pressing the EXPOSURE dial in again.)
- In the shutter-priority (Tv) mode, you can choose any shutter speed between 1/50 and 1/1000 and clear scan (card: between 1/50 and 1/500).
- Off-Camera Shoe and Connecting Cord for EOS models cannot be used with the XM2.
- The bounce flash on the 420EX and 550EX Speedlites cannot be used with the XM2.
- The 420EX/550EX's multiple Speedlite control and the Speedlite Transmitter ST-E2 cannot be used with the XM2.
- In dark recording situations, during autofocus, a assist light may be sent out by the Speedlite to illuminate the subject while you hold the camcorder's PHOTO button halfway down.

Downloaded From CamcorderManual.com Canon Manuals

Recording with the Interval Timer

With the interval timer, you can record images over a selected time with a selected interval. This function is useful when shooting flowers, animals, and other natural events. You can select an interval of 30 seconds, 1 minute, 5 minutes or 10 minutes, and a recording time of 0.5 seconds, 1 second, 1.5 seconds, or 2 seconds.

Example: 2 seconds recording time at a 5 minutes interval (= standby time of 5 minutes including the recording time of 2 seconds)

2 sec.		2 sec.	
Record	4 min. 58 sec.	Record	4 min. 58 sec.
In	terval time	In	terval time
*	-5 min>	*	-5 min

Default setting:

TAPE

MENU

(🛄 18)

Recording time: 0.5 seconds Interval time: 30 seconds

CAMERA

►CAM.SET UP



► → INTERVAL

INTERVAL T. .►ON

INTERVAL···▶30sec

REC TIME····▶0.5sec

D

- Load a cassette.
- 2. Open the CAM. SET UP submenu and select → INTERVAL.

D

- The interval timer menu appears.
- 3. Select INTERVAL T. and set it to ON.
 - You return to the interval timer menu.
- 4. Select INTERVAL and set the interval.
 You return to the interval timer menu.
- 5. Select REC TIME and set the recording time.

6. Close the menu.

- 7. Press the start/stop button to start recording.
 - The interval recording starts and INT T. appears in the display.
 - When the interval time is set to 30 seconds or 1 minute, the camcorder enters into record pause mode between recordings. When it is set to 5 or 10 minutes, the camcorder stops between recordings.



Е

Pausing the Interval Recording

Press the Start/Stop button.

- The camcorder returns to record pause mode and INT T. flashes in the display.
- Press the Start/Stop button again to restart recording.


Ending the Interval Recording

Set the camcorder to record pause mode and set INTERVAL T to OFF in the interval menu.

Note:

• The remaining tape display may not appear.

Recording with the Self-Timer

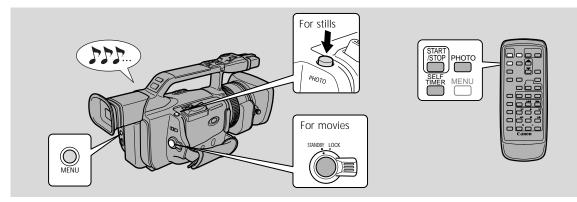

This is useful when you wish to include yourself in the picture when recording movies or still images to tape or memory card.



1. Open the menu, select VCR SET UP and set the SELF-TIMER to ON

or

press the SELF TIMER button on the wireless controller.

- SELF T. appears in the display.
- To have the subject monitor recording, rotate the LCD panel 180° (\square 42).

For movies

2. Press the start/stop button.

- The camcorder starts to record after a 10-second countdown period (or after 2 seconds when you use the wireless controller). The time remaining counts down in the display (e.g. "5 SEC").
- SELF T. disappears from the display when recording begins.
- The tally lamp starts flashing.

3. Press the start/stop button to end recording.

For still images

2. Press the PHOTO button on the camcorder body or the wireless controller.

- The camcorder automatically adjusts the focus 2 seconds before the countdown is complete. The mark flashes white then turns green after the focus and exposure are set. If you are using the wireless controller, the mark starts flashing immediately after you press the PHOTO button.
- The camcorder takes the still image for approximately 6 seconds.
- In TAPE CAMERA mode, the camcorder returns to record pause mode after recording to a tape. In CARD CAMERA mode, the currently recorded image appears after recording onto a memory card.

Notes:

- To cancel the self-timer setting, set the SELF-TIMER to OFF through the menu, or press the SELF-TIMER button on the wireless controller.
- To cancel the countdown of the self-timer, press the start/stop button (when recording a movie) or PHOTO button (when recording a still image).

Using the DV Control

CAMERA

ΤΑΡΕ

_
_

When another device such as a camcorder or a video recording device is connected to the XM2 via a DV cable, you can operate the other device (record and pause recording) by pressing the start/stop button on the XM2.



- 1. Open the menu and select SYSTEM.
- 2. Select DV CONTROL, set it to ON and close the menu.

Pressing the start/stop button:

- A. When the XM2 is in record pause mode: XM2: Recording Connected device: Recording
- B. When the XM2 is Recording: XM2: Record Pause Mode Connected device: Record Pause Mode
- C. When the XM2 is not ready for recording (no cassette loaded etc.) Connected device: Recording/Record pause mode
- D. After loading a cassette while the connected device is recording:


0	
XM2: Recording	Connected device: Continues recording
Pressing the start/stop button again:	
XM2: Record pause mode	Connected device: Record pause mode

When the connected device is recording, [REC] appears in the display of the camcorder. When it is stopped, [STOP] appears. When the other device is in any other mode than the recording, record pause or stop mode, [- -] appears. [DV IF] flashes if DV CONTROL is set to ON and no device is connected via the DV cable.

Notes:

- When the XM2 stops recording without operating the start/stop button (e.g. tape has reached the end) while both the XM2 and the connected device are recording, the connected device continues recording.
- When connecting two XM2s via a DV cable, make sure to set DV CONTROL of the "connected device" to OFF.
- Only one device can be connected to the XM2 for DV control.
- DV control may not work properly depending on the connected device.
- The DV control setting is retained by the camcorder even if you turn the power off. Make sure to check the setting after use of the DV control function, as the tape in the connected device may be overwritten.
- Do not use a DV cable longer than 4.5 m.

Using the VL-3 Video Light (Optional)

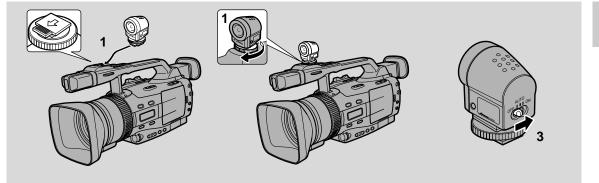

Using the optional Video Light enables you to record even in dark rooms. This VL-3 Video Light attaches to the camcorder's *s* advanced accessory shoe for cable-free operation and is powered by the camcorder's power supply.

Refer to the VL-3 Video Light instructions for further details.

Turn the camcorder's power off before attaching/removing the Video Light.

1. Slide the Video Light onto the accessory shoe and tighten the shoe lock.

- Insert the Video Light oriented in the direction indicated by the arrow on the bottom until it clicks.
- Be careful not to pull off the Video Light when fastening the screw.

2. Set the camcorder to TAPE CAMERA mode or CARD CAMERA mode.

3. Turn the Video Light's power switch to AUTO or ON.


- C (Connection) appears in the display.
- **ON**: The Video Light stays on.
- AUTO: The Video Light turns on/off automatically according to the level of brightness of the shooting conditions. In MANUAL recording program: If the Video Light was on at the time you switched to MANUAL, it stays on. If it was off at the time you switched to MANUAL, it stays off.

Cautions:

- Be careful not to touch the bulb or the surrounding area during or immediately after use; it becomes very hot. Keep the Video Light away from flammable or plastic materials.
- Do not look directly at the bulb while the Video Light is on.
- Never carry the camcorder holding the Video Light.

Downloaded From CamcorderManual.com Canon Manuals

Using the DM-50 Microphone (Optional)

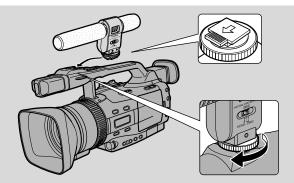

The high sensitive Directional Stereo Microphone DM-50 attaches to the *states* advanced accessory shoe for cable-free operation and is powered by the camcorder's power supply. Use it when recording or dubbing audio.

Refer to the DM-50 Microphone instructions for further details.

Turn the camcorder's power off before attaching/removing the microphone.

1. Slide the microphone onto the accessory shoe and tighten with the shoe lock.

- Insert the microphone oriented in the direction indicated by the arrow on the bottom until it clicks.
- Be careful not to pull off the microphone when fastening the screw.

2. Set the camcorder to TAPE CAMERA mode.

• C (Connection) appears in the display.


3. Set the microphone's directivity switch.

SHOTGUN: For recording clear sound from the front (monaural).STEREO 1: For recording sound from the front and surrounding area.STEREO 2: For recording surrounding sound in a wider range than in STEREO 1.

Notes:

- Never carry the camcorder holding the microphone.
- The DM-50 will not pick up any sound if another microphone is attached to the camcorder's MIC terminal.

Using the MA-300 Microphone Adapter (Optional)

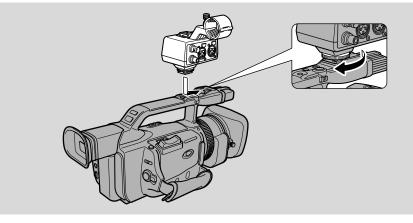

The MA-300 Microphone Adapter enables you to input audio to the camcorder with XLR connector equipped microphones, and to convert video signals for the BNC connector. Refer to the MA-300 Microphone Adapter instructions for further details.

Attaching the Microphone Adapter to the Camcorder

Turn the camcorder off before attaching/detaching the microphone adapter.

- 1. Slide the microphone adapter straight onto the camcorder's accessory shoe.
 - Orient the microphone adapter in the direction indicated with an arrow on the bottom side and slide it in until it clicks.
- 2. Tighten the shoe lock in the direction of the arrow.

Attaching the Microphone

Microphone with a diameter of 25 mm can be attached directly to the microphone adapter. Depending on how you attach the microphone, it may pick up some vibration noise.

- 1. Loosen the microphone clamp screw and open the microphone clamp.
- 2. Place the microphone into the microphone clamp and tighten the clamp screw.
 - Position the microphone so that it does not appear on the camcorder's LCD or viewfinder screen.
- 3. Connect the microphone to the audio input jack.


4. Turn the camcorder's power on.


- C (connection) appears on the camcorder's LCD or viewfinder screen when the camcorder is in record or record pause mode.
- The camcorder's built-in microphone automatically turns off.

Notes:

- The accessory shoe of the microphone adapter is for exclusive use with microphones attached to a camera-mount.
- To output video signals via the BNC connector, connect the supplied video cable to the VIDEO IN terminal and the camcorder's AV terminal.

Adjusting the Exposure Manually



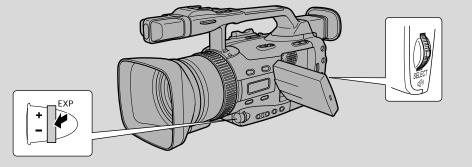

1. Set the recording program to MANUAL.

2. Press the EXP dial in.

- An arrow appears next to the shutter speed value.
- 3. Pull the EXP dial up or down to increase or decrease the shutter speed.
 - You can select between 30 shutter speeds (1/6 to 1/16000) in TAPE CAMERA mode and 15 shutter speeds (1/50 to 1/700) in CARD CAMERA mode.
- shutter iris speed gain display
- See "About the Shutter Speeds" (□ 75).

4. Press the EXP dial in.

- The arrow moves next to the F number.
- 5. Pull the EXP dial up or down to open or close the iris.
 - You can select between 19 aperture values (f/1.6 to f/8) in TAPE CAMERA mode and 17 aperture values (f/2.0 to 1/8) in CARD CAMERA mode, or close the iris completely.
 - See "About the Iris" (\square 75).

6. Press the EXP dial in.

• The arrow moves to the gain value.


7. Pull the EXP dial up or down to increase or decrease the gain.

- Set the gain to 0 dB, +6 dB, +12 dB or +18 dB in TAPE CAMERA mode or 0 dB, +6 dB or +12 dB in CARD CAMERA mode.
- See "About the Gain" (275).

Notes:

Recording

- The shutter speed, F number and gain values will be reset if you slide the POWER switch to OFF. If you use the standby lever, the camcorder retains your chosen values.
- A bar showing the standard exposure appears in the display.
- You can also adjust the exposure manually in the Auto, Tv and Av modes, but you have to first lock the exposure to adjust shutter speed and iris.

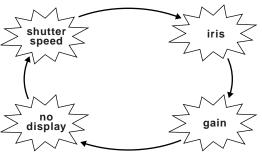

id

• About the Shutter Speeds

Pull the EXP dial toward + for a slower shutter speed, or toward – for a faster shutter speed.

Available shutter speeds in TAPE CAMERA mode:

$1/6\sec \leftrightarrow 1/12 \sec \leftrightarrow 1/25 \sec \leftrightarrow 1/50 \sec \leftrightarrow 1/60 \sec \leftrightarrow 1/75 \sec \leftrightarrow 1/90 \sec \leftarrow 1/90 \pm 1/90 \sec \leftarrow 1/90 \sec \leftarrow 1/90 \sec \leftarrow 1/90 \pm 1/90 \sec $
\rightarrow 1/300 sec \leftrightarrow 1/250 sec \leftrightarrow 1/210 sec \leftrightarrow 1/180 sec \leftrightarrow 1/150 sec \leftrightarrow 1/120 sec \leftarrow
\rightarrow 1/350 sec \leftrightarrow 1/400 sec \leftrightarrow 1/500 sec \leftrightarrow 1/600 sec \leftrightarrow 1/700 sec \leftrightarrow 1/800 sec \leftarrow
\rightarrow 1/2300 sec \leftrightarrow 1/2000 sec \leftrightarrow 1/1600 sec \leftrightarrow 1/1400 sec \leftrightarrow 1/1200 sec \leftrightarrow 1/1000 sec \leftarrow
\rightarrow 1/2800 sec \leftrightarrow 1/3200 sec \leftrightarrow 1/4000 sec \leftrightarrow 1/8000 sec \leftrightarrow 1/16000 sec \leftrightarrow CS
Available shutter speeds in CARD CAMERA mode:
$1/50 \text{ sec} \longleftrightarrow 1/60 \text{ sec} \longleftrightarrow 1/75 \text{ sec} \longleftrightarrow 1/90 \text{ sec} \longleftrightarrow 1/120 \text{ sec} \longleftrightarrow 1/150 \text{ sec} \longleftrightarrow$
\rightarrow 1/400 sec \leftrightarrow 1/350 sec \leftrightarrow 1/300 sec \leftrightarrow 1/250 sec \leftrightarrow 1/210 sec \leftrightarrow 1/180 sec \leftarrow
→ 1/500 sec ↔ 1/600 sec ↔ 1/700 sec

About the Iris

Pull the EXPOSURE dial toward + for a shorter depth of field, or toward – for a greater depth of field.

Available F numbers in TAPE CAMERA mode:

 $F1.6^{*} \longleftrightarrow F1.8^{*} \longleftrightarrow F2^{*} \longleftrightarrow F2.2^{*} \longleftrightarrow F2.4^{*} \longleftrightarrow F2.6^{*} \longleftrightarrow F2.8 \iff F3.2$ $F6.2 \longleftrightarrow F5.6 \longleftrightarrow F5.2 \longleftrightarrow F4.8 \longleftrightarrow F4.4 \iff F4 \iff F3.7 \iff F3.4 \iff$ $F6.7 \longleftrightarrow F7.3 \iff F8 \iff CLOSE$

Available F numbers in CARD CAMERA mode:

 $F2^{*} \leftrightarrow F2.2^{*} \leftrightarrow F2.4^{*} \leftrightarrow F2.6^{*} \leftrightarrow F2.8 \leftrightarrow F3.2 \leftrightarrow F3.4 \leftrightarrow F3.7$ $\downarrow F7.3 \leftrightarrow F6.7 \leftrightarrow F6.2 \leftrightarrow F5.6 \leftrightarrow F5.2 \leftrightarrow F4.8 \leftrightarrow F4.4 \leftrightarrow F4$ $\downarrow F8 \leftrightarrow CLOSE$

* May not be available depending on the zoom position.

About the Gain

Pull the EXPOSURE dial toward + to increase the gain, or toward – to decrease the gain.

Available gain values in TAPE CAMERA mode: **0 dB**, **+6 dB**, **+12 dB**, **+18 dB** Available gain values in CARD CAMERA mode: **0 dB**, **+6 dB**, **+12 dB**


Ε

Exposure Lock/Adjustment

Exposure lock

Lock the exposure at the current level in order to control the brightness of the image.

To lock the exposure, press the EXP dial in. Press it again to return to the automatically set exposure level.

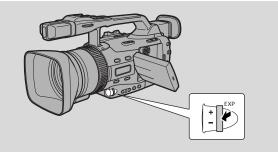


i

Notes:

- You cannot lock the exposure in the
 (Easy Recording) or MANUAL recording program.
- The standard exposure level depends on which recording program you have selected, but the shutter normally operates at 1/50 of a second.
- The brightness of the subject may change if you zoom during exposure lock.
- If you slide the POWER switch to OFF or the standby lever to LOCK, the camcorder resets to auto exposure.


•Exposure adjustment

When the exposure is locked, you can adjust it manually, making the picture brighter or darker in order to deal with difficult lighting conditions, or to manipulate the mood of the scene. The camcorder's iris can be manually set to any position from fully closed to fully open.

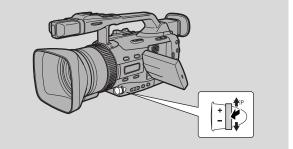

To make the recorded image brighter, pull the EXP dial up (to a maximum of +11). This may be necessary if the background is very bright, or if the subject is lit from behind.

To make the recorded image darker, pull the EXP dial down (to a minimum of -11). This may be necessary if the background is very dark, or if the subject is spotlit.

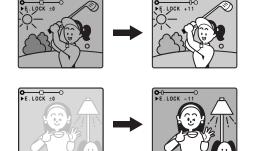

Recording


Adjusting the Focus Manually

The camcorder focuses automatically. All you have to do is point, and whatever is in the centre of the display will usually be in sharp focus. If it does not seem to be focusing well, it may be because the subject is not suitable for autofocus (\Box 142). Also, if you attach a filter other than UV or ND, the autofocus may not work effectively.

- 1. Slide the program selector to P.
- 2. Push the FOCUS A/M button so that MF appears in the display.
- 3. Using the zoom lever, zoom all the way in to the telephoto end.
- 4. Rotate the focusing ring to adjust the focus.
- 5. Use the zoom lever to reframe the subject.
 - To resume autofocus, press the FOCUS A/M button again.

Notes:

- The picture in the LCD screen may appear out of focus when shooting in dark conditions.
- When zooming during manual focus, zoom out wide after setting the focus at the telephoto end.
- The focus may be thrown off if you zoom into telephoto after setting the focus at the wide angle end.
- Autofocus is recommended for zooming in to telephoto from the wide end.
- If you slide the POWER switch to OFF or the standby lever to LOCK, the camcorder resets to auto focus.

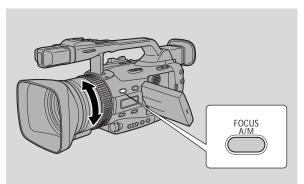

Setting the White Balance

The camcorder's auto white balance system compensates for a wide range of lighting conditions. Although slight variations are unavoidable, colours will appear natural in virtually every situation.

In some cases, you will get better results by setting the white balance yourself, or using one of the two preset modes:

ヴ Indoor Mode

- Under halogen or studio/video lighting
- Subject is of one dominant colour
- Close-ups

TAPE

- XOutdoor mode
 - In daylight, especially for close-ups and when the subject is of one dominant colour

CAMERA

1. Set the program selector to \mathbb{P} .


CAMERA

- 2. a) For auto, indoor or outdoor white balance, press the W. BALANCE SELECT button.
 - A appears in the display when you set the white balance to the indoor/outdoor mode.

b) For setting the white balance manually:

CARD

- ① Point the camcorder at a white object (such as a sheet of paper) and zoom in until it fills the display.
- 2 Press the W. BALANCE SELECT button.
 - 🛃 appears in the display.
- ③ Press the WHITE BALANCE 💻 set button.
 - In the display and then remains lit, to show that the camcorder has set the white balance.
 - Depending on the light source, the flashing may at times change to a slower speed, rather than remaining lit. The result will remain better than with the auto setting, and you can continue recording.

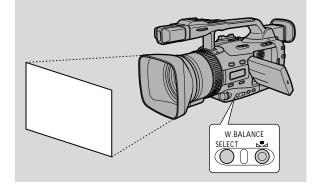

ī

Ε

Recording

Recording

Setting the white balance manually will probably work better than auto white balance when shooting:

Subjects with one dominant colour, such as sky, sea or forest

Close-ups

In rapidly changing lighting conditions

In places lit by certain types of fluorescent or mercury vapor lights

Notes:

- Turn the digital zoom off (if necessary) to set a more accurate white balance.
- If the lighting conditions change, reset the white balance by first returning to the auto setting, and then reselecting the manual balance.
- Try to record with light from a single source. Correct white balance cannot be obtained for two types of lighting at once.
- You cannot set the white balance manually or use the indoor/outdoor modes when the program selector is set to the

 (Easy Recording) program.
- The camcorder returns to auto white balance when the program selector is set to
 (Easy Recording).
- When you turn the camcorder on, the white balance returns to auto white balance. If you then press the WHITE BALANCE La button, the camcorder will remember your last setting.
- If you shoot with studio/video lighting, use the 🔅 (indoor) mode.
- During normal outdoor shooting, setting the camcorder to auto white balance may provide better results.










Using AE Shift

By controlling the level of the automatic exposure (AE) function, you can lighten or darken the image slightly. This allows you to compensate for backlit, overexposed scenes.

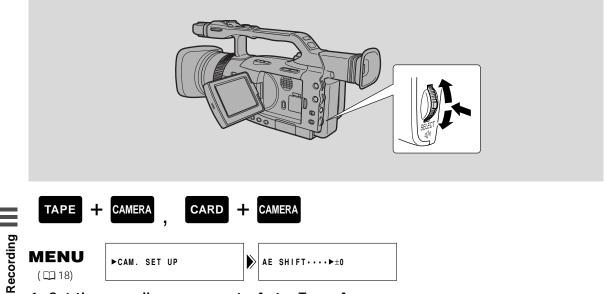

E

- 1. Set the recording program to Auto, Tv or Av.
- 2. Open the menu and select AE SHIFT.
- 3. Pull the SELECT dial up or down and select the desired level.
 - Levels are from -2 to +2, in 0.25 intervals (excluding -1.75 and +1.75).
 - The higher the setting, the brighter the image.
- 4. Close the menu.

Note:


• AE shift cannot be operated in the Easy, Manual, Sand & Snow or Spotlight recording programs.

Using the Custom Preset

You can adjust the colour gain, colour phase, sharpness and setup level for more creative recordings.

Setting the Custom Preset Functions

When you adjust the custom preset functions, be sure to check the picture before you start recording. You can save these settings under the CSTM PRESET button.



- 1. Open the menu and select CSTM PRESET.
 - The custom preset menu appears.
- 2. Select the function you wish to adjust.
- 3. Adjust the selected function.
 - See below details on each function.
 - Repeat steps 2 and 3 to adjust other functions as needed.
- 4. Close the menu.
 - The settings are saved until new changes are made.

Adjusting	g the Colour Gain			
MENU (🖽 18)	►CSTM PRESET		COLOR GAIN··►-□□+	
Adjust toward	d + for a deeper colour, a	ano	l toward – for a lighter c	olour.

Adjusting	g the Colour Ph	ase	
MENU (🖽 18)	►CSTM PRESET	COLOR PHASE ⋅ ► G□□R	
Adjust toward	d R for a redder pictu	ire, and toward G for a greener pict	ure.

Adjust toward + for a sharper picture, and toward - to soften the contour.



Adjusting the Setup Level MENU () 18) Setup Level

Adjust toward + for a brighter picture, and toward – for a darker picture.

đ


Activating the Custom Preset Functions

1. Turn the program selector to P.

2. Press the CSTM PRESET button.

• The picture reflects your preferences.


Using the Zebra Pattern

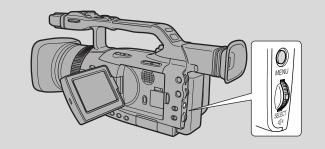

The zebra pattern is a series of diagonal stripes that appear in the viewfinder to highlight areas of overexposure. Use it as a guide to set the aperture (iris) and shutter speed.

You can also select the pattern appearance level from 80, 85, 90, 95, and 100%.

Selecting the Zebra Pattern Level



- 1. Open the menu and select CAM. SET UP.
- 2. Select ZEBRA LEVEL and select the level.
- 3. Close the menu.

Activating the Zebra Pattern TAPE + CAMERA , CARD + CAMERA



- 1. Open the menu and select CAM. SET UP.
- 2. Select ZEBRA LEVEL and set it to ON.
- 3. Close the menu.

Note:

• The camcorder does not record the zebra pattern, it is only shown in the display.

ier 🦯

Recording PC Screens and Other Screens Using CLEAR SCAN

You can use the Clear Scan function to record PC screens or other screens without black bands

E

TAPE CAMERA

MENU (🖽 18)

►CAM.	SET	UP	

۵ CLEAR SCAN · · ▶ 50.3Hz

1. Set the recording program to Tv or MANUAL.

caused by differences in the field frequencies of screens.

- 2. Pull the EXP dial down until CS appears in the display.
- 3. Open the menu and select CAM. SET UP.
- 4. Select CLEAR SCAN and adjust the frequency so that no black bands appear in the display.
 - You can select between 170 frequencies between 50.3Hz and 200.0Hz.
- 5. Close the menu.

Recording the Display Information

You can record the information (such as date and time) displayed on the LCD screen/viewfinder superimposed on the picture.

Unlike the data code, you cannot hide the display information at a later time.





1. Open the menu and select SYSTEM.

2. Select CHAR. REC, set it to ON and close the menu.

Note:

 Once you set it to ON, the information will remain recorded with the picture until you select OFF. Note that you cannot hide the information at a later time.



Recording



Playing Back a Tape

You can use the LCD screen for instant, on-the-spot playback. The camcorder also plays back the sound track via the built-in speaker ($\square 87$).

- When you play back a tape, you can also close the LCD panel with its screen side facing outward.
- When you're using the viewfinder to view playback, close the LCD panel.

For playing back your recordings on a TV, see p. 93. For using the wireless controller, see p. 27.

Note:

• To avoid accidental recording, make sure that you slide the tab on the cassette so that it exposes the hole (the switch position is usually labelled SAVE or ERASE OFF).



- 1. Slide the POWER switch to PLAY (VCR) and TAPE/CARD switch to TAPE.
 - The power indicator lights up green.
 - The confirmation beep sounds.
- 2. Load the cassette.

3. Press the ► (play) button to start playback.

- Open the cover to use the buttons on the handle.
- To end playback, press the 🔳 (stop) button.
- To wind the tape forwards, stop playback and press the ▶▶ (fast forward) button.
- To wind the tape backwards, stop playback and press the ◄◄ (rewind) button.
- If the playback picture is rough (mosaic-like noise), clean the video heads using a Canon DVM-CL Digital Video Head Cleaning Cassette or a commercially available digital video head cleaning cassette.

E



CARD TAPE

Other Playback Modes

Playback pause

Press the II (pause) button. To resume normal playback, press it again, or press the ► (play) button. The camcorder automatically goes into stop mode after about 5 minutes' playback pause.

Fast forward playback

To play back the recording at about 11.5 times normal speed, press and hold the \blacktriangleright (fast forward) button during normal playback or press and hold the \blacktriangleright (fast forward) button during normal fast forward.

Rewind playback

For reverse playback at about 11.5 times normal speed, press and hold the **44** (rewind) button during normal playback or press and hold the **44** (rewind) button during normal rewind.

Special Playback

Frame Advance

To play back frame by frame, press the +/ **II** button repeatedly during playback pause. Press and hold to play back continuous frame advance.

Frame Reverse

To play back in reverse frame by frame, press the –/**II** button repeatedly during playback pause. Press and hold to play back continuous frame reverse.

Slow Forward Playback

To play back at about 1/3 normal speed, press the SLOW \triangleright button during normal playback. Press the PLAY \triangleright button to return to normal playback.

Slow Reverse Playback


To play back in reverse at about 1/3 normal speed, press the –/◀II button and then the SLOW I► button during normal playback.

Press the PLAY \blacktriangleright button to return to normal playback.



Built-in Speaker and Headphone Terminal

The camcorder has a built-in speaker and a headphone terminal. You can listen to the sound during playback. Use the speaker or headphones when using the LCD screen for playback, and use headphones when using the viewfinder. The built-in speaker is monaural; use headphones for stereo sound.

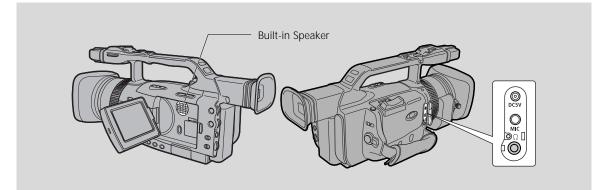

Adjust the speaker and headphone volume by pulling the SELECT dial up or down.

- Pull the SELECT dial up to increase the volume, and down to decrease the volume.
- A volume bar appears in the display to indicate the current volume. It disappears in 4 seconds.
- You can turn off the volume completely by pulling the SELECT dial down until OFF appears.
- You can also adjust the headphone volume separately from the built-in speaker.
- The levels you adjust for the built-in speaker and headphones are memorized separately. The camcorder retains the levels even if you slide the POWER switch to OFF.

Notes:


- The speaker turns off when you use headphones.
- Sometimes audio may sound distorted when the volume is turned up high. If this happens, turn down the volume.

ð

Displaying Date, Time and Camcorder Data (Data Code)

A data code containing the date and time the recording was made and other camcorder data (shutter speed and exposure settings) is automatically recorded on a special data section of the tape.

• Only the date and time appear in the data code when using a memory card.

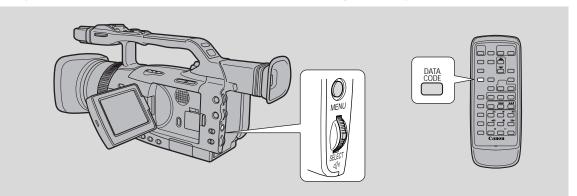

During TAPE PLAY (VCR) mode, the data code can be displayed or hidden while the camcorder is in play, slow or still mode.


Camcorder data may be displayed as "---" during fast forward, rewind, reverse playback, forward and reverse $\times 2$ playback.

Press the DISPLAY/DATA CODE button. When using a cassette, press it while the camcorder is in play, slow or still mode.

• Press it once to display, once more to hide it.

Selecting Date/Time

Select whether you want the date, the time, or both to show up on your data code display.




To change the date and time combination, open the menu and select DISP.SET UP. Then select D/TIME SEL., set it to DATE, TIME or DATE & TIME and close the menu.

Playback

Setting the Data Code

You can also choose to display the camcorder data (shutter speed and exposure settings) in the data code.



Open the menu and select DISP.SET UP. Then select DATA CODE, set it to DATE/TIME, CAMERA DATA or CAM. & D/T and close the menu.

DATA CODE (cassette D/TIME SEL.	Date/Time	Camera data	Date/Time & Camera data		
Date	1.JAN.2002	12dB F11 1/250	12dB F11 1/250 1.JAN.2002		
Time	12:00:00 AM	12dB F11 1/250	12dB F11 1/250 12:00:00 AM		
Date & Time	12:00 AM 1.JAN.2002	12dB F11 1/250	12dB F11 1/250 12:00 AM 1.JAN.2002		

Available data code combinations in TAPE PLAY (VCR) mode :


Only Date & Time display is available in CARD PLAY (VCR) mode.

Notes:

- The data code will read "---" in the following situations:
 - During playback of a blank section of tape.
 - If the tape was recorded before entering the date and time in the camcorder's memory.
 - If the tape was recorded on a camcorder without a data code function.
 - If noise or tape damage prevents the data code from being read.
- If a recording made on the XM2 is played back on a different DV camcorder, the data code may not be displayed correctly.
- The data code will appear in the display even if DISPLAYS (
 148) has been set to OFF through the menu.

Six-second Auto Date

The date can be displayed for 6 seconds when you start playback, or to indicate that the date or time zone of the recording has changed. The 6-second auto date automatically adjusts to the time zone you have selected.




To turn the 6-second auto date on, open the menu and select DISP.SET UP. Select 6SEC. DATE, set it to ON and close the menu.

Note:

• The 6-second auto date appears even if DISPLAYS is set to OFF in the menu and the data code is turned off.

Searching the Tape (Photo Search/Date Search/Index Search)

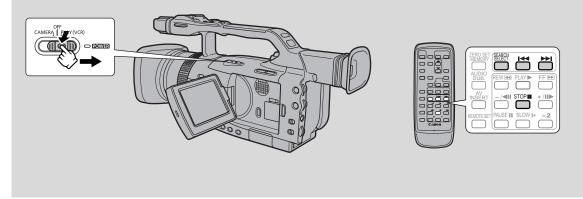

This allows you to move quickly through still images (photo search), between different days or areas of recording (date search), or index signals ($\square 57$) recorded anywhere on a tape (index search).




- Press the SEARCH SELECT button to select between photo/date/index search.
 PHOTO SEARCH, DATE SEARCH or INDEX SEARCH appears for 4 seconds.
- 2. Press the Id and ►►I buttons to move backwards or forwards through the still images, between different days of recording or recorded index signals.
 - Press once to move to the start of the previous/next still image, day or index on the tape.
 - You can press more than once to move to the corresponding still image, day or index (up to a maximum of 10 times), e.g. press the ►►I button 5 times to move forward 5 still images, days or index signals.
 - PHOTO SEARCH/DATE SEARCH/INDEX SEARCH appears in the middle of the display alongside the I◄ or ►►I mark and number to search through. You can change the direction easily by pressing the button for the opposite direction.

Notes:

- Press (stop) to stop searching.
- If you begin a search very close to the start of a recorded still image during photo search, the camcorder may skip straight past it.
- When you have set the time zone, date search also looks for the change in date based on the adjusted time.
- A date/time zone cannot be identified if the total recording time on that day/time zone was less than 1 minute.
- Date/index search playback may start slightly before or after the beginning of the located section.
- If the data code is not displayed correctly you will not be able to operate the date search correctly.

Returning to a Pre-Marked Position (Zero Set Memory)

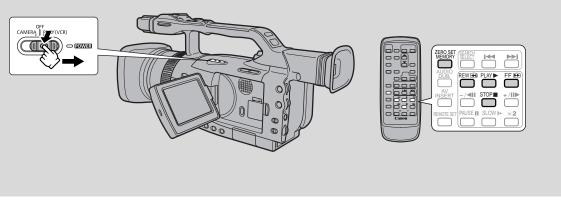

Use the wireless controller to mark a point on a tape to which you wish to return following the playback.



- 1. Press the ZERO SET MEMORY button on the wireless controller during playback at a point you wish to return to later.
 - The time code is replaced by a tape counter that is set to zero with the M indication.
 - Press the ZERO SET MEMORY button once more to cancel the zero set memory.
- 2. When you have finished playback, rewind or fast forward the tape. The tape stops automatically when it reaches the zero set position.
 - ◀◀RTN or RTN►► appears in the display.
 - The tape counter with M indication disappears from the display and the time code reappears.

Notes:

- The zero set memory may not function correctly when there is a break between recordings on the tape.
- You can also use zero set memory to mark a position on a tape in TAPE CAMERA mode. When you then play back the tape, pressing rewind will take you back to the pre-marked position.
- If you remove the tape while the zero set memory is set, the memory is cancelled and the tape counter reverts to time code.


Playback

Connections for Playback on a TV Screen

For higher picture quality, we recommend playing back recordings on a TV with an S (S1) terminal. If you connect the camcorder to a TV with an S1 terminal or the Video ID-1 system, recordings made in the 16:9 mode for wide screen TVs will be automatically played back in wide screen mode on the TV screen.


See your TV or VCR instruction manual for further details.

If your TV (or VCR) has a SCART terminal (without S (S1)-video)

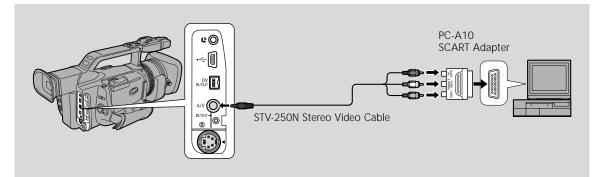


- Connect the PC-A10 SCART adapter to the TV or VCR's SCART terminal.
- Connect the camcorder to the adapter. Connect the camcorder using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal **L** (left). Connect the red plug to the red audio terminal **R** (right). Connect the yellow plug to the yellow video terminal **VIDEO**.
- If you are connecting the camcorder to a TV, set the TV/VIDEO selector on the television to **VIDEO**.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to LINE.

If Your TV (or VCR) Has an S-video Input Terminal

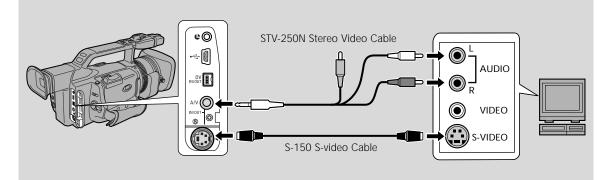

- Use the S-150 S-video Cable to connect the S-video terminals. Use the STV-250N Stereo Video Cable to connect the AUDIO terminals. Connect the white plug to the white AUDIO terminal **L** (left). Connect the red plug to the red AUDIO terminal **R** (right). Do not connect the yellow plug.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to LINE.

If Your TV (or VCR) Has Audio/Video Input Terminals

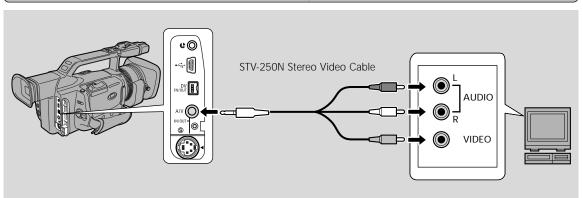


- Connect the camcorder using the STV-250N Stereo Video Cable. Connect the white plug to the white audio terminal L (left). Connect the red plug to the red audio terminal R (right). Connect the yellow plug to the yellow video terminal VIDEO.
- Set the TV/VIDEO selector on the television to VIDEO.
- If you are connecting the camcorder to a VCR, set the input selector on the VCR to LINE.

Notes:

- If you are going to use the TV as a monitor while you are shooting, remember to keep the TV volume turned down as long as the camcorder's audio terminals are connected to prevent feedback.
- If your TV is already connected to a VCR, you can connect the camcorder to the VCR instead of the TV. Follow the instructions above.

Е

Editing to a VCR

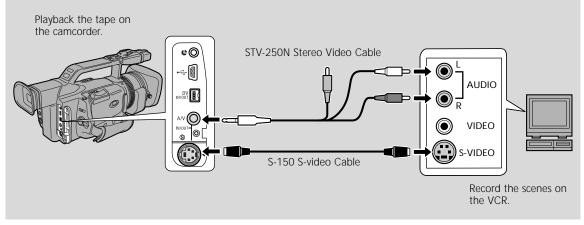

By connecting the camcorder to a VCR, you can edit your recordings in order to remove unwanted scenes, or to combine different shots to create your own video productions.

Preparations

Editing

- 1. Connect the camcorder to the VCR.
 - See "Connections for Playback on a TV screen" (
 93).
- 2. Prepare the TV and VCR.
 - Turn on the TV and set the TV/VIDEO selector to VIDEO.
 - Turn on the VCR, and set its input selector to LINE. Load a blank cassette, and put the VCR in record pause mode.
 - See your TV and VCR instruction manuals for details.
- 3. Slide the POWER switch to PLAY (VCR) and the TAPE/CARD switch to TAPE.

1.	Find a point on your recorded	cassette	slightly	before	the section	you	wish	to
	COPV.							

- 2. Start to play it back while you monitor the picture on the TV.
- 3. Start recording on the VCR as soon as the section you wish to copy appears on the screen.
- 4. Pause the VCR at the end of the section you wish to copy, then stop playback on the camcorder.
- 5. Repeat steps 1 to 4 until your edited recording is complete.

Note:

• The quality of the edited tape will be slightly lower than that of the original.


Editing

ii

Е

(LANC) terminal

The **C** terminal allows you to connect compatible devices such as remote controllers that are **C** LANC compatible. Some buttons on editing equipment may operate differently from those on the camcorder.

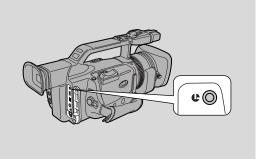

Notes:


- C (LANC) is a trademark. It stands for Local Application Control Bus System.
- We cannot guarantee the results when connecting to equipment not bearing the LANC **L** symbol.

Editing

Dubbing to/from a Tape with Digital Video Equipment

Digital video equipment fitted with the DV terminal allows you to edit, copy and transfer data digitally, with virtually no generation loss in image and sound quality. The DV terminal is for both line-in and line-out, since a single DV cable can handle data in both directions.

- If a digital VCR is connected and an anomalous signal is sent from the VCR, the images recorded on the tape may also be anomalous (although it may not appear so on the TV image), or not recorded at all.
- You cannot dub tapes recorded with the copyright protective signal.

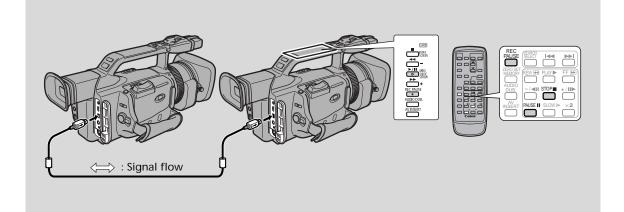

Preparations

Example dubbing to the camcorder

- 1. Connect the camcorder and the other digital device.
 - Connect the Canon CV-150F DV cable (optional).
- 2. Prepare the other device.
 - Turn on the power and load a recorded cassette.
- 3. Slide the camcorder's POWER switch to PLAY (VCR) and the TAPE/CARD switch to TAPE.
 - DV IN appears in the display.
- 4. Load a blank cassette.

Editing

Dubbing

E

1. Find a point on your recorded cassette slightly before the section you wish to copy and set it to playback pause mode.

2. Press the camcorder's REC PAUSE button.

- The camcorder enters record pause mode.
- 3. Start playback on the other digital device while you monitor the picture.
- Press the ►/II (play/pause) button on the camcoder or the PAUSE II button on the wireless controller.
 - Recording starts.
- 5. When you get to the point where you wish to stop recording, press the stop button or the pause button.

• Recording stops.

6. Stop playback on the other device.

Notes:

- If the cable is not connected properly, or if the cable is not connected when you press REC PAUSE, the camcorder displays the caution "CHECK THE DV INPUT." An anomalous image may also flash onto the screen.
- Blanks between recordings on the playback tape are recorded as anomalous images on the tape that is being recorded to.

Concerning Copyrighting

Copyright precaution

Certain pre-recorded video tapes, films and other materials, as well as some television programmes are copyrighted. Unauthorized recording of these materials may violate copyright protection laws.

Copyright signals

When playing back:

If you try to play back a tape that contains copyright control signals for the protection of software, "COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED" appears in the display for a few seconds and then the camcorder displays a blank blue screen; you cannot view the contents of the tape.

When recording:


If you try to record from software that contains copyright control signals for the protection of software, "COPYRIGHT PROTECTED DUBBING RESTRICTED" appears in the display; you cannot record the contents of the software.

You cannot record copyright protection signals to a tape using this camcorder.

Recording from a VCR, TV or Analog Camcorder (Analog Line-in)

You can record a video played on your VCR or analog camcorder (for digital camcorder, see p. 97) or a TV program onto a tape in the XM2, if the TV or other device has audio/video outputs.

- If an anomalous signal is sent from the TV or VCR, the images recorded on the tape may also be anomalous (although it may not appear so on the TV image), not recorded at all, or COPYRIGHT PROTECTED DUBBING RESTRICTED may appear in the viewfinder.
- You cannot dub tapes recorded with the copyright protective signal.

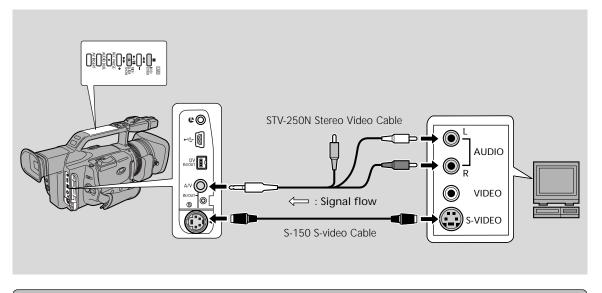

Preparations

- 1. Connect the camcorder to the VCR, TV or another camcorder.
- 2. Prepare the device. (Example connecting to a VCR)
 - Set the TV/Video selector on the television to Video. For further details, see "Connections for Playback on a TV Screen" (
 93).
 - Turn on the VCR. Load your recorded cassette, and put the VCR in playback pause mode.
 - See your TV and VCR instruction manuals for details.
- 3. Slide the camcorder's POWER switch to PLAY (VCR) and TAPE/CARD switch to TAPE.
- 4. Load a blank cassette.

Editing

Dubbing

1. Find a point on your recorded cassette slightly before the section you wish to copy and set it to playback pause mode.

i

- 2. Press the REC PAUSE button.
 - S-video and audio IN/OUT terminals work as input terminals.
 - The camera enters record pause mode.
- 3. Start playback on the other device or turn on the TV to see the desired program while you monitor the picture.
- 4. Press the ►/II (play/pause) button on the camcorder or the PAUSE II button on the wireless controller.
 - Recording starts.
- 5. When you get to the point where you wish to stop recording, press the stop button or the pause button.
 - Recording stops.
- 6. Stop playback on the other device.

Note:


Editing

• You can monitor the picture on the LCD screen/viewfinder.


Digitally Outputting Analog Video and Audio Signals (Analog-Digital Converter)

Connecting the camcorder to your VCR or 8 mm video camera allows conversion of recorded analog video and audio signals to digital signals in an instant. The digital signals can be output to the other equipment with a DV terminal. The camcorder's DV terminal works exclusively as an output terminal.

- There may be cases where analog-digital conversion cannot be done properly, depending on the signals output from the connected equipment.
 For example: Signals that include the copyright protective signal, or anomalous signals such as ones that include ghost signals, etc.
- You are recommended to use power from a household power source with a power adapter.
- Do not operate with a cassette inserted to the camcorder.
- Turn off the power of all equipment before performing connections.
- Refer also to the instruction manuals of the other equipment connected.

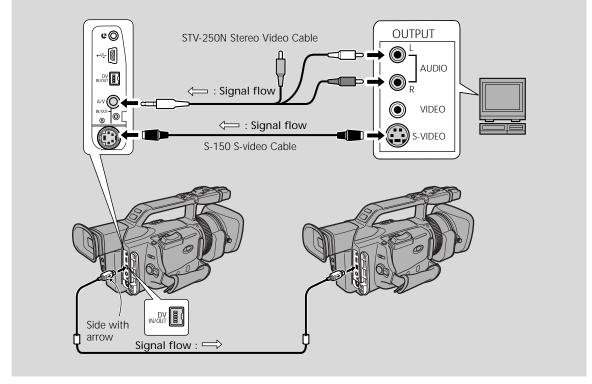

Above illustration shows the connection using a S-video cable. You can also connect the yellow plug to the VIDEO terminal instead.

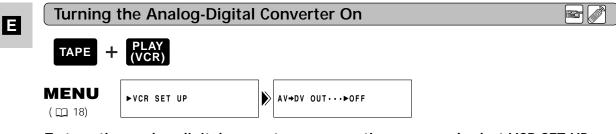


To turn the analog-digital converter on, open the menu and select VCR SET UP. Then select AV \Rightarrow DV OUT, set it to ON and close the menu.

Caution:

- For normal use, set AV → DV OUT to OFF through the menu. If it is set to ON, you cannot input digital signals through the camcorder's DV terminal.
- If you attempt to perform analog-digital conversion with a cassette inserted to the camcorder, the converted signals may not be output to the connected digital video equipment.
- When connecting to a PC equipped with a DV terminal, you may not be able to transfer converted signals to your PC, depending on the software you are using, and the specifications of your PC and its settings.

Recording Over Existing Scenes (AV Insert Editing)

You can insert and replace images/audio recorded on the camcorder's tape with images/audio recorded with other video equipment using analog line-in or DV terminals. Original video and audio will be replaced with the new video and audio.

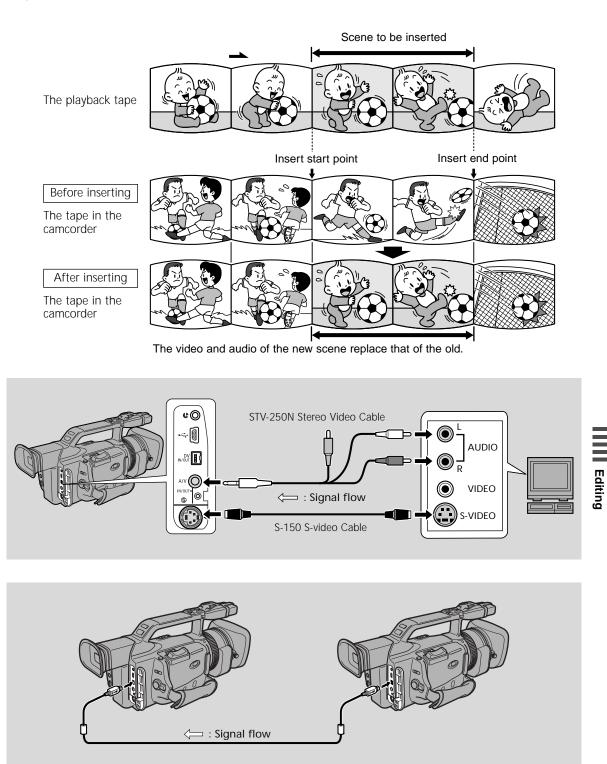

Preparations

Ε

The tape in the camcorder:

When using the XM2's AV insert function, only use to tapes recorded in SP mode with continuously recorded time codes.

If there are non-recorded portions or portions recorded in LP mode on the tape, recording will stop.

The playback tape:

Use only tapes without non-recorded portions.

If there are non-recorded portions or changes in the recording mode, you may not be able to insert AV correctly.

You cannot insert AV in the following cases:

- The playback tape has been poorly recorded.
- During special playback: fast forward playback, rewind playback or slow playback etc. (analog only).

TV:

You cannot insert AV from a TV program with anomalous synchronized signals, such as when the program itself received poor signals.

Example recording from a VCR

- 1. Connect the camcorder to the VCR.
- 2. Prepare the VCR and TV.
 - Set the TV/Video selector on the television to Video. For further details, see "Connections for Playback on a TV Screen" (□93).
 - Turn on the VCR and load a recorded cassette.
 - See your TV and VCR instruction manuals for details.
- 3. Slide the camcorder's POWER switch to PLAY (VCR) and load a recorded cassette.
 - Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).
- 4. Slide the TAPE/CARD switch to TAPE.

Editing

Editing

- 1. On the VCR, locate a point 3 seconds before the scene to be inserted. Set the VCR to playback pause mode.
- 2. On the camcorder, press PLAY and locate the recording start point. Set the camcorder to playback pause mode.
 - You can use the playback buttons on the body of the camcorder or the special playback functions on the wireless controller in the same way as in playback mode.
- 3. Press the AV INSERT button.
 AV INSERT and ●II appear in the display.
- 4. Play back the tape in the VCR.
- 5. To start inserting, press the ►/II (play/pause) button on the camcorder.
 ●II changes to ●.
- 6. To stop inserting, press the STOP button on the camcorder.
 - Inserting stops and AV INSERT disappears from the display. The camcorder returns to stop mode.
 - If instead of pressing STOP you press ►/II (play/pause), the camcorder returns to the AV insert pause mode.
 - If you set the zero set memory at the position on the tape where you wish to stop inserting, every time you return to that point, the camcorder will cancel its AV inserting and enter stop mode.
- 7. Stop playback on the VCR.

Audio Dubbing


iii 🏈

Е

You can add sound to the original sound on a pre-recorded tape from audio devices (AUDIO IN) or with the internal or external microphone (MIC. IN). The original sound will not be erased. If there are non-recorded portions on the tape, or portions recorded in a mode other than SP mode, or with 16-bit or 12-bit 4-channel sound, dubbing will stop. If your tape has not been recorded in SP mode with 12-bit sound, we recommend dubbing your original tape onto a blank tape using the XM2's analog line-in function, then dubbing audio onto the new tape. Make absolutely sure to set the audio mode of the new tape to 12-bit and the recording mode to SP.

Add sound to tapes that have been recorded with this camcorder in SP mode with 12-bit sound.

To connect other audio devices:

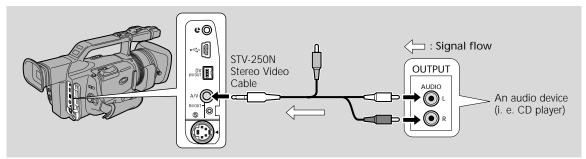


Note:

• No video picture will be output via the AV terminal. Check the picture on the LCD screen, viewfinder or a TV connected to the S-video terminal. Check the sound using the speaker or headphones.

To connect an external microphone:

Editing

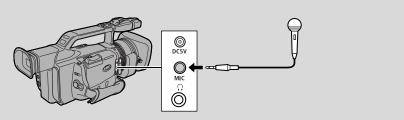


Notes:

- When using the built-in microphone for dubbing, make sure that no cables are connected to the MIC terminal.
- If you connect a TV to the S-video terminal, you can monitor the picture on the TV screen. Use headphones to check the sound.

Preparations

Turn the camcorder's POWER switch to PLAY (VCR) and move the camcorder's TAPE/CARD switch to TAPE. Load a recorded cassette.

• Make sure the REC/SAVE tab on the cassette has been slid to REC (closed position).

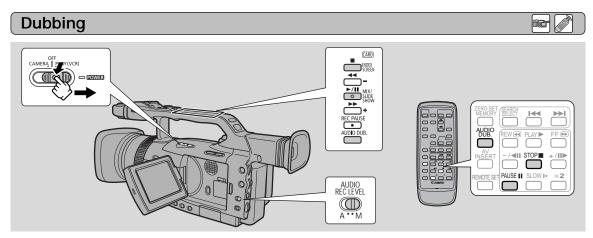

Do not connect/disconnect any cables to/from the camcorder when dubbing audio or preparing to dub audio.



- 1. Open the menu and select VCR SET UP.
- 2. Select AUDIO DUB.
- 3. Select AUDIO IN or MIC. IN and close the menu.
- 4. Locate the point where you wish to start audio dubbing, then press the ►/II button or the PAUSE button.
 - You can use the playback buttons on the camcorder or the special playback functions on the wireless controller in the same way as in playback mode.
 - The camcorder becomes set to playback pause mode.

5. Press AUDIO DUB.

Downloaded From CamcorderManual.com Canon Manuals

• AUDIO DUB. and ●Ⅱ appear on the display.

Ε

Editing

6. Adjust the input signal level.

AUDIO IN

Automatic adjustment: 1.Slide the REC LEVEL switch to A. Manual Adjustment:

1.Slide the REC LEVEL switch to M.

- 2.Turn the L/R LEVEL dials to adjust the recording level.
- Adjust it that the level slightly exceeds the 12 point.
- Adjust the balance by turning the L/R LEVEL dial if necessary.
- Even if you turn down the LEVEL dial, the sound may be distorted if the input level is still too high. Set the audio attenuator (AUDIO ATT) to ON in the VCR SET UP submenu of the VCR MENU.

MIC IN

You can select the microphone sound and adjust the level when using the built-in microphone (\Box 106). You can only adjust the recording level when using an external microphone.


7. Press the PAUSE button (and start play on the other audio device if AUDIO IN).

- Audio dubbing starts.
- If MIC. IN, direct your voice into the microphone.
- ● II changes to ●.
- 8. When you get to the point where you wish to stop dubbing, press the STOP button (and then stop play on the other audio device if AUDIO IN).
 - Audio dubbing stops and AUDIO DUB. disappears from the display.
 - The camcorder returns to stop mode.
 - You can also set zero set memory (192) at the place you wish to stop audio dubbing, then every time you return to that position, audio dubbing will stop.
 - If instead of pressing STOP you press PAUSE, the camcorder will return to the playback pause mode.

Notes:

- You cannot use the DV terminal while adding sound.
- You might want to adjust the audio mix (\square 109) when playing back a tape with added sound.
- There may be a loss of sound quality if you add sound to a tape recorded on a camcorder other than the XM2.
- After adding sound 3 or more times to the same place on a tape, there may be some loss in sound quality.

Setting the Audio Mix

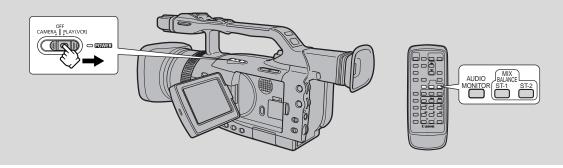

When you play back a tape that was recorded in 12-bit mode, you can set the audio output to stereo 1 (the original sound), stereo 2 (any new sound, dubbed to the tape after recording), or mix the balance between the two.

• Audio from the 16-bit mode only contains stereo 1 sound and so you cannot/do not need to select the audio mix. The same applies to the 12-bit stereo 1 mode, unless new sound has been added post-recording.



Select the output channel.

- Press AUDIO MONITOR on the wireless controller.
- Starting with the last selected setting, 4 settings appear as you push the button:
 - STEREO1 for just stereo 1.
 - STEREO2 for just stereo 2.
 - MIX/FIXED for an equal mix of stereo 1 and 2.
- MIX/VARI. (mix variable) for when you want to mix the balance between stereo 1 and 2.
- If you choose MIX/VARI., you can go on to mix the balance.
- Use the ST-1/ST-2 buttons to mix the balance. A bar showing the balance appears on the screen for 4 seconds.

Note:

• When you have chosen the output, STEREO1, STEREO2, MIX/FIXED or MIX/VARI. is shown in the top left of the display for a few seconds. If you turn the power off, the output becomes set to STEREO1.



E

Selecting Audio Output Channels

When you play back a tape whose audio has been recorded on multiple channels, you can change the output channels of that sound.



- 1. Load a tape recorded with multiple-channel audio.
- 2. Open the menu and select VCR SET UP. Then select OUTPUT CH, set it to the desired setting and close the menu.
 - Refer to the following list.


	Playback Sound		
OUTPUT CH Setting	Tape Recorded With Stereo Sound	Tape Recorded On Multiple Channels	
L/R	L+R channels	main + sub	
L/L	L channel only	main only	
R/R	R channel only	sub only	

E

Connecting to a PC Using a DV Cable

By using a DV cable and connecting the camcorder to a PC equipped with a DV terminal conforming to IEEE 1394/DV compatible capture board, you can transfer images taken with the camcorder to your PC.

- While connected, it is recommended that you power your camcorder from a household power socket using the power adapter.
- Turn off the power of both the camcorder and the PC before connecting.
- Optional software necessary.
- For transferring still images from a memory card to your PC using a USB cable, see p. 132.

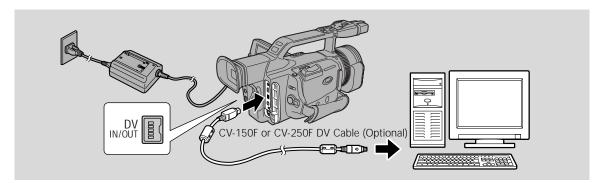

Notes:

- Operation may not work correctly, depending on the software you are using, and the specifications of your PC and its settings.
- Refer to the respective software instruction manual for further details.

Caution:


• Do not disconnect the DV cable while data is being transferred to the PC.

Memory Card Introduction

The camcorder can record, store and manage still images on 2 types of memory cards: the SD Memory Card (supplied with the camcorder) or the MultiMediaCard (commercially available). The SD Memory Card has the protect switch to protect your recordings from accidental erasure. The SD Memory Card and the MultiMediaCard fit into the same slot.

You can do the following with a memory card:

- Record still images (116)
- View still images: Single (1118), Slide show (1119), Index screen (1119)
- Select the quality of images (\square 113)
- Protect important still images against accidental erasure, print mark and erase still images (\$\box_120-126\$)
- Combine titles recorded onto the memory card with camcorder recordings (title mix) (
 127)
- Copy multiple still images from card to tape (1130)
- Transfer memory card still images to a PC (\square 132)

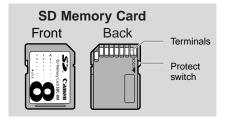

You can use most of the camcorder's functions when recording to a memory card, such as the various recording programs (\square 50), self-timer (\square 69), shutter speed (\square 75), white balance (\square 78) and other manual adjustments. Available functions are marked with the **CARD** + **CARED** +


CARD + PLAY ICONS.


● If you use memory cards other than the supplied one, make sure to format them with the camcorder (□131).

Important

- Inserting or removing the memory card without first setting the POWER switch to OFF can result in data damage.
- This camcorder uses only SD Memory Cards (*S* → *) or MultiMediaCards. You cannot use any other types of memory cards.
- * S> logo is a trademark.

Inserting and Removing the Memory Card

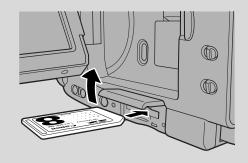

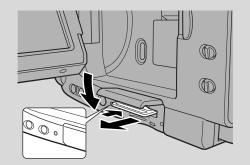

1. Turn the POWER switch to OFF.

- When removing the memory card, make sure the card access indicator is off.
- 2. Open the memory card compartment cover in the direction of the arrow.

3. Insert or remove the memory card.

- Push the memory card all the way in.
- Remove the memory card by pushing the card in and letting it spring out.

Do not attempt to pull the memory card out without first pushing it in.

4. Close the memory card compartment cover.


• When inserting the memory card, do not attempt to close the cover forcefully without the memory card properly inserted.

Notes:

- When you set the camcorder to CARD PLAY (VCR) mode, the last image recorded appears. If there are no images recorded on the memory card, NO IMAGES appears in the display.
- Do not touch the memory card terminals.

Selecting the Image Quality

Still image Quality: Fine, Standard




To change the image quality, open the menu and select CARD SET UP. Then select QUALITY, set it to STANDARD and close the menu.

• The image quality may not differ between the settings depending on the still image.

Selecting the Image Size

Image Size: 1488×1128 pixels/640 \times 480 pixels

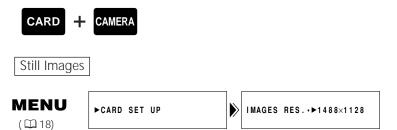

To change the image size of a still image, open the menu and select CARD SET UP. Then select IMAGES RES., set it to "640 \times 480" and close the menu.

• "640" appears in the display.

Maximum Number of Still Images on an 8 MB Memory Card and Their File Sizes

Image Size	1488 × 1128		640 × 480	
Image Quality	No of Images	File Size per Image	No of Images	File Size per Image
Fine	Approx. 6 images	860 KB	Approx. 47 images	125 KB
Standard	Approx. 10 images	580 KB	Approx. 93 images	65 KB


* The actual number varies on the shooting conditions and subjects.

Notes:

- Still images are compressed and recorded in the JPEG (Joint Photographic Experts Group) format.
- Refer to p. 117 for memory card display.
- The remaining number of images that can be recorded on the memory card may sometimes decrease by 2 images at once.

Card Access Display

The operating states of the memory card are shown in the centre of the display.



To turn the card access display off, open the menu and select DISP.SET UP. Then select CARD ACCESS, set it to OFF and close the menu.

B

File Numbers

The still images are automatically assigned file numbers from 0001 to 9999 and stored in folders of 9999 images each. Each folder is numbered from 100 to 999 and recorded on the memory card.

Set the image file numbers so that they reset each time a new memory card is inserted, or so that they count up continuously.

CONTINUOUS


When the file numbers are set to CONTINUOUS, each image is assigned a different number, avoiding duplication of numbers. If a memory card already contains files, the lowest available number file will be assigned to the added file. This is convenient when you wish to manage your images on a PC. We recommend keeping the file numbers set to CONTINUOUS.

RESET

Each time you insert a new memory card, the file number resets to its default value (100-0001). If the memory card already contains files, the lowest available file number in the folder with the highest number will be assigned to the added file.




To change the file numbering, open the menu and select CARD SET UP. Then select FILE NOS., set it to RESET and close the menu.



Makes the sound of a shutter being released when a still image is recorded to a memory card.




►CARD SET UP



To turn the shutter sound off, open the menu and select CARD SET UP. Then select SHTR SOUND, set it to OFF and close the menu.

Using a Memory Card

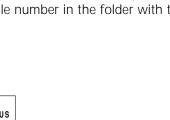

Three images are

100

recorded on the card.

100-0001

100-0002

100-0003

2

100-0001


When you insert a new empty

card and take a picture.

100-0004

100

Recording Still Images onto a Memory Card

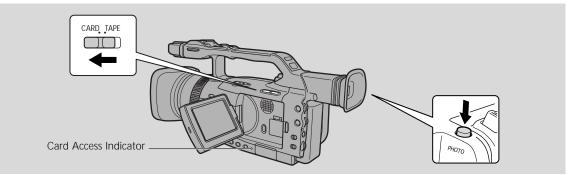

You can record still images onto the memory card.

• Moving pictures cannot be recorded onto a memory card.

- Memory cards cannot record audio.
- When you are using an SD Memory Card, make sure the protect switch is set to allow recording.

Make sure a memory card with enough memory available is inserted into the camcorder. While the card access indicator flashes, do not disconnect the power source or remove the memory card. Doing so could result in data damage.

1. Slide the POWER switch to CAMERA and the TAPE/CARD switch to CARD.

- The remaining number of images that can be recorded on the memory card, and other information appear in the display.
- The camcorder will turn itself off if you are using a battery and do not operate the camcorder for more than about 5 minutes. Set the Standby lever to STANDBY.

2. Press the PHOTO button halfway and hold it.

- Exposure is locked.
- During autofocus flashes white in the display as the camcorder adjust the focus and it is displayed continuously as a green mark when the camcorder is ready to take the still image.

3. Press the PHOTO button fully down to record the still picture.


- O disappears from the display. The shutter sound sounds and simultaneously the display appears to close for an instant as if it were a shutter releasing.
- The card access indicator flashes and the card access display appears in the display.

Notes:

Using a Memory Card

- To use the self-timer (1169), set the self-timer in the menu or on the wireless controller before step 3, and then press the PHOTO button fully down.
- The wireless controller's PHOTO button has no half-way setting. Press the button fully and the camcorder immediately takes the image.

The indicators that appear in the display when recording to a memory card:

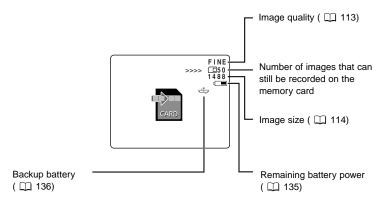


See also "The indicator that appear on the LCD screen when LCD mirror is turned on" (\square 42).

Memory Card Indication:

ø	flashing in red:	No card
—	nashing in rou.	NO Cara

- □ 6 in green: 6 or more images
- □ 5 in yellow: 1 to 5 images
- 0 in red: No more images
- Ø 6 flashing in red: SD memory card is protected
- Image: A standard of the st
- All indicators light in green when a memory card is played back.
- The remaining capacity indication varies depending on the recording condition. The remaining number may sometimes not decrease or decrease by 2 images at a time.

Playing Back a Memory Card

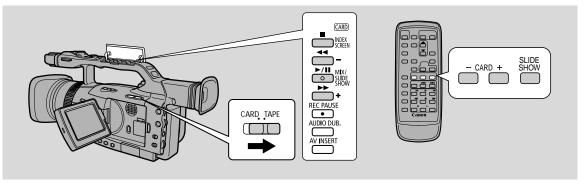

Play back and view still images recorded on a memory card. (For details on connecting to a TV, see "Connections for Playback on a TV Screen" ($\square 93$)

• The camcorder may not be able to copy or play, etc., images recorded with a non-Canon camcorder.

Do not change the data recorded on a memory card.

- You may not be able to play back the following still images correctly on this camcorder:
 - Still images that have not been recorded with this camcorder but downloaded from a PC.
 - Still images that have been recorded with this camcorder but have subsequently been enhanced on a PC.
 - Still images whose image file names have been changed on a PC.

There are 3 ways to view still images:

- Single image
- Slide show: One after the other automatically in order of recording
- Index screen: Six images at once

When the camcorder is in playback pause mode, you can use the card jump function to move quickly through still images recorded anywhere on a memory card to find a still image you wish to view (Card Jump function).

Make sure a memory card that has images recorded on it is inserted into the camcorder. While the card access indicator flashes, do not disconnect the power source or remove the memory card. Doing so could result in data damage.

Single Image

1. Slide the POWER switch to PLAY (VCR).

2. Slide the TAPE/CARD switch to CARD.

• The last image recorded appears in the display.

3. Search for the desired still image by pressing the CARD +/- buttons.

- Press + to view the next image and to view the previous image.
- Pressing + at the last image will take you to the first image. Pressing at the first image will take you to the last image.

• Card Jump Function

You can jump from the current image to the desired image of unadjacent image number without displaying the images one by one.

The numbers shown in the upper right corner in CARD PLAY (VCR) mode indicate the image number of the current still image and the total number of still images on the memory card.



With a still image in the display, press and hold the CARD +/- button.

- Press the + button to jump forwards through the images and press the button to jump backwards.
- The image number moves forwards or backwards.
- When you release the button, the still image to which the currently shown number is assigned, appears in the display.





With a still image in the display, press the MIX/SLIDE SHOW button.

• The still images are played back one after another.

To stop the slide show, press the MIX/SLIDE SHOW button.


• The slide show starts or stops each time you press the SLIDE SHOW button.

Index Screen

Up to 6 images appear at once so you can search quickly for an image.



1. With a still image in the display, press the INDEX SCREEN button.




- Up to 6 images appear in the display.
- 2. Select a still image by pressing the SELECT dial or the CARD +/- buttons.
 - A red frame appears around the selected image.
 - Pull the SELECT dial up to move to the next image and down to move to the previous image.
 - Pulling the SELECT dial up at the last image displays the next index screen. Pulling the SELECT dial down at the first image displays the previous index screen.
 - You can also use the CARD +/- button to switch index screen. Press the CARD button to display the previous index screen and the CARD + button to display the next index screen.

3. Press the INDEX SCREEN button with the frame on the selected image.

• The selected image appears in full size of the display.

Settings of the Still Images Recorded on a Memory Card

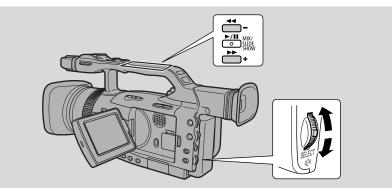

You can easily erase unwanted still images while viewing them, protect them from accidental erasure, or mark them for printing. (File Operation)

● Preventing Accidental Erasure (Protect ∽)

Select important images and protect them from accidental erasure.

- If a memory card is formatted, however, all images, including protected images, will be permanently erased.
- 1. CARD + PLAY \rightarrow File Operation menu SINGLE (\square 121)
- 2. CARD + PLAY → Card Operations submenu INDEX (□ 122)

● Marking a Still Image for Printing (Print Mark ト)

An image on a memory card must be marked before it can be printed. The camcorder supports the DPOF (Digital Print Order Format) print format. Images can be automatically printed on a DPOFsupporting Canon printer.

There are 3 ways to mark a still image for printing.

To mark an image for printing or erase print marks one at a time

- 1. **CARD** + **PLAY** \rightarrow File Operation menu **SINGLE** (\square 121)
- 2. CARD + (VCR) \rightarrow Card Operations submenu (INDEX) (\square 123)

To erase all print marks

E

3. CARD + PLAY → Card Operations submenu SINGLE (□ 124)

Erasing Still Images

Erase images singly or all at once.

- You cannot erase protected images. Cancel image protection first in order to erase an image.
- Erase images with caution. Once an image has been erased it cannot be restored.

To erase images one at a time

Using a Memory Card

1. CARD + PLAY \rightarrow File Operation menu SINGLE (\square 121)

To erase images one at a time or erase all images on the memory card at once

2. CARD + $\frac{\text{PLAY}}{\text{VCR}}$ \rightarrow Card Operations submenu SINGLE (\square 125)

SINGLE: When playing back an image in CARD PLAY (VCR) mode

INDEX: When displaying an index screen in CARD PLAY (VCR) mode

File Operation (FILE OPER.)

CARD + PLAY (VCR)

- 1. With an image in the display, press the SELECT dial in to open the FILE OPER. menu.
 - PROTECT , PRINT MARK •, and IMAGE ERASE settings appear.
 - If you select *ERETURN*, the menu disappears from the display.

To protect an image

2. Select PROTECT ~ and press the SELECT dial in.

- The On protect mark appears on the image, and the image cannot be erased.
- Press the SELECT dial again to cancel it.
- If you select *ERETURN*, the menu disappears from the display.
- To cancel image protection, select PROTECT On and press the SELECT dial in. On disappears and now you can erase this image.

To mark a image for Printing (Print Mark)

2. Select PRINT MARK IN and press the SELECT dial in.

- The **b** print mark appears on the image.
- Press the SELECT dial again to cancel it.
- If you select *ERETURN*, the menu disappears from the display.
- To cancel a print mark, select PRINT MARK 🖒 and press the SELECT dial in. 🆒 disappears.

To erase the image

2. Select IMAGE ERASE and press the SELECT dial in.


- ERASE THIS IMAGE? NO YES appears in the display.
- If you select *ERETURN*, the menu disappears from the display.

3. Select YES and press the SELECT dial in.

- The image is erased.
- One image after the erased image appears.



Preventing Accidental Erasure (Protect)

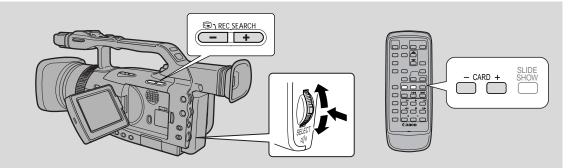

This section describes how to protect the still image from the Card Operation submenu when displaying an index screen in CARD PLAY (VCR) mode (including the way to cancel the setting). You can also protect a still image through the File Operation menu (\square 121).

Protecting an Image While Viewing an Index Screen



Make sure a memory card that has images recorded on it is inserted into the camcorder.

1. With an image in the display, press the INDEX SCREEN button.

- Up to 6 images appear in the display.
- Select the image that you wish to protect (Index Screen 🛄 119).

2. Open the menu and select CARD OPER.

3. Select ➡ PROTECT ╺-.

4. Press the SELECT dial in.


- The **O**_m protect mark appears on the image, and the image cannot be erased.
- Press the SELECT dial again to cancel it.
- 5. Close the menu.

Note:

 To cancel image protection, select the protected image and press the SELECT dial in. The On protect mark disappears.

Ε

Marking a Still Image for Printing (Print Mark)

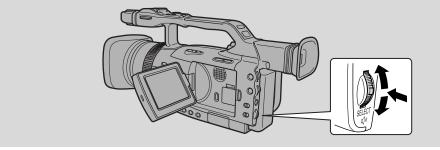


This section describes how to mark a still image for printing from Card Operation submenu in CARD PLAY (VCR) mode (including the way to cancel the setting).

- When displaying an index screen, you can mark the still image for printing.

- When playing back a single image, you can erase all print marks.

You can also mark a still image for printing through File Operation menu (11121).

Marking a Still Image for Printing While Viewing an Index Screen



Make sure a memory card that has images recorded on it has been inserted into the camcorder.

1. With a still image in the display, press the INDEX SCREEN button.

- Up to 6 images appear in the display.
- Select the image that you wish to mark for printing (Index Screen \square 119).

2. Open the menu and select CARD OPER.

- 4. Press the SELECT dial in.
 - The **b** print mark appears next to the image.
 - Press the SELECT dial again to cancel it.


5. Close the menu.

Notes:

- To cancel a print mark, select the print-marked image and press the SELECT dial in. The r print mark disappears.
- If there are a large number of images recorded on the memory card, it may take time for a print mark to appear on an image.

Using a Memory Card

E

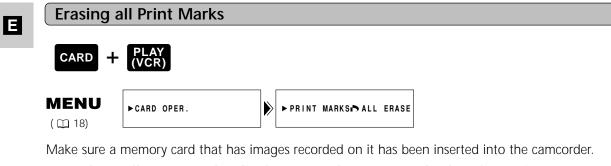

- 1. With a still image in the display, open the menu and select CARD OPER.
- 2. Select PRINT MARKS IN ALL ERASE.
 - ERASE ALL PRINT MARKS ▶? YES NO appears in the display.
- 3. Select YES.
 - The **b** print mark disappears from the image.
- 4. Close the menu.

Using a Memory Card

Erasing Still Images

This section describes how to erase still images from the Card Operation submenu when playing back a single image in CARD PLAY (VCR) mode.

You can also erase a still image through the File Operation menu (\square 121).

$(\square 18) \xrightarrow{\text{PLAY}}_{\text{(VCR)}}$

Make sure a memory card that has images recorded on it is inserted into the camcorder.

To erase still images one at a time

1. Select the still image you wish to erase.

- Use the index screen (1119) or card jump function (1119) if necessary and make sure the image you wish to erase fills the display.
- If you are displaying the index screen, press the INDEX SCREEN button after selecting the image. The image you selected fills the whole display.

2. Open the menu and select CARD OPER.

3. Select IMAGE ERASE.

- CANCEL, SINGLE and ALL settings appear.
- To cancel erasing, select CANCEL and close the menu.

4. Select SINGLE.

• ERASE THIS IMAGE? NO YES appears in the display.


5. Select YES.

- The image erases and the previous image appears for erasing.
- To erase another single image, move to that image with the CARD +/- buttons, and select YES.
- If the image you are trying to erase is a protected image, YES appears in purple and is unselectable.
- If you select NO, you return to step 4.

6. Close the menu.





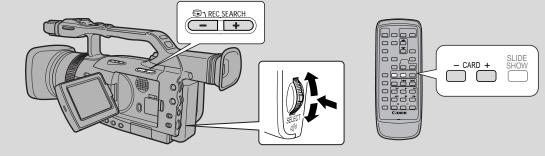

Е

To erase all still images in a folder

1. Open the menu and select CARD OPER.

2. Select IMAGE ERASE.

- CANCEL, SINGLE and ALL settings appear.
- To cancel erasing, select CANCEL and close the menu.

3. Select ALL.

• ERASE ALL IMAGES? [EXCEPT FOR 🗣 IMAGES] NO YES appears in the display.

4. Select YES.

- All images in the folder of the displayed image except the protected ones are erased.
- If you select NO, you return to step 2.

5. Close the menu.

Combining Images and Recording Them onto a Tape (Title Mix)

Combine a title image recorded on a memory card with camcorder recordings. You can change the colour of a title and adjust the mix level.

Creating a Title Image

• Speedlite and video light cannot be used when creating a title.



- 1. Insert a memory card into the camcorder.
- 2. Slide the POWER switch to CAMERA and the TAPE/CARD switch to TAPE.
- Open the menu and select → TITLE MIX.
 The title mix menu appears.
- 4. Select ➡ CREATE TITLE.
 - The CREATE TITLE menu appears.
- 5. Press the PHOTO button halfway.
 - • Iashes white and turns green and glows steady.
- 6. Press the PHOTO button fully.
 - • disappears and the camcorder records the title.

Selecting the Colour

- 1. Select COLOR SELECT from the CREATE TITLE menu.
- 2. Select the colour by pulling the SELECT dial up or down.
- 3. Press the SELECT dial in.

Adjusting the Mix Level

- 1. Select MIX LEVEL from the CREATE TITLE menu.
- 2. Adjust the mix level by pulling the SELECT dial up or down.
- 3. Press the SELECT dial in.

Recording the Title Image onto the Memory Card

- You have to record the title onto the memory card in order to use the title mix function.
- 1. Select RECORD from the CREATE TITLE menu.
- 2. Press the SELECT dial in.
 - The camcorder records the title onto the memory card.

Note:

• Title images may be assigned the same file number depending on the colour selection.



Selecting a Title Image

Ε

- 1. Slide the POWER switch to CAMERA and the TAPE/CARD switch to TAPE.
- 2. Open the menu and select \Rightarrow TITLE MIX.
 - The title mix menu appears.
- 3. Select → TITLE SELECT.
 Up to 6 titles images are displayed.
- 4. Select the title you wish to combine.
- 5. Press the SELECT dial in.
 - You return to the title mix menu.

Activating the Title Mix

- 1. Slide the program selector to P and select a recording program.
 - Title mix cannot be used in the 🗀 (Easy Recording) program.

2. Press the MIX/SLIDE SHOW button.

• The selected title appears combined with your recording.

Recording the Combined Image onto the Tape as Movie

1. Press the start/stop button.

Recording the Combined Image onto the Tape as Still Image

1. Press the PHOTO button halfway.

- O flashes white and turns green and glows steady.
- 2. Press the PHOTO button fully.
 - O disappears and the camcorder records the still image.

Protecting a Title Image

You can protect a title image to prevent accidental erasure.

• If you format a memory card, all images including the protected ones will be erased.

1. Open the menu and select CARD OPER.

- 2. Select → TITLE PROTECT → and press the SELECT dial in.
 The title protect index screen appears.
- 3. Select the title image you wish to protect and press the SELECT dial in.
 - The On protect mark appears, and the title image cannot be erase.
 - Press the SELECT dial again to cancel it.

ito

Erasing a Title Image

1. Open the menu and select CARD OPER.


2. Select ➡ TITLE ERASE and press the SELECT dial in.

- The title erase index screen appears.
- 3. Select the title image you wish to erase and press the SELECT dial in.
 - Check the title image on the index screen when selecting.
 - Erase this title? NO YES appears and the title image flashes.

4. Select YES and press the SELECT dial in.

- The title image is erased.
- If you wish to erase another title image, select the next title image, select YES and press the SELECT dial in.
- If you select NO, you return to the title erase index screen.

Copying Still Images from Memory Card to Tape

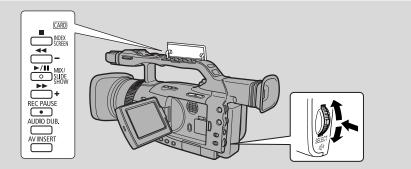

You can copy multiple still images from the memory card to a tape.

• The still images' data codes will reflect the date and time the copies are made.



Make sure a memory card that has images recorded on it and a cassette that has enough recordable space have been inserted into the camcorder.



1. Locate the point on the cassette where you wish to start copying and set it to stop.



- 2. Select the first image you wish to copy by using the CARD +/- buttons.
 - Still images on the memory card including and after that image will be copied onto the tape.
 - If you wish to copy all the still images on the memory card, select the first image.

3. Open the menu and select CARD OPER.

- 4. Select COPY [□→□].
 - CANCEL and EXECUTE settings appear.

5. Select EXECUTE.

- Select CANCEL to stop copying.
- Cassette and card information appear in the display and copying starts.
- NOW COPYING [□→□] appears in the display.
- Each image is copied for about 6 seconds on the cassette.
- Copying stops when all the images have been copied or the tape is full.


6. Press the ■ button when your desired images have been copied.

E

Formatting a Memory Card



E

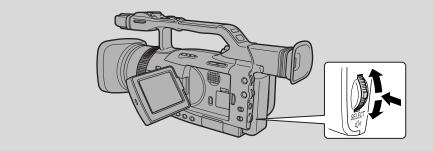

Format new memory cards if you get the message CARD ERROR, or to permanently and quickly erase all still images on a memory card, including protected images.

The SD Memory Card supplied with this camcorder has already been formatted for you.

- Be cautious when formatting recorded memory cards. All images will be permanently erased.
- If you use memory cards other than the supplied one, make sure to format them with the camcorder, not a PC or other device.



ME	NU
(🖽	18)

►CARD OPER.

► FORMAT

Make sure a memory card is inserted into the camcorder.

1. Open the menu and select CARD OPER.

- 2. Select FORMAT.
 - CANCEL and EXECUTE settings appear.

3. Select EXECUTE.

- Select CANCEL to cancel formatting.
- FORMAT THIS CARD? NO YES appears to confirm.

4. Select YES.

- · Formatting starts and NOW FORMATTING appears in the display.
- If you select NO, you return to step 3.
- 5. Close the menu.


Using a Memory Card

Connecting to a PC Using a USB Cable

Ε

You can download still images from a memory card to a PC connected to the camcorder via the USB interface. By using the supplied software, you can organize, store and print out still images. When printing still images, you can add titles and frames to them.


Use the USB cable and the Canon Digital Video Solution Disk software supplied with the camcorder.

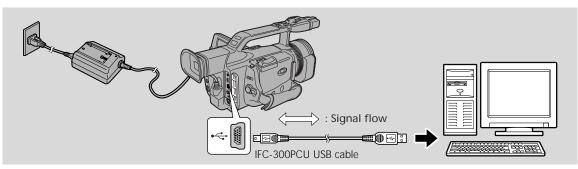

For details on how to connect the camcorder to a PC and install and operate the software, refer to the Canon Digital Video Solution Disk instruction manual.

• Refer also to your PC manual.

"PC CONNECT [USB]" appears to indicate that the camcorder is connected to the PC with an USB cable.



Cautions:

- Do not disconnect the USB cable while data is being transferred (while the camcorder's card access indicator is flashing). Doing so may damage the data on the memory.
- The connection may not work properly depending on the specifications and settings of the software and PC.
- The image files on your memory card and the image files you have stored (downloaded) to the hard disk drive of your computer are your valuable, original image files. If you wish to use image files on your computer, be sure to make copies of them first, and use the copied file, retaining the original.

Notes:

While performing USB connection:

• The buttons, excluding the POWER switch and TAPE/CARD switch on the camcorder cannot be used.

Other Information and Precautions

The camcorder formats memory cards in DCF (Design rule for Camera File system). Images recorded on a memory card with this camcorder can also be transferred to a PC with the use of the following products made for SD Memory Cards or MultiMediaCards:

PC Card Adapter: Holds a memory card and fits into a PC card slot found on most types of laptop PCs.

FD Adapter: Holds a memory card and fits into a PC's floppy disk drive.

Memory Cards confirmed to operate with this camcorder (as of June 2002)

SD Memory Card—

Panasonic: 8 MB, 16 MB, 32 MB, 64 MB

SanDisk: 8 MB, 16 MB, 32 MB, 64 MB

MultiMediaCard—

SanDisk: 8 MB, 16 MB, 32 MB, 64 MB

· However, we cannot guarantee that all of these memory cards work properly.

Memory Card Operating Precautions

- If you purchase additional memory cards, format them with the camcorder, not a PC or other device. Memory cards formatted with a PC or other device may not function properly.
- We recommend saving backups of memory card images on your PC's hard drive or other external memory device. Image data may be damaged or lost due to a defect in a memory card, or if a memory card is exposed to static electricity. Contents of a memory card cannot be compensated for should data become damaged or lost.
- Do not remove the power source or the memory card while the card access indicator flashes.
- Do not use memory cards in places subject to strong magnetic fields.
- Do not disassemble memory cards.
- Do not bend or drop memory cards, or expose them to strong vibrations or external shocks.
- Do not get memory cards wet.
- Do not remove the memory card's label or affix other labels. Affix labels to the memory card's case.
- Do not leave memory cards in places subject to high temperature or high humidity.
- Moving a memory card rapidly between hot and cold temperatures may cause condensation to form on it, leading to malfunctions. Avoid this problem by placing the memory card in a plastic bag and letting it slowly adjust to temperature changes before removing it from the bag. If condensation should occur, maintain the memory card at a constant temperature and let the moisture evaporate naturally.
- Do not touch the memory card's terminals or let dust or dirt come in contact with the terminals. Store and carry memory cards in their case to protect the terminal area.
- There is only one correct way to insert memory cards into the camcorder. Do not forcefully insert the memory cards backwards or upside down. This could damage the memory card or the camcorder.

Capacity	8 MB
Interface	SD Memory Card standard
Operating Temperatures	0°C – 40°C (32°F – 140°F)
Dimensions	$32 \times 24 \times 2.1$ mm (1 ¹ / ₄ × 1 × ¹ / ₈ in)
Wight	2 g (1/8 oz)

SDC-8M SD Memory Card Specifications

Notes on Using the Batteries

Charging and Recording Times

- These times vary the safest policy is always to have 2 or 3 times as many battery packs as you think you will need.
- You will get more recording time if you turn the camcorder off between shots, instead of leaving it in record pause mode.
- The charging time varies depending on the charging conditions.

Battery Pack	Charging Time
BP-915	1 hr. 25 min.
BP-930	2 hr. 25 min.
BP-945	3 hr. 40 min.

Battery	Max. Recording Time		Typical Reco	rding Time*
Pack	Using the Viewfinder	Using the LCD Screen	Using the Viewfinder	Using the LCD Screen
BP-915	2 hr.	1 hr. 35 min.	1 hr. 5 min.	55 min.
BP-930	4 hr. 40 min.	3 hr. 55 min.	2 hr. 35 min.	2 hr. 15 min.
BP-945	7 hr.	5 hr. 55 min.	3 hr. 55 min.	3 hr. 25 min.

* Typical Recording Time: Approximate times for recording with repeated operations such as start/stop, zooming and power on/off. The actual time may be shorter.

- You can use the battery pack between 0° to 40°C (32° and 104°F), but it works best between 10° to 30°C (50° and 86°F). Operating time will be shorter than usual at low temperatures like a ski ground. For better operating results, the battery pack can be warmed in your pocket or someplace and then used.
- If the battery pack starts to give you much less operating time than usual (at normal temperatures), it has reached the end of its life and must be replaced.

Note:

Additional Information • These figures show how long you can view playback with the LCD, after attaching a fullycharged battery pack. Playback time will be shortened at low temperatures.

Battery Pack	Playback Time (Using the LCD Screen)
BP-915	1 hr. 45 min.
BP-930	4 hr. 15 min.
BP-945	6 hr. 25 min.

How Much Power Is Left?

The indicator in the display shows you approximately how much charge the battery pack has left:

Notes:

- When the power is completely exhausted, " CHANGE THE BATTERY PACK" appears in the display for 4 seconds and the empty battery mark starts to flash. The power indicator light also flashes.
- The indicator is not constant it varies with the condition under which battery pack and camcorder are used.

When to Recharge

You can recharge a lithium ion battery pack whenever it is convenient. Unlike a conventional battery pack, it does not have to be fully discharged first. However, as the battery pack will naturally discharge itself over time, it is best to charge it the same day you plan to use it, or the day before.

Taking Care of the Battery Pack

Always attach the terminal cover.


• Do not allow any metal objects to touch the terminals, as this can cause a short circuit and damage the battery pack. Attach the terminal cover whenever the battery pack is not being used.


Keep the terminals clean.

• The camcorder adapter or battery pack will not work properly if the terminals are dirty. Attach the terminal cover whenever the battery pack is not being used.

Storing the battery pack

• Storing a charged battery pack for long periods of time (about 1 year) can shorten its lifecycle or affect performance. We recommend to discharge the battery pack in the camcorder fully and to store it in a dry place. If you do not use the battery pack for long periods of time, charge it fully and discharge it fully in the camcorder at least once a year before returning it to storage.



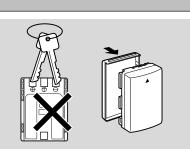


Installing the Backup Battery

Open the backup battery cover and insert the CR2025 lithium battery with the + side facing outwards. Click the cover back into place.

This backup battery allows the camcorder to retain the date and time and other settings when the main power source is removed. It has a life span of about a year.

When it needs replacing (or if it has not been installed), the rightarrow mark flashes in the display. Remove the old battery by pushing it up, releasing and lifting it out. Make sure to attach a power source to the camcorder first, so it will retain your chosen settings when you change the battery.

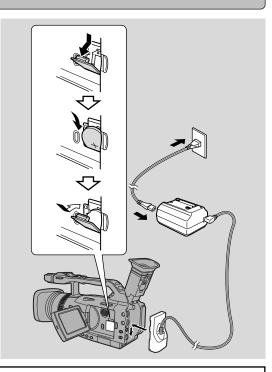

DANGER!

Treat the battery pack with care.

- Keep it away from fire (or it might explode).
- Do not expose the battery pack to temperatures greater than 140°F (60°C). Do not leave it near a heater, or inside a car in hot weather, for example.
- Do not try to disassemble or modify it.
- Do not drop or knock it.
- Do not get it wet.

WARNING!

- The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not recharge, disassemble, heat above 100°C (212°F) or incinerate.
- Replace the battery with a CR2025 made by Panasonic, Hitachi Maxell, Sony, Sanyo, or with Duracell DL2025. Use of other batteries may present a risk of fire or explosion.
- The used battery should be returned to the supplier for safe disposal.

Cautions:

Additional Information

- Do not pick up the battery using tweezers or other metal tools this will cause a short circuit.
- Wipe the battery with a clean, dry cloth to ensure proper contact.
- Keep the battery pack out of reach of children if it is swallowed, contact a physician immediately, as the battery case may break down and the battery fluids damage the stomach and intestines.
- Do not disassemble, heat or immerse the battery in water, to avoid the risk of explosion.

Maintenance

Cautions

Avoid high temperatures and high humidity.

- Do not leave the camcorder inside a car in hot weather, for example.
- Be careful of heat radiating from video lighting equipment.
- Do not take the camcorder into a humid room.

Avoid sudden changes in temperature.

• If you take the camcorder from a cold place to a warm place, condensation may form on the lens and internal parts (🛄 140).

Do not point the lens or viewfinder at strong light sources.

- Never point it at the sun, and do not leave it aimed at a bright subject.
- Be especially careful when leaving the camcorder on a tripod.

Avoid magnetic or electric fields.

• Do not use the camcorder close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. They may cause picture interference, or permanently damage the camcorder.

Do not expose the camcorder to water.

- Cover the camcorder when you are recording in rain or mist.
- There is a risk of electric shock if water gets inside the camcorder contact qualified service personnel as soon as possible.

Protect the lens.

• Sand and dust can damage the lens — be especially careful on windy days.

Handle the camcorder gently.

- Vibration or shock can cause damage.
- Do not use the viewfinder or LCD panel as a carrying handle.

Do not disassemble the camcorder.

• This is very dangerous as there is a risk of electric shock — if the camcorder does not function properly, take it to qualified service personnel.

Е

Storage

If you do not intend to use the camcorder for a longer time, store it in a dry area free of dust, and at temperatures no higher than 30°C (86°F). After storage, check each part and function of your camcorder to make sure everything is still working properly.

Note:

• These cautions also apply to accessories such as battery packs and cassettes.

Maintenance

Viewfinder

- Clean the viewfinder screen. Rotate the viewfinder upwards. Remove the viewfinder protect cover and clean it with a cotton swab etc. When finished, return it flush with the camcorder.
- The viewfinder screen scratches easily. Be careful when cleaning.


LCD

Additional Information

- Clean the LCD screen using a commercially available cleaning cloth for glasses.
- Moving the camcorder between hot and cold temperatures may cause condensation (water droplets) to form on the surface of the screen. Wipe the screen with a soft, dry cloth.
- At low temperatures the display may appear to be much darker than usual. This is not a malfunction. As the screen warms up the display will return to normal.

Camcorder body and lens

• Use a soft, dry cloth to clean the camcorder body or lens. Never use chemically treated cloth or volatile solvents such as paint thinner.

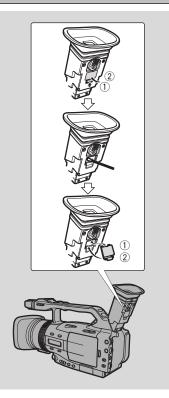

Video heads

- When mosaic-like noise appears on the playback picture, the video heads may be dirty. When the video heads are badly contaminated, the camcorder may show a blank blue screen or a warning.
- For the best picture possible, after using the camcorder for approximately 20 hours, clean the video heads using Canon's DVM-CL Digital Video Head Cleaning Cassette. If the "noise" remains, repeat the cleaning (up to maximum of 5 times).
- Do not use a wet-type cleaning cassette, as this can cause damage.

Using the Camcorder Abroad

Power sources

• You can use the compact power adapter to operate your camcorder and charge battery packs in any country/area where the electricity supply is between 100 and 240 V AC, 50/60 Hz. Contact your Canon dealer for information about plug adapters for overseas use.

TV playback

• Although you can always play back your recordings on the LCD screen, your camcorder can only be connected to TVs which use its PAL system. This TV system is used in the following countries/areas:

Algeria, Australia, Austria, Bangladesh, Belgium, Brunei, China, Denmark, Finland, Germany, Hong Kong Special Administrative Region, Iceland, India, Indonesia, Ireland, Italy, Jordan, Kenya, Kuwait, Liberia, Malaysia, Malta, Mozambique, the Netherlands, New Zealand, North Korea, Norway, Oman, Pakistan, Portugal, Qatar, Sierra Leone, Singapore, South Africa, Spain, Sri Lanka, Swaziland, Sweden, Switzerland, Tanzania, Thailand, Turkey, Uganda, United Arab Emirates, United Kingdom, Yemen, former Yugoslavia, Zambia. E

Condensation

Condensation may form on the camcorder when it is moved from a cold place to a warm place. Using the camcorder while condensation is present can damage both the tape and the camcorder.

Condensation may form:



When you take the camcorder from a cold place to a warm room



When the camcorder is left in a humid room



When a cold room is heated rapidly



When the camcorder is taken from an air-conditioned room to a warm, humid place

Protecting the camcorder from condensation

• Before you take the camcorder to a warm or humid place where condensation is likely to become a problem, unload the cassette and put the camcorder in a plastic bag. Wait until the camcorder reaches room temperature before you take it out of the bag.

What happens when condensation is detected

 "CONDENSATION HAS BEEN DETECTED" is displayed for approximately four seconds. The power indicator flashes and the imark flashes in the display. If there is a cassette in the camcorder, it stops automatically and

"REMOVE THE CASSETTE" is displayed for approximately 4 seconds and implayed fo

- The camcorder may not detect the condensation immediately the condensation warning may not start flashing for 10 to 15 minutes.
- You cannot load a cassette when condensation is detected.

What you should do

Additional nformation

- Remove the cassette, leave the cassette compartment open, and turn the camcorder off.
- Leave it in a dry place until the condensation evaporates. After the condensation warning stops flashing, wait at least another hour before trying to use the camcorder.

B

Troubleshooting

Refer to this checklist first if you have any problems with your camcorder. Possible explanations are given for each problem on the list — turn to the page numbers in parentheses for more information.

Make sure that the camcorder is properly connected if you are using it with a TV or VCR. Consult your dealer or service outlet if problems persist.

Recording/Playback		
Problem	Cause and/or what to do about it	
Nothing happens when I press the buttons.	 The camcorder is not set to the appropriate mode (□ 33, 85). The cassette is not loaded or is set for erasure prevention (□ 16-17). The cassette has reached the end. The power source is not properly connected, or the battery pack is exhausted or not properly attached (□ 14-15, 135). The function cannot be used in that recording program (□ 50). 	
The camcorder turned itself off.	 The camcorder was in record pause mode for more than about 5 minutes (\$\overline\$34, 116). The battery pack is exhausted (\$\overline\$15, 135). 	
The cassette compartment stopped mid- operation while loading/unloading a cassette.	 The battery pack's power is exhausted. Recharge or change to a new battery pack (1115). 	
The start/stop button does not work.	 The cassette is not loaded or is set for erasure prevention (1116-17). The cassette has reached the end. 	
There is no picture in the display.	• The camcorder is not set to the appropriate mode (D 33, 85).	
There is a blank blue screen in the display.	 You are attempting to play back or record copyright protected material (\$\box\$98). The video heads are badly contaminated (\$\box\$139). 	
The camcorder does not focus.	 The camcorder is on manual focus (177). The viewfinder lens needs adjusting (12). The lens is dirty (138). 	

Additional Information

Note:

• Some subjects are not suitable for autofocus. In these situations, you will often get better results using manual focus (\square 77). Focus on something which is about the same distance away, lock the focus, and then point the camcorder at your original, hard-to-focus subject.



Horizontal stripes





Many subjects at different distances



Reflective surfaces (e.g. shiny car surfaces)

Fast moving objects



Behind glass



Dark subjects



Without much contrast (e.g. a white wall)



Night scenes

Recording/Playback (Cont.)

Problem

- Some/all of the digital effects do not work.
- In The ► (play) button does not work.
- I There is a bright stripe on the screen.



- The playback picture is rough (with mosaic-like noise).
- There is no picture on the TV screen.
- There is no picture on the TV screen, even though the tape is moving.
- There is no sound coming from the speaker during playback.

Cause and/or what to do about it

- There are a number of restrictions on using the digital effects. (2260).
- The camcorder is not set to TAPE PLAY (VCR) mode (

 85).
- The cassette is not loaded (111).
- The cassette has reached the end.
- When recording in dark places a bright light in the scene may cause a vertical light bar ("smear") to appear. This is a normal feature of camcorders.
- The video heads need cleaning (🕮 139).
- AV → DV OUT (Analog-digital converter) is not set to OFF in the menu (□ 101).
- The video heads need cleaning (1139).
- The TV/VIDEO selector on the TV is not set to VIDEO (293-94).
- The speaker has been turned off with the selector dial (🖽 87).
- Headphones are being used.



142 Downloaded From CamcorderManual.com Canon Manuals

Memory Card Operations

Problem

- The memory card will not insert.
- **2** The **(**) mark flashes red in the display even though a memory card has been inserted.
- 2 Nothing happens when I press the buttons.

The PHOTO button does not work.

2 The image cannot be erased.

Cause and/or what to do about it

- It is not turned the right way (\square 113). Turn it the right way and try inserting again.
- Turn the camcorder's power off and back on again and remove and reinsert the card. If the mark continues to flash, format the memory card.
- The camcorder is not set to CARD CAMERA or CARD PLAY (VCR) mode (1116, 118).
- The memory card is not inserted (\Box 113).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.
- The memory card is full. Erase images (\Box 120) or insert a new memory card.
- The power source is not properly connected, or the battery pack is exhausted or not properly attached (114-15, 135).
- The function cannot be used in that recording program (DD 50).
- The memory card is not loaded (
 113).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.
- The memory card is full. Erase images (\square 120) or insert a new memory card.
- · You have reached the maximum file number. Set the file numbering to RESET through the menu $(\Box 115)$ and insert a new memory card.
- You are using an unformatted memory card. Format the card (\square 131).
- The image is protected ($\square 120$).
- You are using an SD Memory Card and it is set for erasure prevention. Change the position of the protect switch.


143

Miscellaneous

- Problem
 The wireless controller does not work.
 - **1** The power indicator is flashing.
 - **1** There are air bubbles inside the lens.
 - **?** The camcorder malfunctions.
 - The DV cable is connected correctly, but there's nothing in the display.
 - The camcorder becomes warm during use.

- Cause and/or what to do about it
- The remote sensor mode is set to OFF(() in the menu (□ 28).
- The remote sensor modes of the wireless controller and the camcorder itself are different (\$\overline\$28).
- The batteries are dead or not inserted.
- Check the screen displays (\square 135).
- This is unlikely, but may happen if you use the camcorder in places where the air pressure is low, in an airplane for example. The bubbles will disappear a week or so after you return the camcorder to normal atmospheric pressure.
- External interference may cause the camcorder's microprocessor to malfunction temporarily. If random letters appear in the display or if normal operation is interrupted, remove and then replace the power source.
- Remove the cable and then reconnect it or turn the power off and back on again.
- This is not a malfunction.

The XM2 System Diagram (Availability differs from area to area)

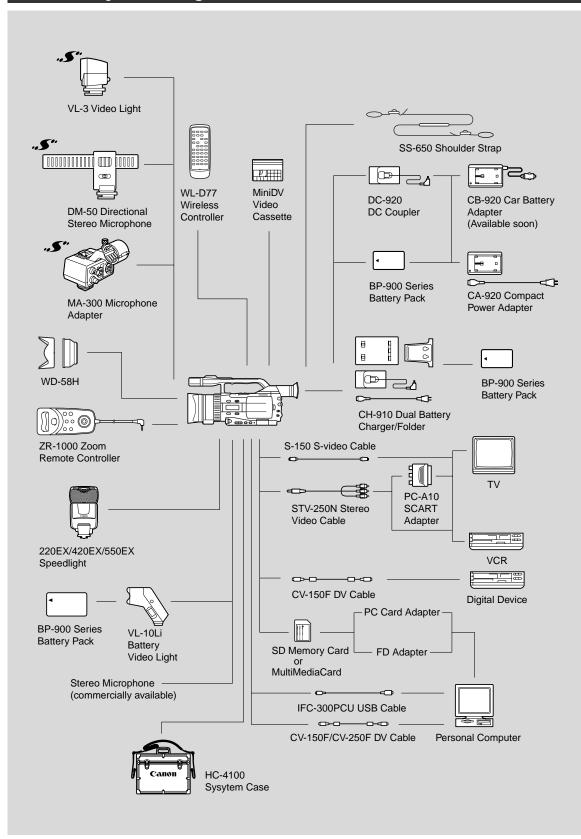

Ε

Additional Information

Optional Accessories

BP-915, **BP-930**, **BP-945 Battery Packs** Extra batteries for use with the XM2.

CB-920 Car Battery Adapter

Power your camcorder, or recharge battery packs on the move. The car battery adapter plugs into your car's cigarette lighter socket and runs off a 12–24 V DC negative ground battery.

CH-910 Dual Battery Charger/Holder

This holds two battery packs and can charge them both consecutively. It can then be connected directly to the XM2 to give twice the recording/playback time. It can also make use of the high performance battery pack BP-945, to give up to 14 hrs. recording time.

WD-58H Wide-converter

This lens decreases focal length by a factor of 0.7, giving you a wide perspective for indoor shots or panoramic views.


DM-50 Directional Stereo Microphone


This highly sensitive, super-directional microphone attaches to a camcorder's advanced accessory shoe. It is a highly sensitive microphone that can be switched between functioning as a directional microphone (monaural) or a stereo microphone that also clearly picks up sounds arriving from the front of the microphone, for full recorded sound.

VL-3 Video Light


Additional Information Attach the Video Light to a camcorder when recording in dark rooms. When on its automatic setting, the Video Light turns on/off automatically according to the brightness level of shooting conditions.













VL-10Li Battery Video Light

This compact yet powerful video light can be used for both indoor and outdoor shooting.

• Use the BP-900 Series battery packs to power the light. Approximate usage times are as follows: BP-915: 60 min., BP-930: 120 min., BP-945: 170 min.

220EX/420EX/550EX Speedlite


Attach them to the XM2 to give SLR-style flash photography.





MA-300 Microphone Adapter

The MA-300 Microphone Adapter enables you to input audio to the XM2 with XLR connector-equipped microphones, and to convert video signals for the BNC connector.



HC-4100 System Case

A solid, lockable case that provides safe and stylish protection for the camcorder during transportation and storage.





This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canon-brand accessories or products bearing the same mark.



Screen Displays

You can select to display or hide the operating state of the camcorder on the LCD screen/viewfinder. The display also appears on a TV connected to the camcorder.

TV SCREEN DATA CODE

TV Screen Displays

Press the wireless controller's TV SCREEN button or set TV SCREEN to OFF in the menu to hide the displays on the TV screen. You can also use the custom key if it is set to TV SCREEN (\square 56). (The displays appear white on the screen.)

Displays will not be superimposed to any recordings you make with the camcorder.

D



►DISP. SET UP

TV SCREEN···►ON

To turn TV SCREEN off, open the menu and select DISP.SET UP. Then select TV SCREEN, set it to OFF and close the menu.

For instructions on connecting to a TV, see p. 93.

Turning Off the LCD Screen Displays




i

You can turn off the displays to give you a clear screen for playback.




►DISP. SET UP




To turn the displays off, open the menu and select DISP. SET UP. Then select DISPLAYS, set it to OFF <PLAYBK> and close the menu.


- If you turn the displays off, the LCD screen will be completely blank (also the connected TV screen), but the camcorder will continue to show warning/caution displays.
- When operating the camcorder, the operating state display appears for 2 seconds. However, the displays do not disappear when using an index screen.

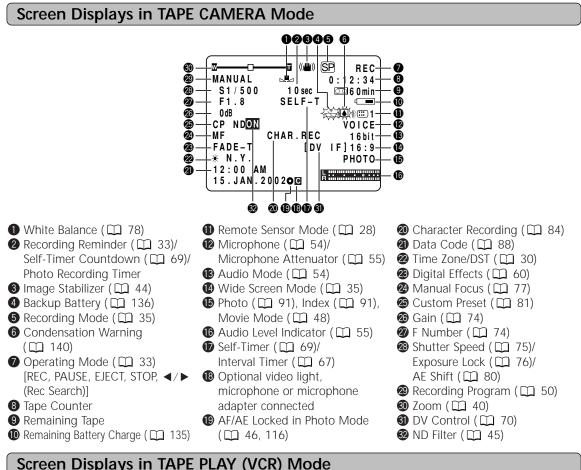



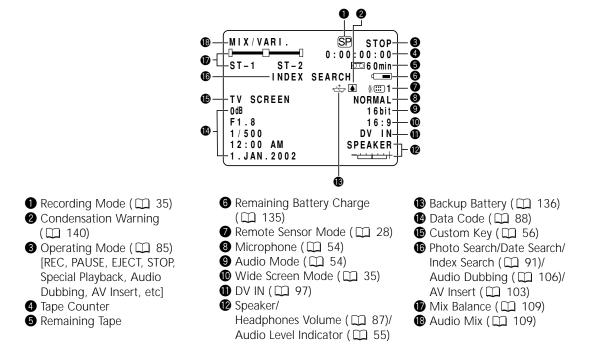

E

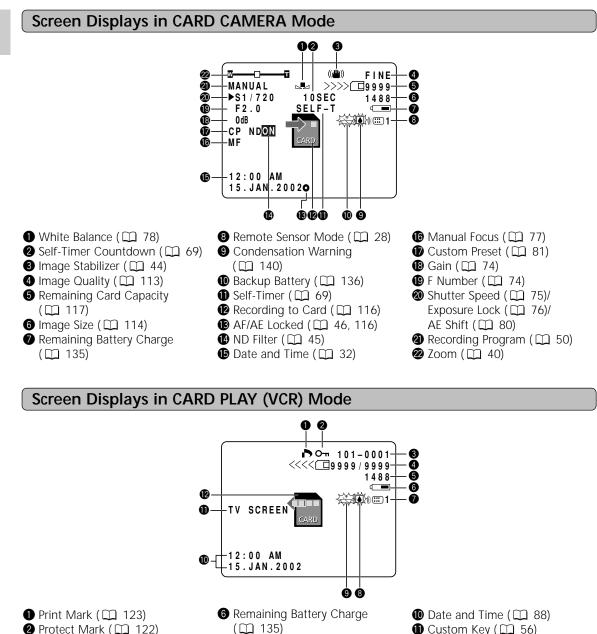

2 Protect Mark (122) 3 File Number (🛄 115)

E

- Ourrent Image/Total Images
 - (🛄 119)
- **5** Image Size (114)

Additional Information

- Remote Sensor Mode (28) 8 Condensation Warning
- (140)
- Backup Battery (136)
- 1 Custom Key (🛄 56) **1** Reading from card

150 oaded From CamcorderManual.com Canon Manuals

Caution Phrases

The camcorder displays various caution phrases for approx. 4 seconds.

SET THE TIME ZONE, DATE AND TIME	Time zone, date and time are not set. This message appears each time you turn the power on until you set the time zone, date and time (\square 30).
CHANGE THE BATTERY PACK	Battery pack is exhausted. Replace or charge the battery pack.
THE TAPE IS SET FOR ERASURE PREVENTION	Replace the tape or change the position of the protect switch on the cassette (\square 16, 17).
REMOVE THE CASSETTE	The camcorder stopped operating to protect the cassette. Remove the cassette and retry the operation from the beginning (\square 140).
CHECK THE DV INPUT	DV cable is not connected, or the connected digital device is turned off (\square 97).
CONDENSATION HAS BEEN DETECTED	Condensation has been detected in the camcorder (🖽 140).
TAPE END	Tape reached the end. Rewind or remove the tape (\square 86).
CHECK THE CASSETTE [REC MODE]	Recording is made in a mode other than the SP mode. Audio dubbing or AV insert not possible (🛄 103, 106).
CHECK THE CASSETTE [AUDIO MODE]	Recording is made in 16-bit or 12-bit 4-channel mode. Audio dubbing not possible (106).
CHECK THE CASSETTE [BLANK]	Camcorder detected a blank section on the tape. Audio dubbing or AV insert not possible (103, 106).
HEADS DIRTY, USE CLEANING CASSETTE	Displayed immediately after you start recording when the video heads are dirty. Clean the video heads (\square 139).
COPYRIGHT PROTECTED PLAYBACK IS RESTRICTED	You attempted to playback a copyright protected tape (98).

٦	COPYRIGHT PROTECTED DUBBING RESTRICTED	You attempted to copy a copyright protected tape. May also be displayed when an anomalous signal is sent during Analog Line-in recording (🛄 98, 99).		
	Memory Card Caution Phrases			
	NO CARD	Memory card not inserted into the camcorder (🛄 113).		
	THE CARD IS SET FOR ERASURE PREVENTION	The SD Memory Card is set for erasure prevention. Replace the card or change the position of the protect switch (\square 112).		
	NO TITLES	No title image is recorded on the memory card.		
	NO IMAGES	No images are recorded on the memory card (\square 116).		
	CARD ERROR	A memory card error occurred. The camcorder cannot record/play back. The error may be temporary. If CARD ERROR disappears after 4 seconds and flashes red, turn the camcorder's power off, remove the card and reinsert the card. If changes to green, you can continue recording/playback (116, 118).		
	CARD FULL	No free space remaining on the memory card. Replace with another memory card or erase images (\square 125).		
	NAMING ERROR	File or folder numbers have already reached the maximum value (🛄 115).		
	UNIDENTIFIABLE IMAGE	The image is recorded in a JPEG format or any format that is not compatible with the camcorder, or the image contains corrupted data.		
	PRINT MARK ERROR	The marked file cannot be edited (🖽 123).		
nal on	IN CARD POSITION	Appears when you press the start/stop button in CARD CAMERA mode to inform you that no image has been recorded.		
Additional Information	MEMORY CARD COVER IS OPEN	The cover of the memory card compartment is open.		
152 Downloa	aded From CamcorderManual.com Canon	Manuals		

Specifications

XM2		
Power supply (rated):	7.2 V DC	
Power consumption (AF turned on):	4.8 W (Using viewfinder), 5.7 W (Using LCD screen)	
Television system:	CCIR standard (625 lines, 50 fields) PAL colour signal	
Video recording system:	2 rotary heads, helical scanning DV system (Consumer digital VCR SD system); Digital component recording	
Audio recording system:	PCM digital sound: 16 bit (48 kHz/2 ch); 12 bit (32 kHz/4 ch);	
Image sensor:	$^{1/4''}$ 3CCD (charge coupled device), approx. 3 × 470,000 pixels (3 × 440,000 effective pixels)	
Tape format:	Videocassettes bearing the "MiniDV" mark.	
Tape speed:	SP: 18.83 mm/s (³ /4 ips), LP: 12.56 mm/s (¹ /2 ips)	
Maximum recording time (80 min. cassette):	SP: 80 min., LP: 120 min.	
Fast forward/rewind time:	Approx. 2 min. 20 sec. (with a 60 min. cassette)	
Lens:	F/1.6-2.9, 20x power zoom, f=4.2-84 mm	
Focusing system:	TTL autofocus, manual focusing possible	
Minimum focusing distance:	1 m (3 ft 3 $^{3}/_{8}$ in), 1 cm ($^{3}/_{8}$ in) on maximum wide angle	
Maximum shutter speed:	1/16,000 sec. (1/700 sec. when using a memory card)	
Minimum illumination:	0.37 lx (at ¹ / ₈ sec. slow shutter)	
Recommended illumination:	More than 100 lx	
Filter diameter:	58 mm	
Viewfinder:	0.44 in, TFT colour LCD, approx. 180,000 pixels	
LCD screen:	2.5 in, TFT colour, approx. 200,000 pixels	
Microphone:	Stereo electret condenser microphone	
Recording media:	SD Memory Card, MultiMediaCard	
Number of recording pixels:	1488 × 1128 pixels, 640 × 480 pixels	
Image format:	Design rule for Camera File system (DCF), Exif 2.2 compliant*, Digital Print Order Format (DPOF) compliant (only still images marked for printing) * This camcorder supports Exif 2.2 (also called "Exif Print").	
	Exif Print is a standard for enhancing the communication between camcorders and printers. By connecting to an Exif Print-compliant printer, the camcorder's image data at the time of shooting is used and optimized, yielding extremely high quality prints.	
File format:	JPEG (compression mode: Fine/ Standard)	
Estimated SD Memory Card SDC-8M capacities*:	1488 × 1128: Fine 6 images/Standard 10 images; 640 × 480: Fine 47 images/ Standard 93 images * The actual number varies depending on the images.	
USB terminal:	mini-B	
DV terminal input/output:	Special 4-pin connector (IEEE 1394 compliant)	

A/V terminal input/output:	ø3.5 mm minijack	
	Audio input:	0 dBV (47 kohm load)/
		47 kohms (AUDIO ATT ON)
		-10 dBV (47 kohm load)/
		47 kohms (AUDIO ATT OFF)
	Audio output: 4 dBm (47 kohm load)/3 kohms or less	
	Video:	1 Vp-p/75 ohms unbalanced
S-video terminal input/output:	1 Vp-p (Y signal), 0.3 Vp-p (C signal)	
MIC terminal input:	ø3.5 mm stereo mini-jack	
	-35 dBV (with 600 ohm mic)/5.6 kohms (MIC ATT ON)	
	-55 dBV (with 600 ohm mic)/5.6 kohms (MIC ATT OFF)	
Headphone terminal:	ø3.5 mm stereo minijack	
LANC terminal:	ø2.5 mm mini minijack	
Operating temperatures:	0 - 40°C (32 - 104°F)	
Dimensions:	118 × 136 × 306 mm (4 ⁵ /8 × 5 ³ /8 × 12 in)	
Weight:	1.12 kg (2 lb 7 ¹ / ₂ oz)	

CA-920 Compact Power Adapter		
100 - 240 V AC, 50/60 Hz		
24W		
Adapter mode: 7.2 V DC, 2.0 A		
Charger mode: 8.4 V DC, 1.5 A		
0 - 40°C (32 - 104°F)		
$75 \times 99 \times 51$ mm (3 × 3 ⁷ /8 × 2 in)		
215 g (7 ⁵ / ₈ oz) (without power cord)		

ĺ	BP-915	Battery	Pack

Battery type:	Rechargeable Lithium Ion Battery
Rated voltage:	7.2 V DC
Operating temperature:	0 - 40°C (32 - 104°F)
Battery capacity:	1500 mAh
Dimensions:	$38.2 \times 20.5 \times 70.5$ mm (1 $^{1}/_{2} \times ^{3}/_{4} \times 2 ^{3}/_{4}$ in)
Weight:	96 g (3 ³ / ₈ oz)

Weight and dimensions are approximate. Errors and omissions excepted. Subject to change without notice.

Additional Information

Index

16:9 Guides	
16:9 Wide Screen ·····	
6-Second Auto Date	
A	
Abroad, Using the Camcorder-	
Accessories	6, 146
AE Shift	
Analog Line-in	
Analog-Digital Converter	
Aperture-Priority Av	
Audio Attenuator	
Audio Dubbing	
Audio Level Indicator	
Audio Mix	
Audio Mode	
Audio Monitor	
Auto	
Autofocus	
AV Insert	
В	
Backup Battery	
Battery Charger	
Battery Pack	
Веер	
Brightness	
C	
Card Access Display	
Character Recording	
Clear Scan	
Color Bar	65
Color Gain	
Color Phase	
Condensation	140
Connections	93, 111, 134
Copying Still Images	
Custom Key	
Custom Preset	
D	
Data Code	
Date and Time	
Date Search	
Daylight Saving Time	
DC Coupler	14
Demonstration Mode	
Digital Effects	60
Digital Zoom	
DV Control	
DV Dubbing	

sy	F

Е		
	Easy Recording	
	Editing to a VCR	
	Effects	
	Erasing a Title1.	
	Erasing All Print Marks	
F	Erasing Still Images1	25
_	Faders	60
	Fast Forward	
	File Numbers1	
	File Operation1.	
	Focusing	
	Formatting1 Frame Mode	
G		40
_	Gain	
	Grip Belt	
	Grip Zoom ·····	
Н	Guide Information	32
	Handle Zoom	40
	Headphones	
1		
	Image Quality1	
	Image Resolution1	
	Image Stabilizer1	
	Index Screen	
	Interval Timer	
L		01
	LANC	
	LCD Brightness	
	LCD Mirror Mode	
	LCD Screen	
	Lens Cap	
	LP Mode ······	
Μ		00
	Maintenance1	
	Manual	
	Manual Focus	
	Memory Card······1	
	Menus ······ Microphone ·····	
	Microphone Attenuator	
	Mix Balance1	09
	Movie Mode	

Additional Information

Ν	
ND Filter	45
Output Channel	109
P Photo Search	91
Playback	
Таре	
Memory Card	
Playback Pause	
Power Adapter	
Power Save	
Print Mark	
Protecting a Title	
Protecting an Image	122
Record Pause Mode	าา
Record Review ······	
Record Search	
Recording Tape	22 14
Memory Card······	
Recording Mode	
Recording Programs	
Remote Sensor	
Rewind	
S	
S1 Video Terminal	93
Sand & Snow	
Screen Displays	
SD Memory Card	
Self-Timer ·····	
Setup Level	
Sharpness	
Shutter Sound	
Shutter Speed	75
Shutter-Priority Tv	
Slide Show	119
SP Mode	35
Speaker	
Speedlite	66
Spotlight	53
Standby Lever	
S-video/S1-video	

Т

	Tally Lamp	29
	Tape Protection	
	Telephoto	
	Time Code	
	Time Zone	
	Title Mix	
	Tripod	
	Troubleshooting	
	TV Screen	
V		100
	Video Head Cleaning	
	Video ID-1 System	
	Videocassettes	
	Viewfinder	
	Viewfinder Brightness	
W	-	
	White Balance	
	Wide Screen	
	Wind Screen	
	Wireless Controller	27
Ζ		
	Zebra Pattern	
	Zebra Pattern Level	
	Zero Set Memory	
	Zoom Speed	40
	Zooming	

Menu at a Glance

	Camcorder Setting					
Function	TAPE + CAMERA	TAPE + (VCR)	CARD + CAMERA	CARD + (VCR)	Submenu	
16:9 Effect	0				CAM. SET UP	
16:9 Guides	0				DISP. SET UP	
6-Second Auto Date		0			DISP. SET UP	
AE Shift	0		0		CAM. SET UP	
Analog-Digital Converter		0			VCR SET UP	
Audio Attenuator		0			VCR SET UP	
Audio Dubbing		0			VCR SET UP	
Audio Level Indicator	0	0			DISP. SET UP	
Audio Mode	0	0			VCR SET UP	
Веер	0	0	0	0	SYSTEM	
Card Access Display	0		0	0	DISP. SET UP	
Character Recording	0				SYSTEM	
Clear Scan	0				CAM. SET UP	
Color Gain	0		0		CUSTOM PRESET	
Color Phase	0		0		CUSTOM PRESET	
Copying from Card to Tape				0	CARD OPERATION	
Custom Key Set	0	0	0	0	CUSTOM KEY	
Custom Key On/Off	0	0		0	DISP. SET UP	
Data Code		0			DISP. SET UP	
Date/Time Select		0		0	DISP. SET UP	
Date/Time Set	0	0	0	0	SYSTEM	
Demonstration Mode	0		0		DISP. SET UP	
Digital Zoom	0				CAM. SET UP	
Displays		0		0	DISP. SET UP	
DV Control	0				SYSTEM	
Erasing a Title				0	CARD OPERATION	
Erasing All Print Marks				0	CARD OPERATION	
Erasing an Image				0	CARD OPERATION	
File Numbers			0		CARD SET UP	
Formatting				0	CARD OPERATION	
Grip Zoom Speed	0		0		CARD OFERATION CAM. SET UP	
Guide Information	0		0		DISP. SET UP	
Handle Zoom Speed	0		0		CAM. SET UP	
· · · · · · · · · · · · · · · · · · ·	0		0			
Image Quality			0		CARD SET UP CARD SET UP	
Image Resolution	0		0		CARD SET UP	
Image Stabilizer	0		0			
Interval Timer					CAM. SET UP	
LCD Brightness LCD Mirror Mode	0	0	0	0	DISP. SET UP DISP. SET UP	
		\sim	0			
Microphone	0	0			VCR SET UP	
Microphone Attenuator	0				VCR SET UP	
Movie Mode	0				CAM. SET UP	
Output Channel		0			VCR SET UP	
Power Save	0				VCR SET UP	
Protecting a Title				0	CARD OPERATION	
Recording Mode	0	0		0	VCR SET UP	
Self-Timer	0		0		CAM. SET UP	

E	Camcorder Setting					
Function	TAPE + CAMERA	TAPE + (VCR)	CARD + CAMERA	CARD + (VCR)	Submenu	
Setup Level	0		0		CUSTOM PRESET	
Sharpness	0		0		CUSTOM PRESET	
Shutter Sound			0		CARD SET UP	
Tally Lamp	0	0		0	SYSTEM	
Time Zone/DST	0	0	0	0	SYSTEM	
Title Mix	0				→TITLE MIX	
TV Screen	0		0		DISP. SET UP	
Viewfinder Brightness	0	0	0	0	DISP. SET UP	
Wireless Controller	0	0	0	0	SYSTEM	
Zebra Pattern	0		0		CAM. SET UP	
Zebra Pattern Level	0		0		CAM. SET UP	



CANON INC.

Canon Europa N.V. P.O. Box 2262, 1180 EG Amstelveen, the Netherlands

Canon UK Ltd. Ribcon Way Luton Bedfordshire LU4 9UR Telephone 0870-241-2161

Canon Australia Pty. Ltd 1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia Telephone 805-2000, Fax 887-4484

Canon New Zealand Ltd

Fred Thomas Drive, Takapuna, P.O. Box 33-336, Auckland, New Zealand Telephone 486-1570, Fax 486-6420

Canon Singapore Pte. Ltd 79 Anson Road #09-01/06, Singapore 079906 Telephone (65)-532-4400, Fax (65)-221-2939

Canon Hongkong Company Ltd 9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong

Canon Latin America, Inc. Sales & Enquiries: 703 Waterford Way Suite 400 Miami, FL 33126 USA



Printed on 100% reused paper.

0031W544 PUB.DIE-173 0000N/XXXX

© CANON INC. 2002 DY8-9020-112-000 PRINTED IN JAPAN IMPRIME AU JAPON